



OPERATOR'S INSTRUCTION MANUAL FOR SLURRY PRO VACUUM



**READ AND UNDERSTAND THE OPERATOR'S INSTRUCTION MANUAL
THOROUGHLY BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.**
Death or serious injury could occur if this machine is used improperly.



EQUIPMENT DEVELOPMENT COMPANY, INC.
100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA
Phone: 800-638-3326 or 301-663-1600 • Fax: 800-447-3326 or 301-663-1607
Website: www.edcoinc.com • E-mail: techsupport@edcoinc.com

Printed in USA
JWA ©2019

**SAFETY INFORMATION****SAFETY MESSAGES**

• Safety Instructions are preceded by a graphic alert symbol of DANGER, WARNING, or CAUTION.

DANGER

Indicates an imminent hazard which, if not avoided, will result in death or serious injury.

WARNING

Indicates an imminent hazard which, if not avoided, can result in death or serious injury.

CAUTION

Indicates hazards which, if not avoided, could result in serious injury and or damage to the equipment.

GASOLINE / PROPANE POWERED EQUIPMENT**WARNING**

• Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

WARNING

• Tilting a gasoline powered machine fitted with an EPA approved vented charcoal filter gas cap, beyond 20° can cause fuel leakage. If a leak occurs, do not start or run the engine until the leak is fixed. Eliminate all other ignition sources in the immediate area (no smoking, flares, sparks or flames). Use approved gasoline absorbing material to contain the fuel leakage. Then use clean, non-sparking tools to collect absorbed materials then dispose of these contaminants properly.



• Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas, and with a cool engine.

• Small gasoline engines produce high concentrations of carbon monoxide (CO) example: a 5 HP 4 cycle engine operation in an enclosed 100,000 cu. ft. area with only one change of air per hour is capable of providing deadly concentrations of CO in less than fifteen minutes. Five changes of air in the same area will produce noxious fumes in less than 30 minutes. Gasoline powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, head-ache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur - get into fresh air and seek medical attention immediately.

• Never refuel a hot engine or an engine while it is running.
• Engines are shipped from factory without fuel/oil.



• Propane is extremely flammable and is heavier than air and tends to settle in low areas where a spark or flame could ignite gas. DO NOT start or operate this propane engine in a poorly ventilated area where leaking propane gas could accumulate and endanger safety of persons in area. If headache develops, shut off machine. Have it checked for carbon monoxide emissions by a qualified technician before using it again. To ensure personal safety, installation and repair of propane fuel supply systems must be performed only by qualified technicians. Carbon monoxide emissions from this machine are greatly increased due to a dirty combustion air cleaner.

ELECTRICAL POWERED EQUIPMENT

Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

- Check all electrical cables - be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of this equipment.
- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to all local codes and ordinances.
- NOTE: In the event of a malfunction or breakdown, grounding provides a path of least resistance for the electric current to dissipate. The motor is equipped with a grounded plug and must be connected to an outlet that is properly installed and properly grounded. DO NOT modify the plug provided on the motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.

ELECTRICAL POWERED EQUIPMENT CONTINUED

- Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.
- Unplug power cord at the machine when not in use and before servicing.
- Switch motor OFF before disconnecting power.
- Never use frayed, damaged, taped or under rated extension cords. Electrical shock could result in death or serious injury to the operator and damage to the equipment.
- Assure you are using the proper extension cord length.

GENERAL INSTRUCTIONS

- Equipment should only be operated by trained personnel in good physical condition and mental health (not fatigued). The operator and maintenance personnel must be physically able to handle the bulk weight and power of this equipment.
- This is a one person tool. Maintain a safe operating distance to other personnel. It is the operators' responsibility to keep other people (workers, pedestrians, bystanders, etc.) away during operation. Block off the work area in all directions with roping, safety netting, etc. Failure to do so may result in others being injured by flying debris or exposing them to harmful dust and noise.
- This equipment is intended for commercial use only.
- For the operator's safety and the safety of others, always keep all guards in place during operation.
- Never let equipment run unattended.



- Personal Protection Equipment and proper safety attire must be worn when operating this machinery. The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require. Hearing protection **MUST** be used when operational noise levels of this equipment may exceed 85db. Eye protection **MUST** be worn at all times.



Keep body parts, loose clothing and accessories away from moving parts. Failure to do so could result in dismemberment or death.

- Do not modify the machine.
- Stop motor/engine when adjusting or servicing this equipment. Maintain a safe operating distance from flammable materials. Sparks from the cutting-action of this machine can ignite flammable materials or vapors.

**DUST WARNING**

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Materials being removed can be toxic or hazardous. A breathing respirator is required to help protect the operator.

Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, concrete and other masonry products. Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.
- See more on the importance of dust prevention and silica warnings at: osha.gov/silica
- More concrete and silica dust suppression training and educational materials available at edcoinc.com/silica-standards or scan the QR code on page 5.
- Written exposure plans are provided at <http://www.edcoinc.com/written-exposure-control-plans/>

OPERATOR'S INSTRUCTION MANUAL FOR SLURRY PRO VACUUM

TABLE OF CONTENTS

<u>Section</u>	<u>Page Number</u>
Safety Information	2
Safety - Specifically for the Slurry Pro Vacuum	4
Features	4
Specifications	5
Dimensions	5
Startup and Shutdown	6
Emptying	7
Pump Cleaning Instructions	8
Filter Inspection	9
Motor Cover Disassembly for Brush Inspection	10
Ametek Motor Brush Inspection	11
Electro Motor Brush Inspection	12
Troubleshooting	13
Limited Equipment Warranty of Sale	15
STOP - Before Using This Product	16

SAFETY - SPECIFICALLY FOR THE SLURRY PRO VACUUM

CAUTION: Standard machines are not to be used for the removal of liquids or any volatile, viscous, flammable or explosive media.

CAUTION: Slurry Vac machines are for the pick-up of wet material and solids only. Slurry Vac machines should not be used for the pickup of fine dust.

CAUTION: Standard machines are designed for intermittent use, i.e. not more than 2 hours continuously.

CAUTION: A dust mask should be worn when working with used filters.

CAUTION: Disconnect the machine from power before and during inspection or maintenance.

When in use, this machine should always be connected to a ground fault interrupter (GFCI/GFI), either the circuit breaker or receptacle type.

Use only EDCO replacement parts, accessories and hoses specifically designed for your machine. Clean unit daily.

FEATURES



 
Technical Key:

1. 2 Motor, 200cfm, 110 volt
2. Industry leading return pump designed specifically for abrasive solids (40gpm)
3. Durable “bulletproof” compression cast composite modular housing
4. 32 gallon liquid capacity
5. 44 sq.ft. of hydrophobic filtration
6. Positive closure float for liquid fill shut off
7. 32” floor sweep
8. Bottom gravity feed discharge with blast gate
9. Separate slurry collection chamber decreases cleaning and maintenance time

SPECIFICATIONS

Motor Rating:	(2) 1200 Watt Motor / 3.2 Hp
Voltage:	110 Volts
Amps:	17 Amps
Duty Cycle:	Intermittent
Vacuum Rating:	97 H ₂ O"
Volume Rating:	200 CFM
Primary Filter Area:	44 sq ft
Primary Filter Efficiency:	99% @ 0.5 microns
Inlet Connection:	2" w/ Aluminum Cast Deflector
Housing Material:	Compression Cast "bulletproof" Composite Modular Housing
Casters:	5" Front Swivel Casters with Brakes / 12" Rear Pneumatic Casters
Collection Capacity:	32 Gallons (liquid)
Power Cable:	30 ft.

DIMENSIONS

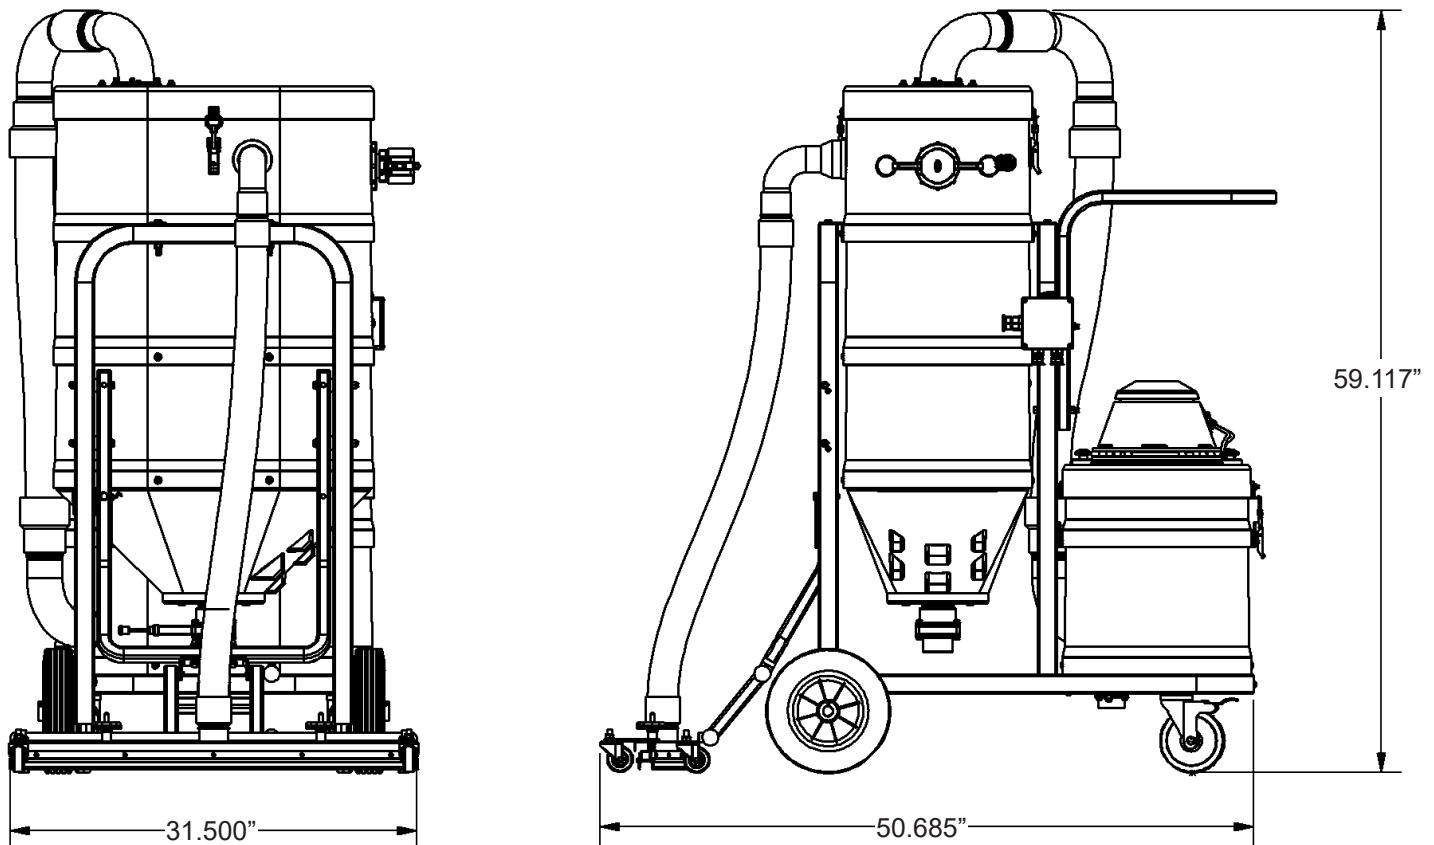

STARTUP AND SHUTDOWN



Check that the slide valve is closed.



 
Connect to proper power source as indicated on the serial tag.



Start machine using the ON / OFF switch on the motor domes.



Turn machine off using the ON / OFF switch on the motor domes.

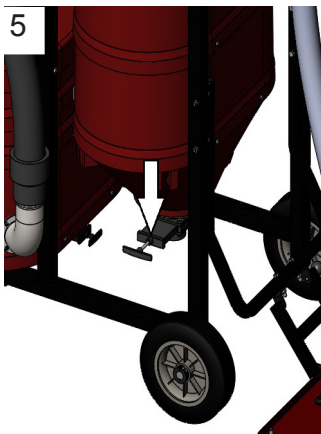


Machine should be emptied after every use.

It is critical that you empty/clean the vacuum after each use. If material is allowed to “set up” inside it will render the vacuum inoperable. Please refer to Section IV for instructions.

Note: Electrical installation should be performed by a qualified electrician in accordance with governing national and local electrical codes.

 
EMPTYING - Collection vessel and pump must be cleaned after every single use. The pump may be used while the vacuum is running, but if the pump needs to be cleaned you must turn the vacuum off.

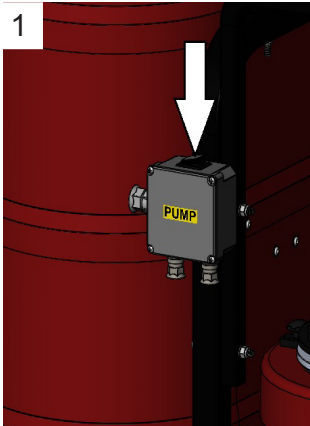

Use the internal pump to evacuate the water. You must hold the switch down to operate the pump.



 If pump becomes clogged, refer to the pump cleaning instruction on the next page.

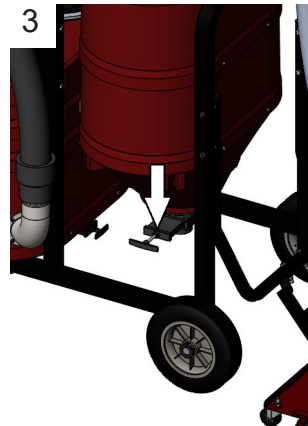


Once most of the water has been pumped out of the machine you can open the slidegate at the bottom of the collection unit. The solids can be flushed or scooped out. Close slidegate when finished.




Check for carryover liquid by opening the slidegate under the filter housing. Close slidegate when finished.

Note: The emptying/cleaning instructions must be performed after each use. Do not allow the material to set up inside.

 
PUMP CLEANING INSTRUCTIONS

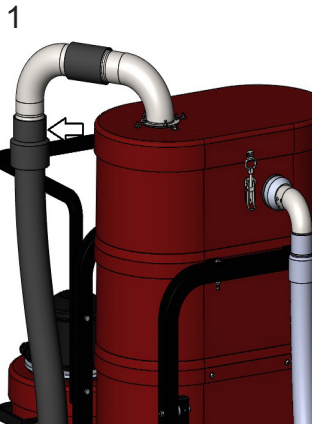

Loosen hose cuff.

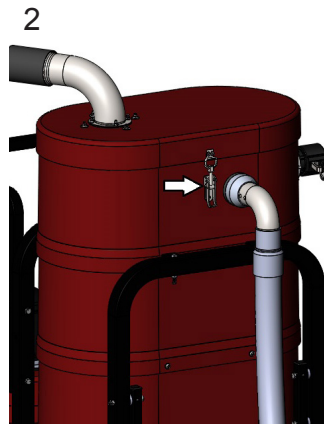 

Disconnect clamps on either side.

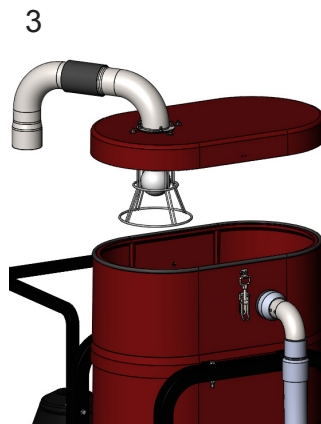 

Remove motordeck.



Remove the pump from the tank without disconnecting the hose.



Place the pump in a 5 gallon bucket and run the clean water through the pump.

Note: Pump should be cleaned daily to ensure material doesn't build up and harden.

 
FILTER INSPECTION




1 Disconnect the pump from power if included.



2 Disconnect clamps on either side.

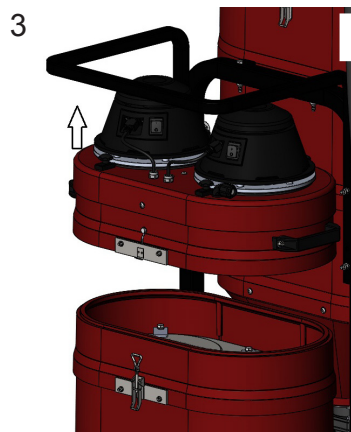

 3 Remove motordeck and inspect filter. The filter is used to stop moisture from entering the motor and not for filtering dust.

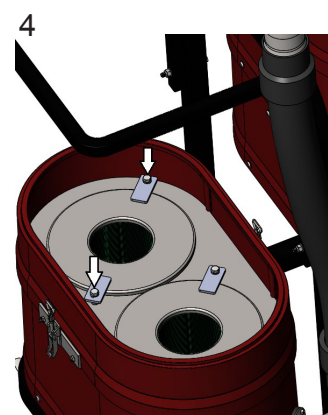

4 Loosen filter hold down bracket bolts enough to remove the filter.



5 Remove filter and inspect. Replace filter as needed to maintain optimal performance.



6 Open the slidegate under the filters to empty any liquid from the filter chamber. Close the slide gate before using the unit.

Note: Inspection of the filter will vary with usage of the machine.

 
MOTOR COVER DISASSEMBLY FOR BRUSH INSPECTION




Turn the machine off, then disconnect the power source.




Disconnect motor terminal.

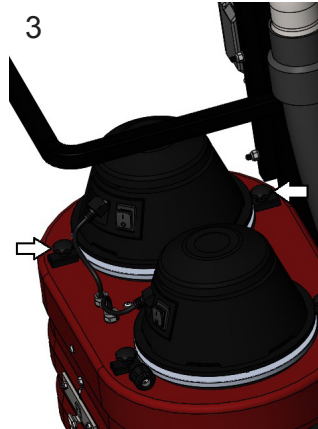

 
Loosen the motor retaining knobs enough to remove motor under negative pressure.

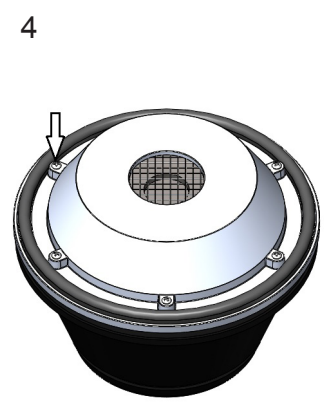

 Remove the 6 screws attached to each motor assembly.

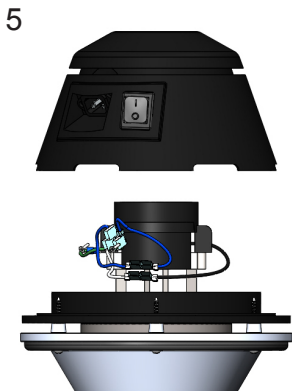

 Remove the plastic motor cover to access the top of the motor.

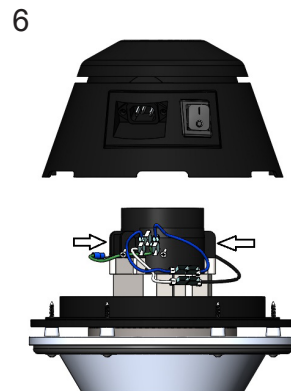


Remove the 2 metal motor-cap-retaining clips locating on each motor (**for Ametek motors only**)

**SEE PAGE 11 FOR
AMETEK
MOTOR BRUSH
INSPECTION
INSTRUCTIONS**


**SEE PAGE 12 FOR
ELECTRO
MOTOR BRUSH
INSPECTION
INSTRUCTIONS**

AMETEK MOTOR BRUSH INSPECTION

 
NOTE: A motor brush should be replaced if its length is less than 0.25 inches.

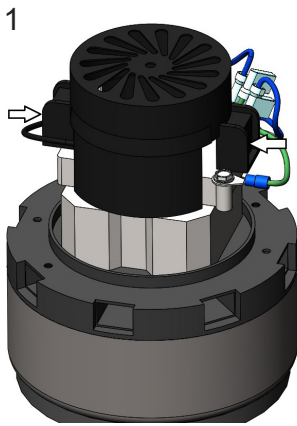

 
1
Remove motor fan cover by pressing down on clips located on each side.

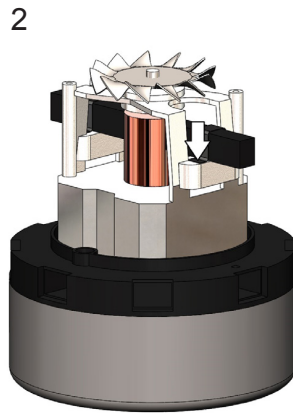

 2
Remove the two screws securing the brush. Repeat the process for the other side.

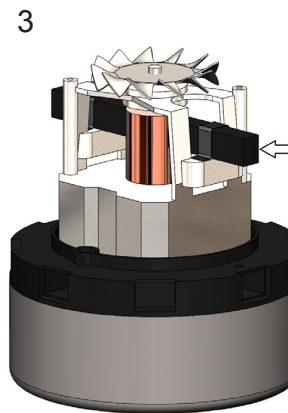

3
Pull brush out from wire clip.

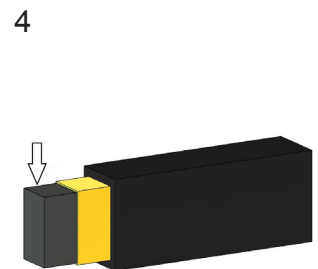 


4
Remove brush from wire clip by sliding off groove. If brush is worn down to a length of 0.25" or less, replace brush.


To replace or reinstall brush, repeat process in reverse.

ELECTRO MOTOR BRUSH INSPECTION

 
NOTE: A motor brush should be replaced if its length is less than 0.25 inches.

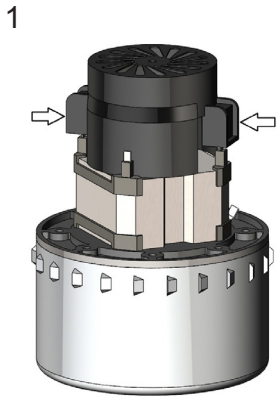

 
Carefully dislodge the plastic motor cap via the built-in hooks on both sides of motor brush. **(TIP: Dislodge one side of a cap first followed by the other.)**

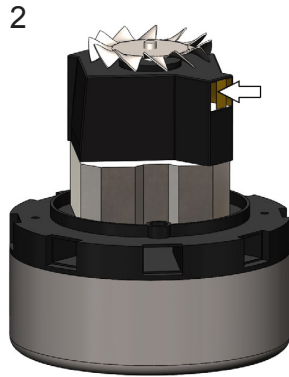

 
With a flathead screwdriver, flip brush tab upward. Use pliers to then pull the brush out by the tab.

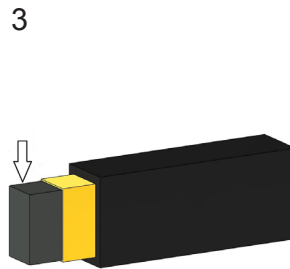

 If the brush is worn down to a length of 0.25" or less, replace the brush. To replace or reinstall brush, hold down internal spring using the tool supplied with brush.

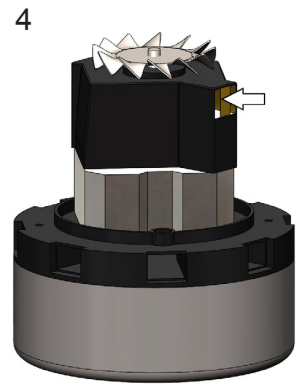

 While holding spring down, push the brush back in. Remove the brush tool once the brush is in.

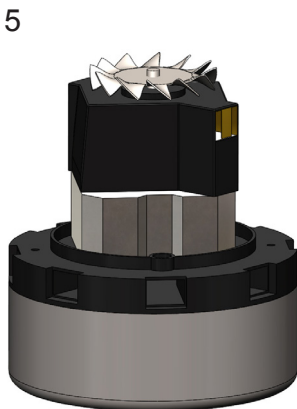

Push the motor brush in until it's flush.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Insufficient Vacuum	- Hose blocked	- Unplug hose.
	- Filter clogged or improperly seated	- Follow filter inspection procedure (Section IV)
	- Vacuum leak	- Check that motor deck is properly seated and secured. Also, check all hoses.
Air Leaks	- Worn or poorly seated seals, Retainers improperly installed	- Block the inlet with a flat and rigid material to place the unit under vacuum pressure then remove retainers and turn the unit off. Inspect the seals for completeness, then reseal and secure components again under vacuum pressure.
Unable to Control Pump Manually	- Incorrect pump setting	- Remove the motor deck (Section IV), then check that the internal sump pump switch (near handle) is set to the manual "HAND" position, i.e. the switch is pushed up.
Unusual or High Pitched Noises	- Motor bearings, turbine bearing	- Follow relevant motor / turbine inspection procedure, Section III. Check motor bearings for noise by hand.
	- Worn or poorly seated seals, Retainers improperly installed	- Block the inlet with a flat and rigid material to place the unit under vacuum pressure then remove retainers and turn the unit off. Inspect the seals for damage, then reseal and secure components again under vacuum pressure.

THIS PAGE LEFT BLANK INTENTIONALLY

LIMITED EQUIPMENT WARRANTY OF SALE

Equipment Development Company, Inc. herein referred to as EDCO (Seller) warrants that each new unit manufactured by EDCO to be free from defects in material and workmanship in normal use and service for a period of (1) one year (except for the cutter drum assembly on all model concrete/asphalt planers AND the chisel head assembly on all model ALR's & ALR-BS in which case the warranty period shall be 90 days) from date of shipment to the original retail or equipment rental center owner.

Accessories or equipment furnished and installed on the product by EDCO but manufactured by others, including, but not limited to engines, motors, electrical components, transmissions etc., shall carry the accessory manufacturers own warranty.

EDCO will, at its option, repair or replace, at the EDCO factory or at a point designated by EDCO, any part which shall appear to the satisfaction of EDCO inspection to have been defective in material or workmanship.

EDCO reserves the right to modify, alter and improve any part or parts without incurring any obligation to replace any part or parts previously sold without such modified, altered or improved part or parts.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory, or otherwise created under applicable law including, but not limited to the warranty of merchantability and the warranty of fitness for a particular purpose in no event shall seller or the manufacturer of the product be liable for special, incidental, or consequential damages, including loss of profits, whether or not caused by or resulting from the negligence of seller and/or the manufacturer of the product unless specifically provided herein. In addition, this warranty shall not apply to any products or portions thereof of which have been subjected to abuse, misuse, improper installation, maintenance, or operation, electrical failure or abnormal conditions and to products which have been tampered with, altered, modified, repaired, reworked by anyone not approved by seller or used in any manner inconsistent with the provisions of the above or any instructions or specifications provided with or for the product.

TERMS AND CONDITIONS

(NOT APPLICABLE TO SALES THROUGH AUTHORIZED DISTRIBUTION)

FORCE MAJEURE

Seller's obligation hereunder are subject to, and Seller shall not be held responsible for, any delay or failure to make delivery of all or any part of the Product due to labor difficulties, fires, casualties, accidents, acts of the elements, acts of God, transportation difficulties, delays by a common carrier, inability to obtain Product, materials or components or qualified labor sufficient to timely perform part of or all of the obligations contained in these terms and conditions, governmental regulations or actions, strikes, damage to or destruction in whole or part of manufacturing plant, riots, terrorist attacks or incidents, civil commotions, warlike conditions, flood, tidal waves, typhoon, hurricane, earthquake, lightning, explosion or any other causes, contingencies or circumstances within or without the United States not subject to the Seller's control which prevent or hinder the manufacture or delivery of the Products or make the fulfillment of these terms and conditions impracticable. In the event of the occurrence of any of the foregoing, at the option of Seller, Seller shall be excused from the performance under these Terms and Conditions, or the performance of the Seller shall be correspondingly extended.

This document sets forth the terms and conditions pursuant to which the purchaser ("Purchaser") will purchase and Equipment Development Co. Inc. ("Seller") will sell the products, accessories, attachments (collectively the Products) ordered by the Purchaser. These terms and conditions shall govern and apply to the sale of Seller's Products to Purchaser, regardless of any terms and conditions appearing on any purchase order or other forms submitted by Purchaser to Seller, or the inconsistency of any terms therein and herein.

1. PRICE

All prices set forth on any purchase order or other document are F.O.B. Sellers facility or distribution point, as may be determined by Seller (F.O.B. Point). All prices are exclusive of any and all taxes, including, but not limited to, excise, sales, use, property or transportation taxes related to the sale or use of the Products, now or hereafter imposed, together with all penalties and expenses. Purchaser shall be responsible for collecting and/or paying any and all such taxes, whether or not they are stated in any invoice for the Products. Unless otherwise specified herein, all prices are exclusive of inland transportation, freight, insurance and other costs and expenses relating to the shipment of the Products from the F.O.B. point to Purchaser's facility. Any prepayment by Seller of freight insurance and other costs shall be for the account of Purchaser and shall be repaid to Seller.

2. PAYMENT TERMS

Payment terms are as follows. 2% 10 days (to approved and qualified accounts). Net 30 days. This is a cash discount for invoices paid within 10 days after the invoice date, regardless of date of receipt of shipment. This is not a trade discount and will not be granted to accounts that do not adhere to stated terms.

*All past due accounts are subject to a late payment fee of 1.5% per month or a maximum allowed by law if different, along with the expenses incidental to collection including reasonable attorney's fees and costs.

*Seller reserves the right to hold shipments against past due accounts.

*Seller reserves the right to alter payment terms.

3. FREIGHT TERMS

All shipments will be made F.O.B. shipping point as designated in these Terms and Conditions, and title shall pass at the F.O.B. point. Delivery to the initial common carrier shall constitute delivery to the Purchaser. Any claims for loss or damage during shipment are to be filed with carrier by the Purchaser. Seller will not assume responsibility for the performance of the carrier.

Back orders will be shipped in the most practical fashion with charges consistent with our freight policy established with the original order. UPS, FED EX, MAIL or shipments by other couriers are subject to the same terms and conditions as outlined in paragraph #3 "Freight Terms".

4. DELIVERY, DAMAGES, SHORTAGES

Seller shall use reasonable efforts to attempt to cause the Products to be delivered as provided for in these Terms & Conditions. Delivery to the initial common carrier shall constitute the delivery to the Purchaser. Seller's responsibility, in so far as transportation risks are concerned ceases upon the delivery of the Products in good condition to such carrier at the F.O.B. point and all the Products shall be shipped at the Purchaser's risk. Seller shall not be responsible or liable for any loss of income and/or profits, or incidental, special, consequential damages resulting from Seller's delayed performance in shipment and delivery.

5. RETURN OF DEFECTIVE PRODUCTS

Defective or failed material shall be held at the Purchaser's premises until authorization has been granted by Seller to return or dispose of Products. Products that are to be returned for final inspection must be returned Freight Prepaid in the most economical way. Credit will be issued for material found to be defective upon Seller's inspection based on prices at time of purchase.

6. PRODUCTS ORDERED IN ERROR

Products may be returned, provided that claim is made and Seller is notified within 7 days of receipt of Products, and the Products are in original buyer's possession not more than 30 days prior to return, subject to Seller's approval. If Products are accepted for return, they must be Freight Prepaid and buyer will be charged a minimum of 15% restocking charge, plus a charge back for outbound freight charges if the original order was shipped prepaid. Returns are not accepted for any Products that are specifically manufactured to meet the buyer's requirement of either specifications or quantity.

AGREEMENTS

These Terms and Conditions constitute the entire agreement between Seller and Purchaser as it relates to terms and conditions of sale, and supersedes any and all prior oral or written agreements, correspondence, quotations or understandings heretofore in force between the parties relating to the subject matter hereof. There are no agreements between Seller and Purchaser with respect to the Product herein except those specifically set forth in and made part of these terms and conditions. Any additional terms, conditions and/or prices are rejected by Seller.

These terms and conditions may be modified, cancelled or rescinded only by a written agreement of both parties executed by their duly authorized agents.

USE ONLY GENUINE EDCO PARTS & ACCESSORIES

For your own safety, the safety of others and the life of your machine.

SUBMIT ALL WARRANTY CLAIMS AT:

edcoinc.com/customer-support/warranty-claim-form/



BEFORE USING THIS PRODUCT

Have You Used EDCO's Online Customer Support??



Scan This QRC or Visit
www.edcoinc.com/customer-support



READ: **EDCO Owner's Manuals and Parts Listings** share basic information and parts of each product. Download and print them whenever needed.



WATCH: **EDCO Product Training Videos** show how to use products, install tooling, and perform basic maintenance.



Example Only

FIND: Somewhere on this product is an **EDCO QRC Training Decal**. Scanning this code provides owner's information, videos, and other training content anywhere/anytime on your mobile device.



CONCRETE KNOWLEDGE

JOIN: **EDCOed.com** is a free, 24-hour training space. Each certification track focuses on a specific EDCO product group. The information in these tracks help businesses be successful with those products.

EDCO is always updating online training / information so you always have the most recent content.

Also see Operator's Safety & Limited Warranty Manual

Equipment Development Co., Inc. • 800.638.3326 • techsupport@edcoinc.com