




FNL Spacer Temporary Drum Setup

CPM-8, 6-Shaft General Purpose Carbide Cutter Drum Assembly Procedure

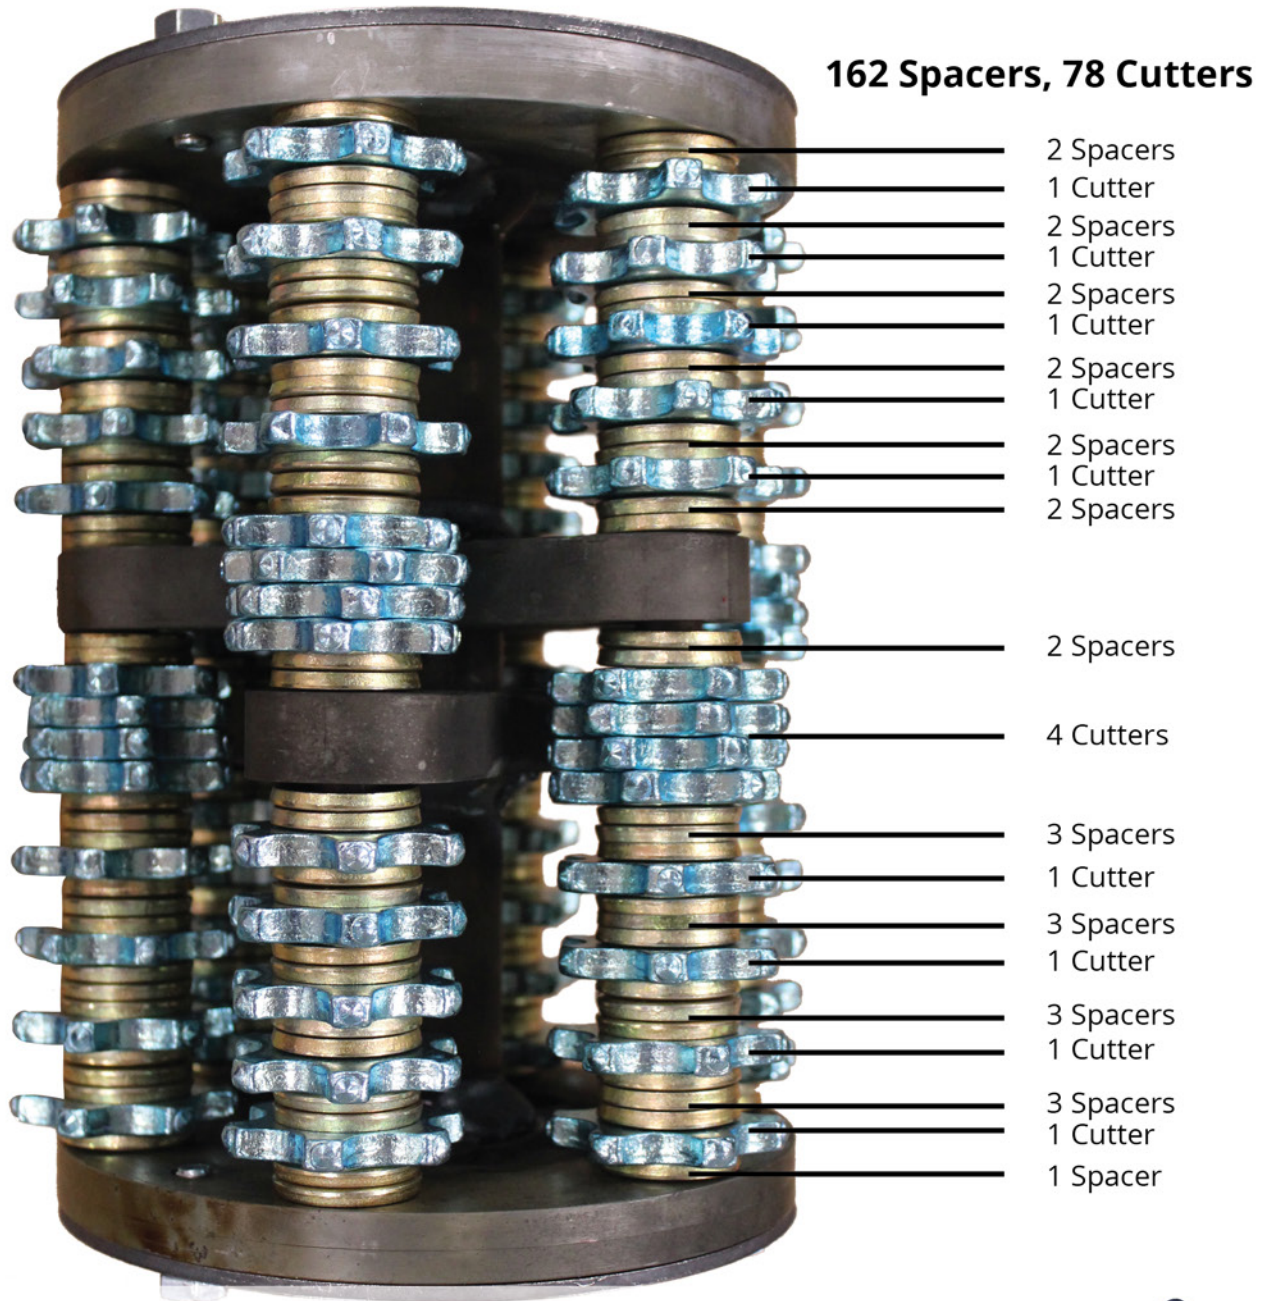

Instructions: Repeat this sequence for every other shaft, then rotate the sequence 180° and repeat for the remaining shafts.

- Rotationally Balanced
- Loose Fit
- One Spacer minimum by each flange



FNL Spacers
CG227
Part #:12230



6-Point Blue Carbide Cutter
CP206-T
Part #:20156