REVISED STARTING SERIAL # 120110115

## PARTS LIST MANUAL ELECTRIC POWER TROWELS



SKU#	MODEL#	SIZE	RPM	MOTOR OPTION		
C86400	T244RS-1.5	24"	65**	LEESON 1.5HP 1-PH 60HZ 115V 1725RPM		
C85100	T304RS-1.5	30"	65**	LEESON I.SHP I-PH 00HZ IISV I/ZSRPWI		
81300	T364-3	36"	115*	BALDOR 3HP 1-PH 60HZ 230V 3450RPM		
81200	T464-5	46"	105*	BALDOR 5HP 1-PH 60Hz 230V 3450RPM		

\*STANDARD SPEED CONCRETE POWER TROWELS
\*\*REDUCED SPEED EPOXY MORTAR POWER TROWELS





## READ AND UNDERSTAND THE OPERATORS INSTRUCTION MANUAL THOROUGHLY BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.

Death or serious injury could occur if this machine is used improperly.



#### **SAFETY MESSAGES**

· Safety Instructions are proceeded by a graphic alert symbol of DANGER, WARNING, or CAUTION.



Indicates an imminent hazard which, if not avoided, will result in death or serious injury.



Indicates an imminent hazard which, if not avoided, can result in death or serious injury.



Indicates hazards which, if not avoided, could result in serious injury and or damage to the equipment.

#### GASOLINE/PROPANE POWERED EQUIPMENT



 Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproduc-



- Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas, and with a cool engine.
- Small gasoline engines produce high concentrations of carbon monoxide (CO) example: a 5 HP 4 cycle engine operation in an enclosed 100,000 cu. ft. area with only one change of air per hour is capable of providing deadly concentrations of CO in less than fifteen minutes. Five changes of air in the same area will produce noxious fumes in less than 30 minutes. Gasoline or propane powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, headache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur - get into fresh air and seek medical attention immediately.

### **ELECTRICAL POWERED EQUIPMENT**



Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

- · Check all electrical cables be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of
- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to all local codes and ordinances.
- **NOTE:** In the event of a malfunction or breakdown, grounding provides a path of least resistance for the electric current to dissipate. The motor is equipped with a grounded plug and must be connected to an outlet that is properly installed and properly grounded. DO NOT modify the plug provided on the motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.
- Switch motor OFF **before** disconnecting power.

- Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.
- Unplug power cord at the machine when not in use and before servicing.

## **GENERAL INSTRUCTIONS**

- Equipment should only be operated by trained personnel in good physical condition and mental health (not fatigued). The operator and maintenance personnel must be physically able to handle the bulk weight and power of this equipment.
- This is a one person tool. Maintain a safe operating distance to other personnel. It is the operators' responsibility to keep other people (workers, pedestrians, bystanders, etc.) away during operation. Block off the work area in all directions with roping, safety netting, etc. for a safe distance. Failure to do so may result in others being injured by flying debris or exposing them to harmful dust and noise.
- · This equipment is intended for commercial use only.
- For the operator's safety and the safety of others, always keep all guards in place during operation.
- · Never let equipment run unattended.















· Personal Protection Equipment and proper safety attire must be worn when operating this machinery. The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require. Hearing protection MUST be used (operational noise levels of this equipment may exceed 90db). Eve protection MUST be worn at all times.



Keep body parts and loose clothing away from moving parts. Failure to do so could result in dismemberment or death.

- Do not modify the machine.
- Stop motor/engine when adjusting or servicing this equipment.



Maintain a safe operating distance from flammable materials. Sparks from the cutting-action of this machine can ignite flammable materials or vapors.

#### **DUST WARNING**



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:

- · Lead from lead-based paints, and
- Crystalline silica from bricks and concrete and other masonry products.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.


100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA

Printed in USA ©2012 JWA

Page 2

Fax (301) 663-1607 • 1-800-447-3326 Website: www.edcoinc.com

Phone (301) 663-1600 • 1-800-638-3326





## PARTS LIST MANUAL ELECTRIC POWER TROWELS

## **TABLE OF CONTENTS**

<u>Section</u>	Page Number
Safety Messages and General Instructions	2
How To Order Replacement Parts	
Illustration 1: Handle Bar, Pitch Lever & Control Knob	Grouping 4, 5
Illustration 2: Adjustable Handle Belly Bar Grouping	6
Illustration 3: On/Off Switch Grouping	
Illustration 4: Frame, Transmission & Spider Grouping	
Illustration 5: Spider Assembly	
Illustration 6: Bolt-On Blades & Adapter for 24" Trowel	
Illustration 7: Bolt-On Blades & Adapter for 30" Trowel	12
Illustration 8: Bolt-On Blades & Adapter for 36" Trowel	13
Illustration 9: Bolt-On Blades & Adapter for 46" Trowel	
Illustration 10: Optional Quick Change Blades & Adap	ters 15
Illustration 11: Lift Handle Grouping	
Illustration 12: Optional "Tote-A-Trowel"	
Illustration 13: Motor Grouping for Model T244RS-1.5	
Illustration 14: Motor Grouping for Model T364-3	20, 21
Illustration 15: Motor Grouping for Model T464-5	
Wiring Diagram for Starter & Switch	
Wiring Diagram for Leeson 1.5 HP Motor	
Wiring Diagram for Baldor 3 HP Motor	
Wiring Diagram for Baldor 5 HP Motor	27
Limited Equipment Warranty of Sale - Terms & Condit	
·	

#### HOW TO ORDER REPLACEMENT PARTS


- ☐ To insure product safety and reliability, always use genuine EDCO replacement parts when making repairs to the equipment.
- □ When calling for parts, specify the MODEL and SERIAL number of the machine, which can be found on the NAME PLATE. Keep that information in the space provided. In addition to this information, give part number, description, and quantity as listed on the parts list to your parts representative.
- Please note: Due to improvements and changes in the equipment, the illustrations shown may be different than the actual machine.

### FILL IN INFORMATION BELOW

Date of Purchase
Model #
Serial #



## ILLUSTRATION 1: HANDLE BAR, PITCH LEVER & CONTROL KNOB GROUPING

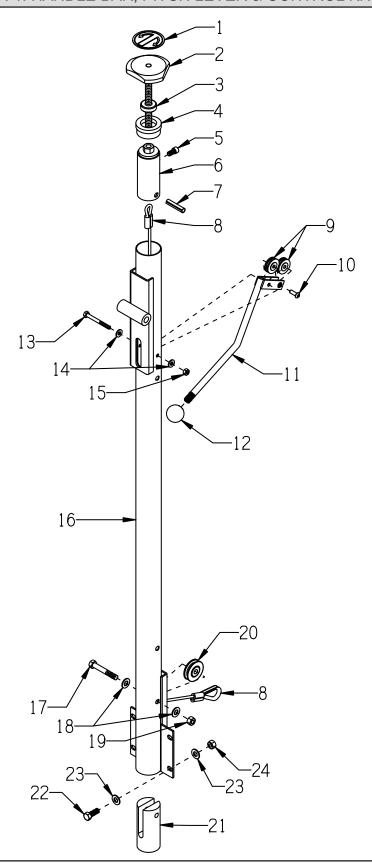

Printed in USA ©2012 JWA

Page 4

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326




	HANDL	PARTS LISTING - ILLUSTRATION 1 : LE BAR, PITCH LEVER & CONTROL KNOB GROUPING	
ITEM#	PART#	DESCRIPTION	QTY.
1	3661	DECAL, BLADE ANGLE - FLAT/TILT	1
2	49014	KNOB, CONTROL W/ 1/2-13 X 6-3/4"ROD	1
3	3642	BEARING, THRUST BALL 1/2	1
4	36078	HANDLE TOP INSERT	1
5	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	1
6	36080	LINKAGE	1
7	11728	PIN, ROLL 3/8 X 1-3/4	1
8	36082	CABLE, CONTROL 3/16 X 51"L	1
	4610	CABLE, THIMBLE 3/16"	1
	3618	SLEEVE, NICOPRESS DOUBLE 3/16"	2
9	14082	PULLEY BEARING 1-1/4DIA. X 1/4BORE	2
10	10884	SCREW, SKT. BUTTON HD. 1/4-20 X 3/4	1
11	36081	LEVER, PITCH	1
12	14023	KNOB, BALL 1-3/8 W/ 1/2-13THD, BLK.	1
13	10001	SCREW, CAP 1/4-20 X 2-1/2	1
14	10602	WASHER, FLAT 1/4 SAE ZINC	2
15	10150	NUT, HEX NYLON LOCK 1/4-20	1
16	36070E	HANDLE BAR	1
17	10393	SCREW, CAP 3/8-24 X 2-1/2	1
18	10025	WASHER, FLAT 3/8 SAE ZINC	2
19	10058	NUT, HEX LOCK 3/8-24 W/ NYLON PATCH	1
20	3621	PULLEY BEARING 1-3/4DIA. X 3/8BORE	1
21	36077	ROLLER GUIDE	1
22	10021	SCREW, CAP 3/8-24 X 1	4
23	10025	WASHER, FLAT 3/8 SAE ZINC	4
24	10004	NUT, HEX LOCK 3/8-24 ZINC	4



Email: sales@edcoinc.com

## ILLUSTRATION 2: ADJUSTABLE HANDLE BELLY BAR GROUPING

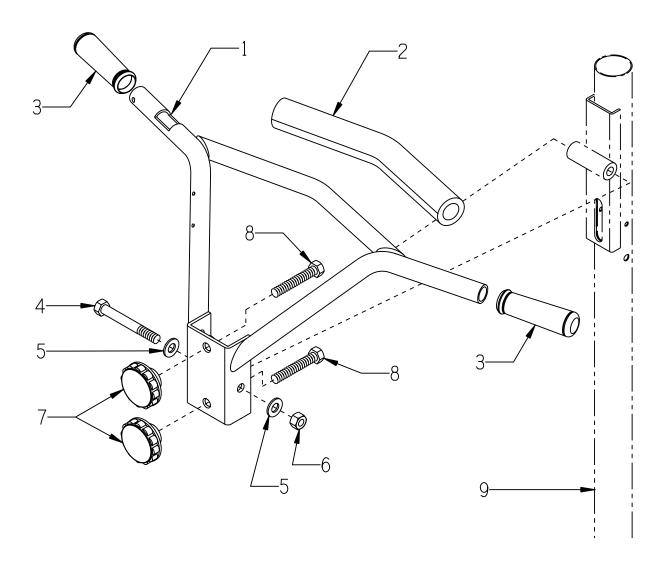

ITEM#	PART #	DESCRIPTION	QTY.
1	36071E	HANDLE BELLY BAR, ADJUSTABLE	1
2	36083	PADDING, BELLY BAR	1
3	10608	GRIP, HAND 1" MODEL AT	2
4	81001	SCREW, CAP 1/2-13 X 4	1
5	10312	WASHER, FLAT 1/2 SAE ZINC	2
6	10155	NUT, HEX NYLON LOCK 1/2-13	1
7	36063	KNOB, FLUTED 1/2-13 X 2-1/2"DIA.	2
8	10340	BOLT, TAP 1/2-13 X 3 (FULL THREAD)	2
9	36070E	HANDLE BAR (REF. TO ILLUS. 1, ITEM 16)	1


100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326

Printed in USA ©2012 JWA Page 6

Fax (301) 663-1607 • 1-800-447-3326 Website: www.edcoinc.com Email: sales@edcoinc.com




## ILLUSTRATION 3: ON/OFF SWITCH GROUPING

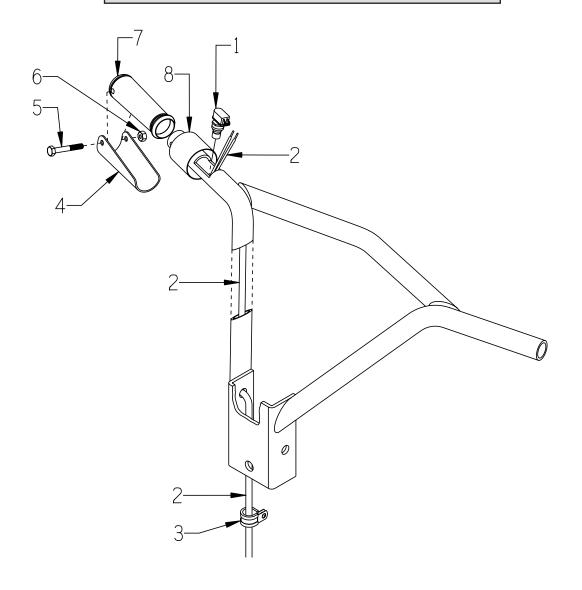

ITEM#	PART#	DESCRIPTION	QTY.
1	36094	SWITCH, ON/OFF PUSH-BUTTON	1
2	36135	CORD WIRE 16/2 X 60"L (SWITCH TO CONN.)	1
3	11690	CLAMP, LOOM, 3/8"	1
4	3699	LEVER 3-3/4"	1
5	10314	SCREW, CAP 1/4-20 X 1-3/4	1
6	10015	NUT, HEX LOCK 1/4-20 ZINC	1
7		MODIFIED GRIP (REF. TO ILLUS. 2, ITEM 3)	1
8	36136	TUBING, HEAT SHRINK, TROWEL GRIP	1



## ILLUSTRATION 4: FRAME, TRANSMISSION & SPIDER GROUPING

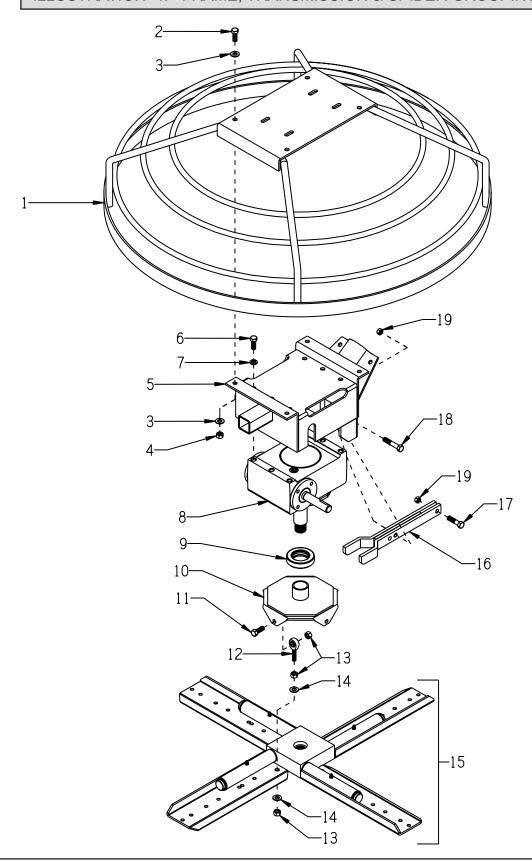

Printed in USA ©2012 JWA 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326




TEM# PART# DESCRIPTION			PARTS LISTING - ILLUSTRATION 4 :		
1					
36065   36066   30" TROWEL   36067   36" TROWEL   36068   46" TROWEL   46" TROWEL   46" TROWEL   2   11729   BOLT, TAP 3/8-24 X 1-3/4 FULL THD.   4   4   10005   WASHER, FLAT 3/8 SAE ZINC   8   4   10004   NUT, HEX LOCK 3/8-24 ZINC   4   5   36069   MOUNT, TRANSMISSION   1   6   10055   SCREW, CAP 3/8-16 X 1   6   6   6   10055   SCREW, CAP 3/8-16 X 1   6   6   6   10055   SCREW, CAP 3/8-14 X 1 (24, 30, 36" TROWEL S 4   603   46" TROWELS   4603   46" TROWELS   4603   46" TROWELS   46" TROWELS   46" TROWELS   46" TROWELS   46" TROWELS   5   5   5   5   10205   1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)   13   NUT, HEX LOCK ZINC   10025   3/8-24 (24, 30, 8 36" TROWELS)   16   10025   3/8 SAE (24, 30, 8 36" TROWELS)   16   10025   1/2-20 (46" TROWELS)   10025   1/2-20 (46" TR	ITEM#	PART#	DESCRIPTION	QTY.	
36066   36067   36" TROWEL   360687   36" TROWEL   46" TROWEL   2   11729   BOLT, TAP 3/8-24 X 1-3/4 FULL THD.   4   4   10004   NUT, HEX LOCK 3/8-24 ZINC   4   10004   NUT, HEX LOCK 3/8-24 ZINC   4   10005   SCREW, CAP 3/8-16 X 1   6   6   10055   SCREW, CAP 3/8-16 X 1   6   6   10055   SCREW, CAP 3/8-16 X 1   6   6   7   10025   WASHER, FLAT 3/8 SAE ZINC   6   6   7   10025   WASHER, FLAT 3/8 SAE ZINC   6   6   7   10025   WASHER, FLAT 3/8 SAE ZINC   6   7   10025   SCREW, CAP 3/8-14 L-1/2"ID X 2-19/32"OD X 5/8"THK   1   10   PLATE, PITCH ADJUSTMENT   1   3626   24, 30, & 36" TROWELS   46" TROWELS   46" TROWELS   46" TROWELS   46" TROWELS   10322   SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS, ON INSIDE)   12   ROD END, MALE   3/8-24 (24, 30, & 36" TROWELS, AS SHOWN)   1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)   13   NUT, HEX LOCK ZINC   3/8-24 (24, 30, & 36" TROWELS)   16   10025   3/8-24 (24, 30, & 36" TROWELS)   16   10025   3/8 SAE (24, 30, & 36" TROWELS)   16   17   10312   1/2 SAE (46" TROWELS)   16   17   17   17   10816   SCREW, CAP 3/8-24 X 1-1/2   1   1   1   10016   SCREW, CAP 3/8-24 X 1-1/2   1   1   1   10016   SCREW, CAP 3/8-24 X 1-1/2   1   1   1   1   10016   SCREW, CAP 3/8-24 X 1-1/2   1   1   1   1   10016   SCREW, CAP 3/8-24 X 1-1/2   1   1   1   1   1   1   1   1   1	1		FRAME & GUARD RING	1	
36067   36' TROWEL   46" TROWEL   46" TROWEL   46" TROWEL   4					
36068					
2     11729     BOLT, TAP 3/8-24 X 1-3/4 FULL THD.     4       3     10025     WASHER, FLAT 3/8 SAE ZINC     8       4     10004     NUT, HEX LOCK 3/8-24 ZINC     4       5     36069     MOUNT, TRANSMISSION     1       6     10055     SCREW, CAP 3/8-16 X 1     6       7     10025     WASHER, FLAT 3/8 SAE ZINC     6       8     3664     TRANSMISSION SUBASSY. (20:1 RATIO)     1       9     3609     BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK     1       10     PLATE, PITCH ADJUSTMENT     1       24, 30, & 36" TROWELS     46" TROWELS       4603     46" TROWELS       11     SCREW, CAP       10021     SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS)       10322     SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)       12     ROD END, MALE       3605     3/8-24 (24, 30, & 36" TROWELS, AS SHOWN)       4805     1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)       13     NUT, HEX LOCK ZINC       10004     3/8-24 (24, 30, & 36" TROWELS)       1005     1/2-20 (46" TROWELS)       1005     1/2-20 (46" TROWELS)       1005     1/2-20 (46" TROWELS)       15     SPIDER ASSEMBLY (REFER TO ILLUS. 5)       1     24" TROWEL (8-1/2" ARMS)					
3 10025 WASHER, FLAT 3/8 SAE ZINC 8 4 10004 NUT, HEX LOCK 3/8-24 ZINC 4 5 36069 MOUNT, TRANSMISSION 1 6 10055 SCREW, CAP 3/8-16 X 1 6 7 10025 WASHER, FLAT 3/8 SAE ZINC 6 8 3664 TRANSMISSION SUBASSY. (20:1 RATIO) 1 9 3609 BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK 1 10 PLATE, PITCH ADJUSTMENT 24, 30, & 36" TROWELS 46" TROWELS 46" TROWELS 46" TROWELS 46" TROWELS SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS) 10322 SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE) 12 ROD END, MALE 3/8-24 (24, 30, & 36" TROWELS, AS SHOWN) 1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE) 13 NUT, HEX LOCK ZINC 3/8-24 (24, 30, & 36" TROWELS) 10312 1/2-20 (46" TROWELS) 16 14 WASHER, FLAT ZINC 3/8 SAE (24, 30, & 36" TROWELS) 10312 1/2 SAE (46" TROWELS) 16 15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 1 16 36084 24" TROWEL (3-1/2" ARMS) 36085 36" TROWEL (12" ARMS) 36086 36" TROWEL (12" ARMS) 36087 46" TROWEL (13-1/4" ARMS) 36093 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"					
4         10004         NUT, HEX LOCK 3/8-24 ZINC         4           5         36069         MOUNT, TRANSMISSION         1           6         10055         SCREW, CAP 3/8-16 X 1         6           7         10025         WASHER, FLAT 3/8 SAE ZINC         6           8         3664         TRANSMISSION SUBASSY. (20:1 RATIO)         1           9         3609         BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK         1           10         PLATE, PITCH ADJUSTMENT         1           3626         4603         46" TROWELS           4603         46" TROWELS         4           11         SCREW, CAP         4           10021         SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS)           10322         SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)           12         ROD END, MALE         4           3605         3/8-24 (24, 30, & 36" TROWELS, AS SHOWN)         1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)           13         NUT, HEX LOCK ZINC         10004         3/8-24 (24, 30, & 36" TROWELS)         12           10025         1/2-20 (46" TROWELS)         16         8           1025         10205         1/2-20 (46" TROWELS)         8           1025         10312					
5         36069         MOUNT, TRANSMISSION         1           6         10055         SCREW, CAP 3/8-16 X 1         6           7         10025         WASHER, FLAT 3/8 SAE ZINC         6           8         3664         TRANSMISSION SUBASSY. (20:1 RATIO)         1           9         3609         BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK         1           10         PLATE, PITCH ADJUSTMENT         1           3626         4603         46" TROWELS           4603         46" TROWELS         46" TROWELS           4603         46" TROWELS         4           10021         SCREW, CAP         4           SCREW, CAP         SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)         4           12         ROD END, MALE         4           3605         3/8-24 (24, 30, & 36" TROWELS, AS SHOWN)         1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)           13         NUT, HEX LOCK ZINC         1           10004         3/8-24 (24, 30, & 36" TROWELS)         12           10025         1/2-20 (46" TROWELS)         16           14         WASHER, FLAT ZINC         8           10025         3/8 SAE (24, 30, & 36" TROWELS)           10312         1/2 SAE (46" TROWELS)	3	10025	·	8	
6 10055 SCREW, CAP 3/8-16 X 1 6 7 10025 WASHER, FLAT 3/8 SAE ZINC 6 8 3664 TRANSMISSION SUBASSY. (20:1 RATIO) 1 9 3609 BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK 1 10 PLATE, PITCH ADJUSTMENT 24, 30, & 36" TROWELS 46" TROWELS 11 SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS) SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE) 12 ROD END, MALE 3/8-24 (24, 30, & 36" TROWELS, AS SHOWN) 1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE) 13 NUT, HEX LOCK ZINC 3/8-24 (24, 30, & 36" TROWELS) 10205 1/2-20 (46" TROWELS) 16 14 WASHER, FLAT ZINC 3/8 SAE (24, 30, & 36" TROWELS) 16 15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 1 16 36084 36085 36" TROWEL (12" ARMS) 36086 36" TROWEL (12" ARMS) 36087 46" TROWEL (12" ARMS) 36093 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4" ARMS) 16 3625 FORK 1 1 16 3625 FORK 1 1		10004	NUT, HEX LOCK 3/8-24 ZINC	4	
7         10025         WASHER, FLAT 3/8 SAE ZINC         6           8         3664         TRANSMISSION SUBASSY. (20:1 RATIO)         1           9         3609         BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK         1           10         PLATE, PITCH ADJUSTMENT         1           24, 30, & 36" TROWELS         46" TROWELS           11         SCREW, CAP         4           10021         SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS)           10322         SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)           12         ROD END, MALE         3/8-24 (24, 30, & 36" TROWELS, AS SHOWN)           1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)         NUT, HEX LOCK ZINC           10004         3/8-24 (24, 30, & 36" TROWELS)         12           10005         1/2-20 (46" TROWELS)         16           14         WASHER, FLAT ZINC         8           10025         3/8 SAE (24, 30, & 36" TROWELS)         16           15         SPIDER ASSEMBLY (REFER TO ILLUS. 5)         1           16         36084         36" TROWEL (12" ARMS)         36086           36087         46" TROWEL (12" ARMS)         36086           36087         46" TROWEL (15-1/4" ARMS)           36093         46" TROWEL (15-1/4" ARMS)	5	36069	MOUNT, TRANSMISSION	1	
8 3664 TRANSMISSION SUBASSY. (20:1 RATIO) 1 9 3609 BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK 1 10 PLATE, PITCH ADJUSTMENT 24, 30, & 36" TROWELS 4603 46" TROWELS  11 SCREW, CAP SCREW, CAP SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)  12 ROD END, MALE 3/8-24 (24, 30, & 36" TROWELS, AS SHOWN) 1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)  13 NUT, HEX LOCK ZINC 3/8-24 (24, 30, & 36" TROWELS) 1/2-20 (46" TROWEL (12" ARMS) 1/2-20 (46" TRO	6	10055	SCREW, CAP 3/8-16 X 1	6	
9 3609 BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK 1 10 PLATE, PITCH ADJUSTMENT 1 24, 30, & 36" TROWELS 4603 46" TROWELS  11 SCREW, CAP SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS) SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)  12 ROD END, MALE 3/8-24 (24, 30, & 36" TROWELS, AS SHOWN) 1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)  13 NUT, HEX LOCK ZINC 3/8-24 (24, 30, & 36" TROWELS) 12 10004 3/8-24 (24, 30, & 36" TROWELS) 16  14 WASHER, FLAT ZINC 3/8 SAE (24, 30, & 36" TROWELS) 16  15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 1 36084 36085 30" TROWEL (8-1/2" ARMS) 36085 36" TROWEL (12" ARMS) 36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS)  16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1	7	10025	WASHER, FLAT 3/8 SAE ZINC	6	
10	8	3664	TRANSMISSION SUBASSY. (20:1 RATIO)	1	
3626	9	3609	BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK	1	
11	10		PLATE, PITCH ADJUSTMENT	1	
11		3626	24, 30, & 36" TROWELS		
10021 SCREW, CAP 3/8-24 X 1 (24, 30, & 36" TROWELS) SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)  12 ROD END, MALE 3605 3/8-24 (24, 30, & 36" TROWELS, AS SHOWN) 4805 1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)  13 NUT, HEX LOCK ZINC 10004 3/8-24 (24, 30, & 36" TROWELS) 112 10205 1/2-20 (46" TROWELS) 114 WASHER, FLAT ZINC 10025 3/8 SAE (24, 30, & 36" TROWELS) 10312 1/2 SAE (46" TROWELS) 15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 16 36084 24" TROWEL (8-1/2" ARMS) 36085 30" TROWEL (12" ARMS) 36086 36" TROWEL (12" ARMS) 36087 46" TROWEL (13" ARMS) 36093 46" TROWEL (15-1/4" ARMS) 16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1		4603	46" TROWELS		
10322   SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)	11		SCREW, CAP	4	
12					
3605 3/8-24 (24, 30, & 36" TROWELS, AS SHOWN) 1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)  13 NUT, HEX LOCK ZINC 10004 3/8-24 (24, 30, & 36" TROWELS) 112 10205 1/2-20 (46" TROWELS) 114 WASHER, FLAT ZINC 10025 3/8 SAE (24, 30, & 36" TROWELS) 115 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 116 24" TROWEL (8-1/2" ARMS) 117 36084 36" TROWEL (12" ARMS) 118 36085 30" TROWEL (12" ARMS) 119 36086 36" TROWEL (15-1/4" ARMS) 110 36087 46" TROWEL (15-1/4" ARMS) 110 3625 FORK 110 10816 SCREW, CAP 3/8-24 X 1-1/2		10322	SCREW, CAP 1/2-20 X 2 (46" TROWELS, ON INSIDE)		
4805       1/2-20 (46" TROWELS, MOUNTED ON OUTSIDE)         13       NUT, HEX LOCK ZINC         10004       3/8-24 (24, 30, & 36" TROWELS)       12         10205       1/2-20 (46" TROWELS)       16         14       WASHER, FLAT ZINC       8         10025       3/8 SAE (24, 30, & 36" TROWELS)       8         10312       1/2 SAE (46" TROWELS)       1         15       SPIDER ASSEMBLY (REFER TO ILLUS. 5)       1         36084       24" TROWEL (8-1/2" ARMS)       1         36085       30" TROWEL (12" ARMS)       36086         36086       36" TROWEL (13" ARMS)       46" TROWEL (15-1/4" ARMS)         36093       46" TROWEL (17-1/4"ARMS)       1         16       3625       FORK       1         17       10816       SCREW, CAP 3/8-24 X 1-1/2       1	12		,	4	
13					
10004       3/8-24 (24, 30, & 36" TROWELS)       12         10205       1/2-20 (46" TROWELS)       16         14       WASHER, FLAT ZINC       8         10025       3/8 SAE (24, 30, & 36" TROWELS)       8         10312       1/2 SAE (46" TROWELS)       1         15       SPIDER ASSEMBLY (REFER TO ILLUS. 5)       1         36084       24" TROWEL (8-1/2" ARMS)       1         36085       30" TROWEL (12" ARMS)       36086         36086       36" TROWEL (13" ARMS)       36087         36087       46" TROWEL (15-1/4" ARMS)       1         16       3625       FORK       1         17       10816       SCREW, CAP 3/8-24 X 1-1/2       1		4805			
10205       1/2-20 (46" TROWELS)       16         14       WASHER, FLAT ZINC       8         10025       3/8 SAE (24, 30, & 36" TROWELS)       10312         1/2 SAE (46" TROWELS)       15       SPIDER ASSEMBLY (REFER TO ILLUS. 5)       1         36084       24" TROWEL (8-1/2" ARMS)       36085       30" TROWEL (12" ARMS)         36085       36" TROWEL (13" ARMS)       36086       36" TROWEL (15-1/4" ARMS)         36087       46" TROWEL (15-1/4" ARMS)       46" TROWEL (17-1/4"ARMS)         16       3625       FORK       1         17       10816       SCREW, CAP 3/8-24 X 1-1/2       1	13	40004		40	
14       WASHER, FLAT ZINC       8         10025       3/8 SAE (24, 30, & 36" TROWELS)         10312       1/2 SAE (46" TROWELS)         15       SPIDER ASSEMBLY (REFER TO ILLUS. 5)       1         36084       24" TROWEL (8-1/2" ARMS)         36085       30" TROWEL (12" ARMS)         36086       36" TROWEL (13" ARMS)         36087       46" TROWEL (15-1/4" ARMS)         36093       46" TROWEL (17-1/4"ARMS)         16       3625       FORK         17       10816       SCREW, CAP 3/8-24 X 1-1/2					
10025 3/8 SAE (24, 30, & 36" TROWELS) 10312 1/2 SAE (46" TROWELS)  15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 1 36084 24" TROWEL (8-1/2" ARMS) 36085 30" TROWEL (12" ARMS) 36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS)  16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1	4.4	10205			
10312 1/2 SAE (46" TROWELS)  15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 1 36084 24" TROWEL (8-1/2" ARMS) 36085 30" TROWEL (12" ARMS) 36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS)  16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1	14	10025	,	8	
15 SPIDER ASSEMBLY (REFER TO ILLUS. 5) 1 36084 24" TROWEL (8-1/2" ARMS) 36085 30" TROWEL (12" ARMS) 36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS) 16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1					
36084 24" TROWEL (8-1/2" ARMS) 36085 30" TROWEL (12" ARMS) 36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS)  16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1	15	10312		1	
36085 30" TROWEL (12" ARMS) 36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS)  16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1		36084	,	'	
36086 36" TROWEL (13" ARMS) 36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS) 16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1			,		
36087 46" TROWEL (15-1/4" ARMS) 36093 46" TROWEL (17-1/4"ARMS) 16 3625 FORK 1 17 10816 SCREW, CAP 3/8-24 X 1-1/2 1			, ,		
36093 46" TROWEL (17-1/4"ARMS)  16 3625 FORK 1  17 10816 SCREW, CAP 3/8-24 X 1-1/2 1			,		
17 10816 SCREW, CAP 3/8-24 X 1-1/2 1		36093	46" TROWEL (17-1/4"ARMS)		
	16	3625	FORK	1	
18 10030 SCREW, CAP 3/8-24 X 2 1	17	10816	SCREW, CAP 3/8-24 X 1-1/2	1	
	18	10030	SCREW, CAP 3/8-24 X 2	1	
19 10004 NUT, HEX LOCK 3/8-24 ZINC 2	19	10004	NUT, HEX LOCK 3/8-24 ZINC	2	



Email: sales@edcoinc.com

## **ILLUSTRATION 5: SPIDER ASSEMBLY**

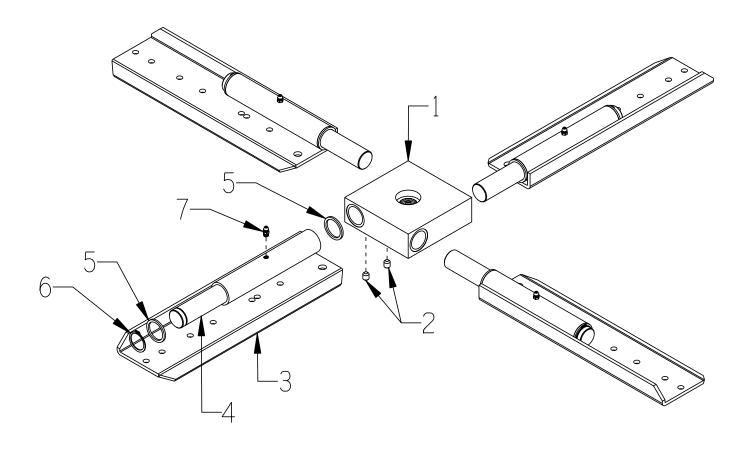

ITEM#	PART#	DESCRIPTION	QTY.
1	3637	HUB, 4 BLADE TROWEL	1
2	10052	SCREW, SET 5/16-18 X 3/8	8
3		ARM, BLADE	4
	2402	8-1/2" ARM, 24" TROWEL ,BOLT-ON BLADES	
	3666	12" ARM, 30" TROWEL, BOLT-ON OR QUICK-CHANGE	
	36007	13" ARM, 36" TROWEL, BOLT-ON OR QUICK-CHANGE	
	4618	15-1/4" ARM, 46" TROWEL, BOLT-ON BLADES	
	4606	17-1/4" ARM, 46" TROWEL, QUICK-CHANGE BLADES	
4		SHAFT, BLADE ARM	4
	3635	9-11/16"L SHAFT (24", 30", & 36" TROWEL)	
	4604	13-15/16"L SHAFT (46" TROWEL)	
5	3629	SPACER, ALUM. 1.25 X 1.017 X .090	8
6	10906	RETAINING RING, EXT. 1"	4
7	10808	FITTING, GREASE 1/4-28 STRAIGHT	4

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326


Printed in USA ©2012 JWA Page 10

Website: www.edcoinc.com Email: sales@edcoinc.com

Fax (301) 663-1607 • 1-800-447-3326




## ILLUSTRATION 6: BOLT-ON BLADES & ADAPTER FOR 24" TROWEL

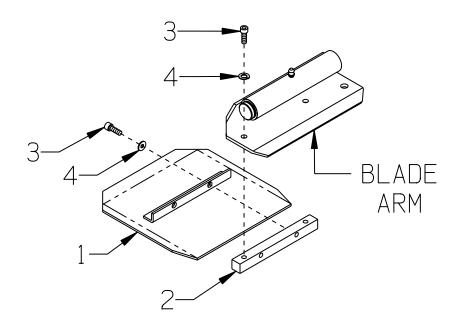

ITEM#	PART#	DESCRIPTION	QTY.
1		BLADE	4
	40470	C-4 COMBINATION TROWEL BLADE 8 X 8 (SHOWN)	
	40480	F-4 FINISH TROWEL BLADE 6 X 8	
	40490	M-4 FLOAT TROWEL BLADE 9 X 8	
2	2406	BAR, BLADE MOUNTING 5/8"SQ. X 6"	4
3	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	16
4	10801	WASHER, LOCK 5/16 ZINC	16

## ILLUSTRATION 7: BOLT-ON BLADES & ADAPTER FOR 30" TROWEL

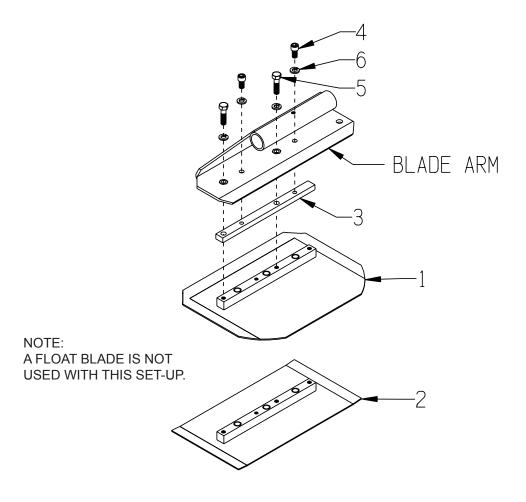


ITEM#	PART#	DESCRIPTION	QTY.
1	40270-C	C-2C COMBINATION TROWEL BLADE 8 X 10-1/2	4
2	40280-C	F-2C FINISH TROWEL BLADE 6 X 10-1/2	4
3	3639	ADAPTER BAR 3/8" X 5/8" X 8-1/4"	4
4	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	8
5	10606	SCREW, HEX HD. CAP 5/16-18 X 1-1/4	8
6	10801	WASHER, LOCK 5/16 ZINC	20

Printed in USA ©2012 JWA Page 12 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326




## ILLUSTRATION 8: BOLT-ON BLADES & ADAPTER FOR 36" TROWEL

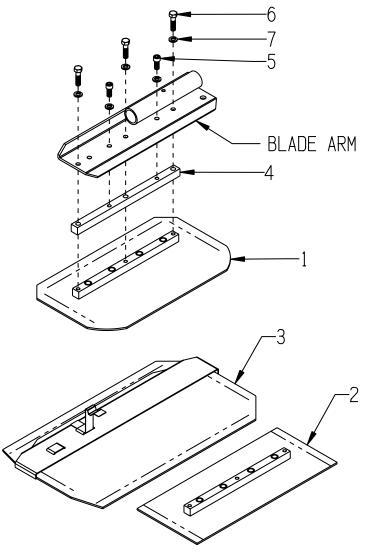

ITEM#	PART#	DESCRIPTION	QTY.
1	40040-C	C-1C COMBINATION TROWEL BLADE 8 X 14	4
2	40050-C	F-1C FINISH TROWEL BLADE 6 X 14	4
3	40060-CE	M-1CE FLOAT TROWEL BLADE 10 X 14 (SLIPS OVER FINISH BLADE)	4
4	36016	ADAPTER BAR 5/8"SQ. X 10-1/4"	4
5	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	8
6	10606	SCREW, HEX HD. CAP 5/16-18 X 1-1/4	12
7	10801	WASHER, LOCK 5/16 ZINC	20



## ILLUSTRATION 9: BOLT-ON BLADES & ADAPTER FOR 46" TROWEL

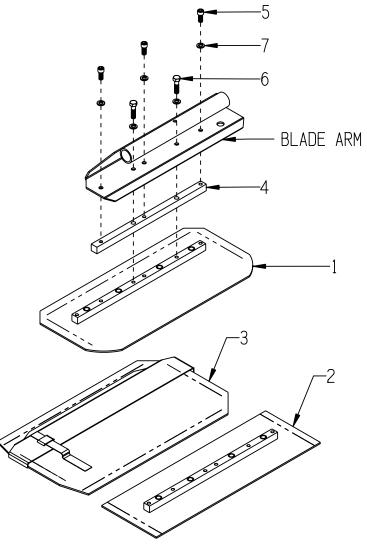

ITEM#	PART#	DESCRIPTION	QTY.
1	40070-C	C-3C COMBINATION TROWEL BLADE 8 X 18	4
2	40080-C	F-3C FINISH TROWEL BLADE 6 X 18	4
3	40090-C	M-3C FLOAT TROWEL BLADE 10 X 18	4
		(SLIPS OVER FINISH BLADE)	
4	4619	ADAPTER BAR 5/8'SQ. X 12"	4
5	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	12
6	10606	SCREW, HEX HD. CAP 5/16-18 X 1-1/4	8
7	10801	WASHER, LOCK 5/16 ZINC	20

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326


Printed in USA ©2012 JWA Page 14

Website: www.edcoinc.com Email: sales@edcoinc.com

Fax (301) 663-1607 • 1-800-447-3326




# ILLUSTRATION 10: OPTIONAL QUICK CHANGE BLADES & ADAPTERS FOR 30", 36", & 46" TROWELS

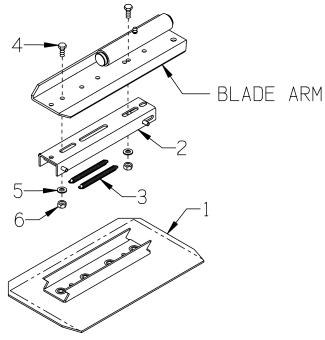

ITEM#	PART #	DESCRIPTION	QTY.
1		COMBINATION BLADE (SHOWN)	4
	40270	C-2, 8" x 11"	
	40040	C-1, 8" x 14"	
	40070	C-3, 8" x 18"	
1		FLOAT BLADE	4
	40290	M-2, 9" x 11"	
	40060	M-1, 9" x 14"	
	40090	M-3, 9" x 18"	
1		FINISH BLADE	4
	40280	F-2, 6" x 11"	
	40050	F-1, 6" x 14"	
	40080	F-3, 6" x 18"	
2		ADAPTER COMPLETE (INCLUDES SPRINGS, ITEM 3)	4
	40197	"A", 30" & 36" TROWEL, 10-1/16"L (SHOWN)	
	40237	"B", 46" TROWEL, 14-3/16"L	
3		SPRING, EXTENSION	8
	3636	6"L ("A" ADAPTER)	
	4605	11-1/2"L ("B" ADAPTER)	
4	10053	SCREW, CAP 5/16-18 X 3/4	8/12
5	10213	WASHER, FLAT 5/16 SAE ZINC	8/12
6	10807	NUT, HEX LOCK 5/16-18 ZINC	8/12



## ILLUSTRATION 11: LIFT HANDLE GROUPING

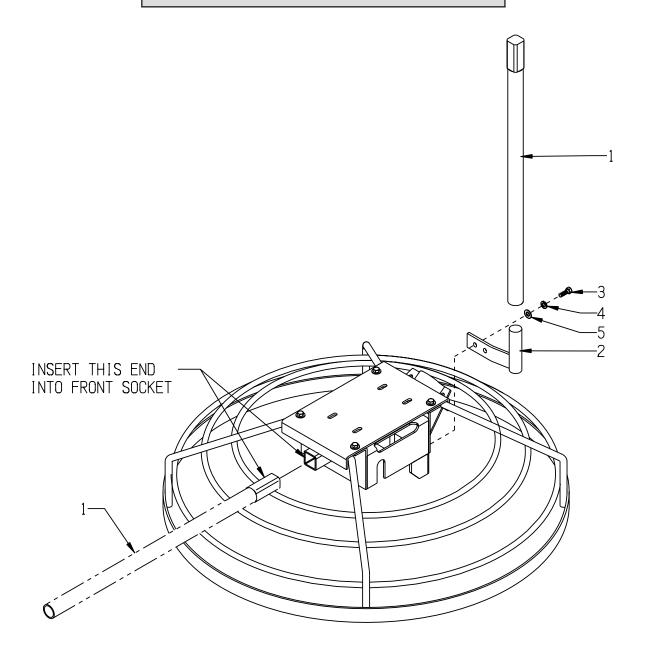


ITEM#	PART#	DESCRIPTION	QTY.
1	36091	HANDLE, LIFT	1
2	36092	HOLDER, LIFT HANDLE	1
3	10055	SCREW, CAP 3/8-16 X 1	2
4	10811	WASHER, LOCK 3/8 ZINC	2
5	10025	WASHER, FLAT 3/8 SAE ZINC	2

Printed in USA ©2012 JWA 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326

Email: sales@edcoinc.com




## ILLUSTRATION 12: OPTIONAL "TOTE-A-TROWEL"

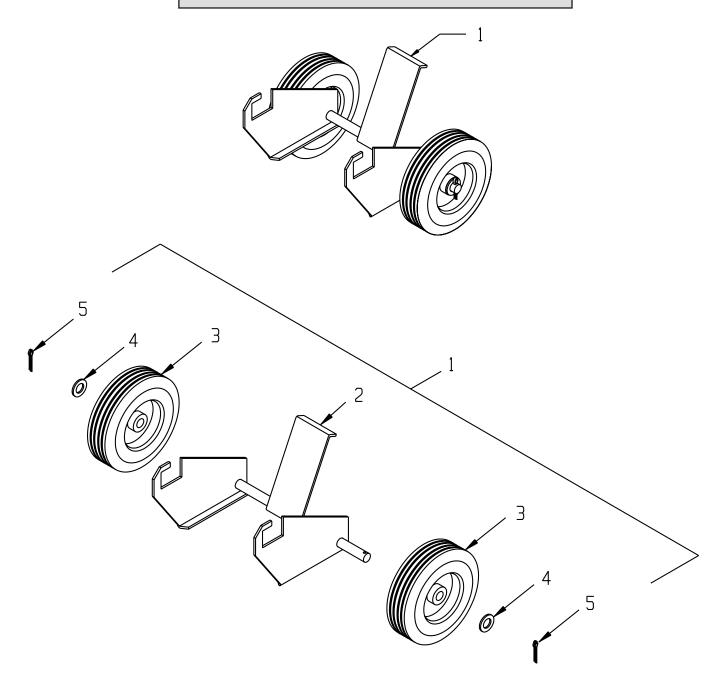

ITEM#	PART#	DESCRIPTION	QTY.
1	81400	TAT-II "TOTE-A-TROWEL" TRANSPORTER (INCLUDES ITEMS 2 THRU 5)	1
2	81401	FRAME	1
3	79013	WHEEL, 8 X 2-1/2 X 3/4"BRG.POLY HUB	2
4	10009	WASHER, FLAT 3/4 SAE ZINC	2
5	10306	PIN, COTTER 3/16 X 1-1/2	2



## **ILLUSTRATION 13: MOTOR GROUPING** FOR MODEL T244RS-1.5 & T304RS-1.5

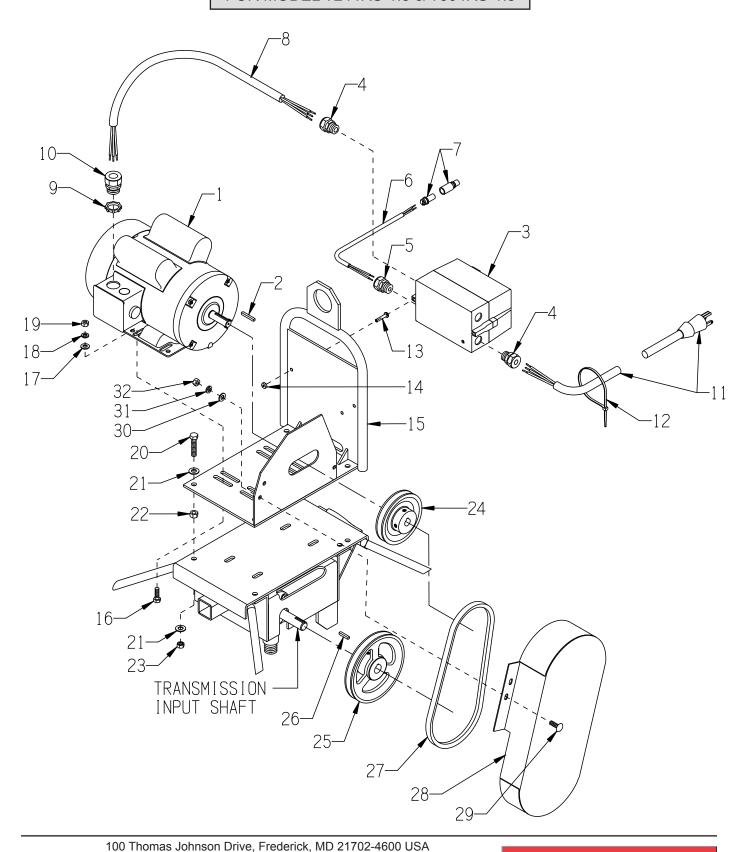

Printed in USA ©2012 JWA Page 18


Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



PARTS LISTING - ILLUSTRATION 13: MOTOR GROUPING FOR MODEL T244RS-1.5 & T304RS-1.5			
ITEM#	PART#	DESCRIPTION	QTY.
1	16077	MOTOR, LEESON 1.5HP-1P-60HZ-1725RPM REPLACEMENT PARTS:	1
	16178 16174 16179	CAPACITOR, START, LEESON 003025.15, 460-552 MFD, 125V CAPACITOR, RUN, LEESON 003014.02, 50MFD-240V RESET BUTTON, LEESON 300033.02, CED2705	1 1 1
2		KEY 3/16SQ. X 1-3/8 (INCLUDED W/ MOTOR)	1
3	16601	STARTER ACI #128929 RESET ONLY (SK18.310-120, 11.3-16.0A O/L)	1
	16616 16621 16635	REPLACEMENT PARTS: STARTER CONTACTOR W/ COIL ACI SK18.310-120 STARTER AC COIL 120V-60HZ STARTER OVERLOAD RELAY 11.3-16.0 AMP	1 1 1
4	41130	STRAIN RELIEF 1/2NPT X .550650"	2
5	16190	STRAIN RELIEF 1/2NPT X .250350"	1
6	36138	CORD WIRE 16/2 X 15"L (STARTER TO CONNECTOR)	1
7	36131 36132 36133 36134	CONNECTOR PLUG, SEALED 246-4402 CONNECTOR RECEPT., SEALED 246-4414 CONTACT, PIN 246-4424 CONTACT, SOCKET 246-4428	1 1 2 2
8	36140	CORD WIRE 12/3 X 30 "LOA (STARTER TO MOTOR)	1
9	10740	CONDUIT LOCK NUT 3/4 NP	1
10	16176	STRAIN RELIEF 3/4NPT X .350450"	1
11	36137	CORD W/ PLUG, 70" POWER (NEMA 5-15P 15A/125V)	1
12	10982	TIE, CABLE, BLACK NYLON 11-1/4"	4
13	11732 10384	SCREW, MACHINE 10-32 X 1-3/4 RHP SCREW, MACHINE 10-32 X 1 RHP	2
14	10832	NUT, KEPS LOCK 10-32 ZINC	3
15	36139	LIFTING BAIL/MOTOR MOUNT, TROWEL	1
16	10819	BOLT, CARRIAGE 5/16-18 X 1 FULL THD	4
17	10213	WASHER, FLAT 5/16 SAE ZINC	4
18	10801	WASHER, LOCK 5/16 ZINC	4
19	10054	NUT, HEX 5/16-18 ZINC	4
20	11729	BOLT, TAP 3/8-24 X 1-3/4(FULL THD.)	4
21	10025	WASHER, FLAT 3/8 SAE ZINC	8
22	10014	NUT, HEX 3/8-24 ZINC	4
23	10004	NUT, HEX LOCK 3/8-24 ZINC	4
24	36096	SHEAVE 4.45"OD X 1GR.A X 5/8"BORE	1
25	36013	SHEAVE 6"OD X 1GR.A X 3/4"BORE	1
26	36108	TRANS. INPUT KEY 3/16SQ X 1 (INCLUDED W/ TRANSMISSION)	1
27	10259	BELT A-29	1
28	36141 36072	COVER, BELT, TROWEL (3" WIDTH AT TOP) COVER, BELT, TROWEL (4-3/16" WIDTH AT TOP)	1 1
29	10819	BOLT, CARRIAGE 5/16-18 X 1 FULL THD	3
30	10213	WASHER, FLAT 5/16 SAE ZINC	3
31	10801	WASHER, LOCK 5/16 ZINC	3
32	10054	NUT, HEX 5/16-18 ZINC	3



## ILLUSTRATION 14: MOTOR GROUPING FOR MODEL T364-3

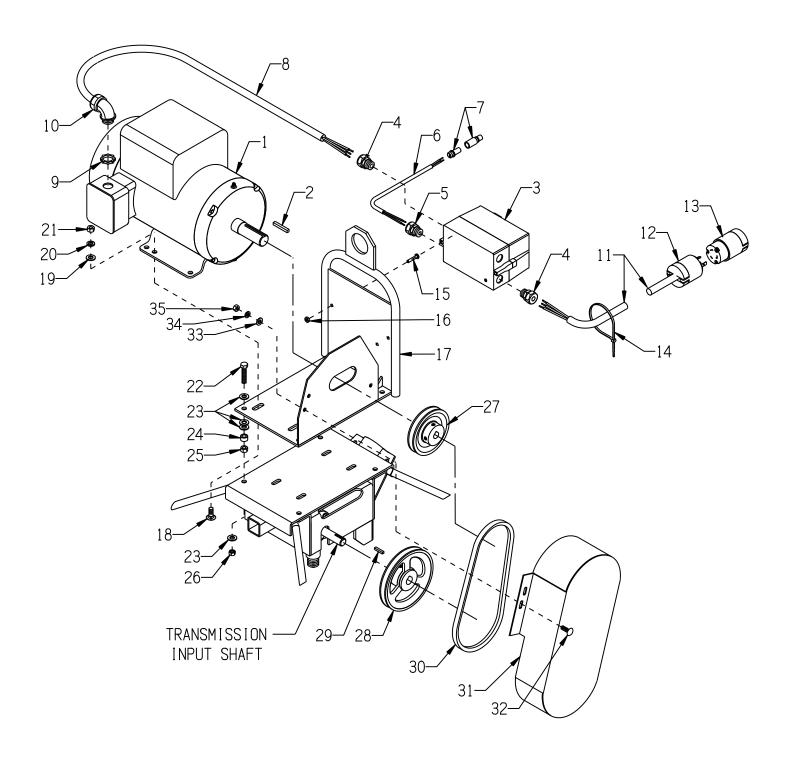




PA ITEM#	ARTS LISTING	G - ILLUSTRATION 14: MOTOR GROUPING FOR MODEL TO DESCRIPTION	64-3 QTY
1	81014	MOTOR, BALDOR 3HP-1PH-60HZ-3450RPM REPLACEMENT PART:	1
	77039	CAPACITOR, START, BALDOR EC1850A06SP, 850MFD 115V	1
2		KEY 1/4SQ. X 1-3/4 (INCLUDED W/ MOTOR)	1
3	16604	STARTER ACI #128844 RESET ONLY 200/240V COIL 11.3-16.0A O/L REPLACEMENT PARTS:	1
	16617	STARTER CONTACTOR W/ COIL ACI SK18.310-230	1
	16622	STARTER AC COIL 200/240V-60HZ	1
	16635	STARTER OVERLOAD RELAY 11.3-16.0 AMP	1
4	41130	STRAIN RELIEF 1/2NPT X .550650"	2
5	16190	STRAIN RELIEF 1/2NPT X .250350"	1
6	36138	CORD WIRE 16/2 X 15"L (STARTER TO CONNECTOR)	1
7	36131	CONNECTOR PLUG, SEALED 246-4402	1
	36132 36133	CONNECTOR RECEPT., SEALED 246-4414 CONTACT, PIN 246-4424	1 2
	36134	CONTACT, FIN 240-4424 CONTACT, SOCKET 246-4428	2
8	36148	CORD WIRE 10/3 X 32"L (STARTER TO MOTOR)	1
9	10740	CONDUIT LOCK NUT 3/4 NP	1
10	16539	STRAIN RELIEF 90D X 3/4NPT .50625	1
11	36149	CORD WIRE 10/3 X 70"L, POWER	1
12	40037	PLUG, LOCKING 20A/250V L6-20P	1
13	40000	CONNECTOR, LOCKING 20A/250V L6-20C	1
14	10982	TIE, CABLE, BLACK NYLON 11-1/4"	4
15	11732	SCREW, MACHINE 10-32 X 1-3/4 RHP	2
	10384	SCREW, MACHINE 10-32 X 1 RHP	1
16	10832	NUT, KEPS LOCK 10-32 ZINC	3
17	36146	LIFTING BAIL/MOTOR MOUNT, 3&5 HP	1
18	10802	BOLT, CARRIAGE 3/8-16 X 1 ZINC	4
19	10025	WASHER, FLAT 3/8 SAE ZINC	4
20	10811	WASHER, LOCK 3/8 ZINC	4
21	10404	NUT, HEX 3/8-16 ZINC	4
22	11729	BOLT, TAP 3/8-24 X 1-3/4(FULL THD.)	4
23	10025	WASHER, FLAT 3/8 SAE ZINC	16
24	10011	SPACER, STEEL 5/80D X 3/8ID X 3/8T	4
25	10014	NUT, HEX 3/8-24 ZINC	4
26	10004	NUT, HEX LOCK 3/8-24 ZINC	4
27	36147	SHEAVE 4"OD X 1GR.A X 1-1/8"BORE	1
28	36013	SHEAVE 6"OD X 1GR.A X 3/4"BORE	1
29	36108	TRANS. INPUT KEY 3/16SQ X 1 (INCLUDED W/ TRANSMISSION)	1
30	10249	BELT AX-31	2
31	36072	COVER, BELT, TROWEL (4-3/16" WIDTH)	1
32	10819	BOLT, CARRIAGE 5/16-18 X 1 FULL THD	3
33	10213	WASHER, FLAT 5/16 SAE ZINC	3
34	10801	WASHER, LOCK 5/16 ZINC	3
35	10054	NUT, HEX 5/16-18 ZINC	3



## ILLUSTRATION 15: MOTOR GROUPING FOR MODEL T464-5

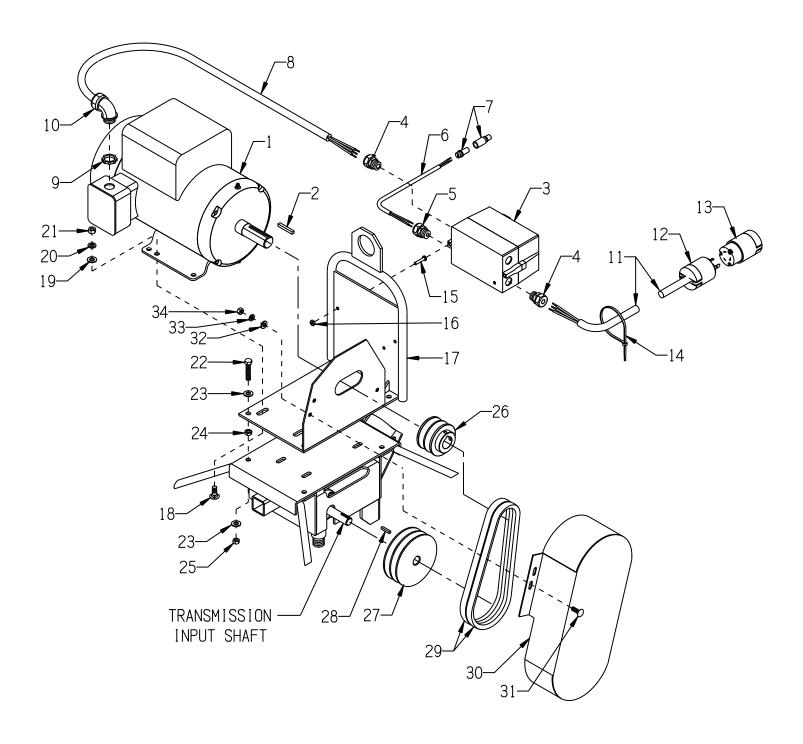

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



P/	PARTS LISTING - ILLUSTRATION 15: MOTOR GROUPING FOR MODEL T464-5			
ITEM#	PART#	DESCRIPTION	QTY.	
1	81026	MOTOR, BALDOR 5HP-1PH 60HZ 3450RPM	1	
	40404	REPLACEMENT PARTS:		
	16121 16164	CAPACITOR, START, BALDOR EC1161C06SP CAPACITOR, RUN, BALDOR #OC3040F09SP	2	
	16540	THERMAL PROT. (RESET BUTTON) TPBRT25DB	1 1	
2		KEY 1/4SQ. X 1-3/4 (INCLUDED W/ MOTOR)	1	
3	16454	STARTER ACI #128827 RESET ONLY 200/240V COIL 17.5-21.5A O/L	1	
		REPLACEMENT PARTS:		
	16617	STARTER CONTACTOR W/ COIL ACI SK18.310-230	1	
	16622 16637	STARTER AC COIL 200/240V-60HZ STARTER OVERLOAD RELAY 17.5-21.5 AMP	1 1	
4	41130	STRAIN RELIEF 1/2NPT X .550650"	2	
5	16190	STRAIN RELIEF 1/2NPT X .250350"	1	
6	36138	CORD WIRE 16/2 X 15"L (STARTER TO CONNECTOR)	1	
7	36131	CONNECTOR PLUG, SEALED 246-4402	1	
	36132	CONNECTOR RECEPT., SEALED 246-4414	1	
	36133	CONTACT, PIN 246-4424	2	
	36134	CONTACT, SOCKET 246-4428	2	
8	36148	CORD WIRE 10/3 X 32"L (STARTER TO MOTOR)	1	
9	10740	CONDUIT LOCK NUT 3/4 NP	1	
10	16539	STRAIN RELIEF 90D X 3/4NPT .50625	1	
11	36149	CORD WIRE 10/3 X 70"L, POWER	1	
12	40037	PLUG, LOCKING 20A/250V L6-20P	1	
13	40000	CONNECTOR, LOCKING 20A/250V L6-20C	1	
14	10982	TIE, CABLE, BLACK NYLON 11-1/4"	4	
15	11732	SCREW, MACHINE 10-32 X 1-3/4 RHP	2	
40	10384	SCREW, MACHINE 10-32 X 1 RHP	1	
16	10832	NUT, KEPS LOCK 10-32 ZINC	3	
17	36146	LIFTING BAIL/MOTOR MOUNT, 3&5 HP	1	
18	10802	BOLT, CARRIAGE 3/8-16 X 1 ZINC	4	
19	10025	WASHER, FLAT 3/8 SAE ZINC	4	
20	10811	WASHER, LOCK 3/8 ZINC	4	
21	10404	NUT, HEX 3/8-16 ZINC	4	
22	11729	BOLT, TAP 3/8-24 X 1-3/4(FULL THD.)	4	
23	10025	WASHER, FLAT 3/8 SAE ZINC	8	
24	11725	NUT, HEX JAM 3/8-24 ZINC	4	
25	10004	NUT, HEX LOCK 3/8-24 ZINC	4	
26	79023	SHEAVE 3"OD X 2GR.B X 1-1/8"BORE	1	
27	77058	SHEAVE 5"OD X 2GR.B X 3/4"BORE	1	
28	36108	TRANS. INPUT KEY 3/16SQ X 1 (INCLUDED W/ TRANSMISSION)	1	
29	10234	BELT 5L-290 (21/32" X 29")	2	
30	36072	COVER, BELT, TROWEL (4-3/16" WIDTH)	1	
31	10819	BOLT, CARRIAGE 5/16-18 X 1 FULL THD	3	
32	10213	WASHER, FLAT 5/16 SAE ZINC	3	
33	10801	WASHER, LOCK 5/16 ZINC	3	
34	10054	NUT, HEX 5/16-18 ZINC	3	



## WIRING DIAGRAM FOR STARTER & SWITCH

### INCOMING POWER GRN BLK STARTER **BLK JUMPER** BLK JUMPER BLK JUMPER A2 A 1 L2 L3 L1 BĿK NO 13 PUSHBUTTON NC 21 N.O. SWITCH CONTACTOR SK18.311-XXX NC 22 GROUND NO 14 T 1 T2 Т3 TERM. 🗘 **OVERLOAD** NC NO WHT 98 95 96 97 T2 ТЗ T1 BLK JUMPER **BLK JUMPER** BLK WHT GRN **GROUND** TERM. COLOR CODES MOTOR BLK = BLACKSEE MOTOR WIRING DIAGRAMS GRN = GREEN WHT = WHITE

Printed in USA ©2012 JWA

Page 24


100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326

Fax (301) 663-1607 • 1-800-447-3326



## WIRING DIAGRAM FOR LEESON 1.5 HP MOTOR


LEESON CAT. NO. 113769.00 1.5 H.P., 1 PHASE, 60 HERTZ, 1725 RPM, 115 VOLT, 13.0 FULL LOAD AMPS

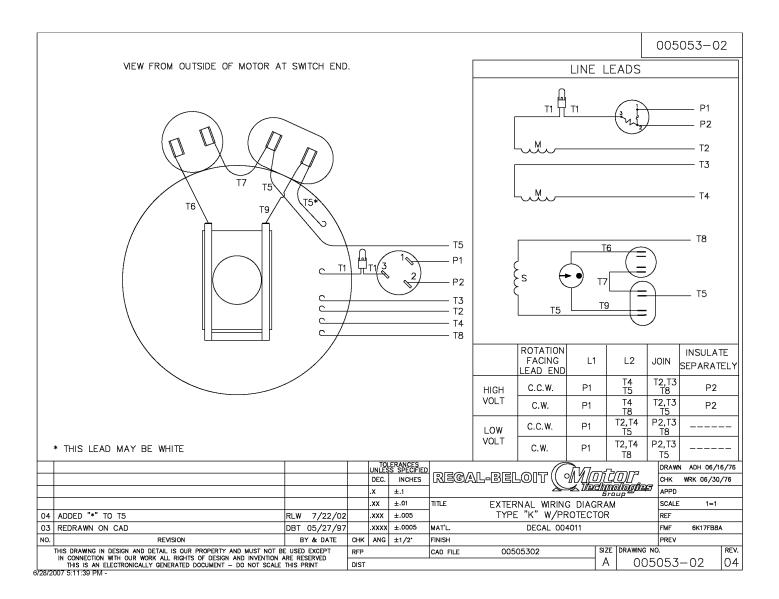



## WIRING DIAGRAM FOR BALDOR 3 HP MOTOR

## BALDOR CAT. NO. L3606T 3 H.P., 1 PHASE, 60 HERTZ, 3450 RPM, 230 VOLT, 14.5 FULL LOAD AMPS

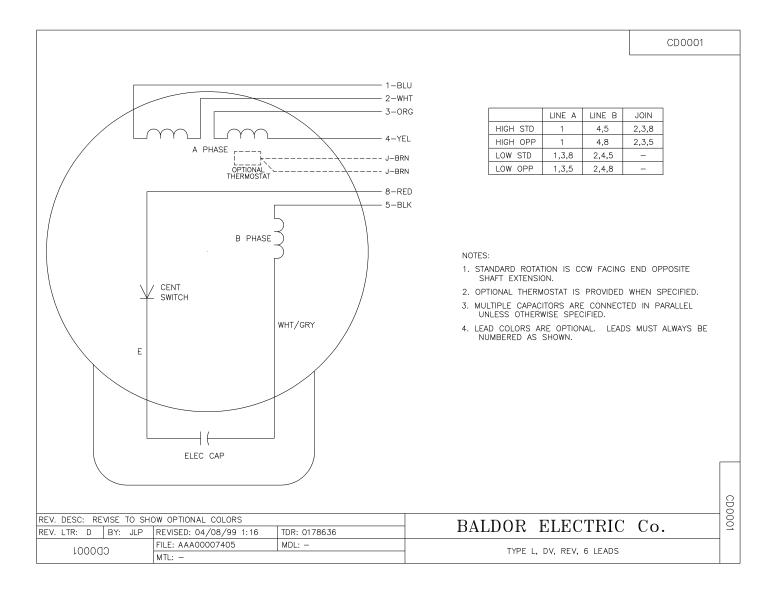


Printed in USA ©2012 JWA Page 26 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



## WIRING DIAGRAM FOR BALDOR 5 HP MOTOR

BALDOR CAT. NO. L3608TM 5 H.P., 1 PHASE, 60 HERTZ, 3450 RPM, 230 VOLT, 19.5 FULL LOAD AMPS

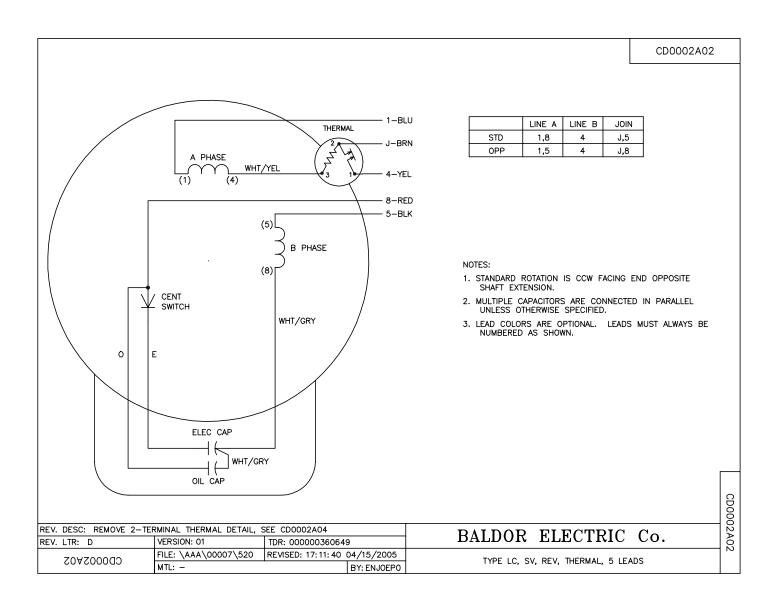



#### LIMITED EQUIPMENT WARRANTY OF SALE - TERMS & CONDITIONS

Equipment Development Company, Inc. herein referred to as EDCO (Seller) warrants that each new unit manufactured by EDCO to be free from defects in material and workmanship in normal use and service for a period of (1) one year (except for the cutter drum assembly on all model concrete/asphalt planes, in which case the warranty period shall be 90 days) from date of shipment to the original retail or equipment rental center owner.

Accessories or equipment furnished and installed on the product by EDCO but manufactured by others, including, but not limited to engines, motors, electrical components, transmissions etc., shall carry the accessory manufacturers own warranty.

EDCO will, at its option, repair or replace, at the EDCO factory or at a point designated by EDCO, any part which shall appear to the satisfaction of EDCO inspection to have been defective in material or workmanship.

EDCO reserves the right to modify, alter and improve any part or parts without incurring any obligation to replace any part or parts previously sold without such modified, altered or improved part or parts.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory, or otherwise created under applicable law including, but not limited to the warranty of merchantability and the warranty of fitness for a particular purpose in no event shall seller or the manufacturer of the product be liable for special, incidental, or consequential damages, including loss of profits, whether or not caused by or resulting from the negligence of seller and/or the manufacturer of the product unless specifically provided herein. In addition, this warranty shall not apply to any products or portions there of which have been subjected to abuse, misuse, improper installation, maintenance, or operation, electrical failure or abnormal conditions and to products which have been tampered with, altered, modified, repaired, reworked by anyone not approved by seller or used in any manner inconsistent with the provisions of the above or any instructions or specifications provided with or for the product

#### **FORCE MAJEURE**

Seller's obligation hereunder are subject to, and Seller shall not be held responsible for, any delay or failure to make delivery of all or any part of the Product due to labor difficulties, fires, casualties, accidents, acts of the elements, acts of God, transportation difficulties, delays by a common carrier, inability to obtain Product, materials or components or qualified labor sufficient to timely perform part of or all of the obligations contained in these terms and conditions, governmental regulations or actions, strikes, damage to or destruction in whole or part of manufacturing plant, riots, terrorist attacks or incidents, civil commotions, warlike conditions, flood, tidal waves, typhoon, hurricane, earthquake, lightning, explosion or any other causes, contingencies or circumstances within or without the United States not subject to the Seller's control which prevent or hinder the manufacture or delivery of the Products or make the fulfillment of these terms and conditions impracticable. In the event of the occurrence of any of the foregoing, at the option of Seller, Seller shall be excused from the performance under these Terms and Conditions, or the performance of the Seller shall be correspondingly extended.

This document sets forth the terms and conditions pursuant to which the purchaser ("Purchaser") will purchase and Equipment Development Co.Inc. ("Seller")will sell the products, accessories, attachments (collectively the Products") ordered by the Purchaser. These terms and conditions shall govern and apply to the sale of Seller's Products to Purchaser, regardless of any terms and conditions appearing on any purchase order or other forms submitted by Purchaser to Seller, or the inconsistency of any terms therein and herein.

#### 1. PRICE

All prices set forth on any purchase order or other document are F.O.B. Sellers facility or distribution point, as may be determined by Seller (F.O.B.Point). All prices are exclusive of any and all taxes, including, but not limited to, excise, sales, use, property or transportation taxes related to the sale or use of the Products, now or hereafter imposed, together with all penalties and expenses. Purchaser shall be responsible for collecting and/or paying any and all such taxes, whether or not they are stated in any invoice for the Products. Unless otherwise specified herein, all prices are exclusive of inland transportation, freight, insurance and other costs and expenses relating to the shipment of the Products from the F.O.B. point to Purchaser's facility. Any prepayment by Seller of freight insurance and other costs shall be for the account of Purchaser and shall be repaid to Seller.

#### 2. PAYMENT TERMS

Payment terms are as follows. 2% 10 days (to approved and qualified accounts). Net 30 days. This is a cash discount for invoices paid within 10 days after the invoice date, regardless of date of receipt of shipment. This is not a trade discount and will not be granted to accounts that do not adhere to stated terms.

\*All past due accounts are subject to a late payment fee of 1.5% per month or a maximum allowed by law if different, along with the expenses incidental to collection including reasonable attorney's fees and costs.

\*Seller reserves the right to hold shipments against past due accounts.

\*Seller reserves the right to alter payment terms.

#### 3. FREIGHT TERMS

All shipments will be made F.O.B. shipping point as designated in these Terms and Conditions, and title shall pass at the F.O.B. point. Delivery to the initial common carrier shall constitute delivery to the Purchaser. Any claims for loss or damage during shipment are to be filed with carrier by the Purchaser. Seller will not assume responsibility for the performance of the carrier.

Back orders will be shipped in the most practical fashion with charges consistent with our freight policy established with the original order. UPS, FED EX, MAIL or shipments by other couriers are subject to the same terms and conditions as outlined in paragraph #3"Freight Terms".

#### 4. DELIVERY, DAMAGES, SHORTAGES

Seller shall use reasonable efforts to attempt to cause the Products to be delivered as provided for in these Terms & Conditions. Delivery to the initial common carrier shall constitute the delivery to the Purchaser. Sellers responsibility, in so far as transportation risks are concerned ceases upon the delivery of the Products in good condition to such carrier at the F.O.B. point and all the Products shall be shipped at the Purchaser's risk. Seller shall not be responsible or liable for any loss of income and/or profits, or incidental, special, consequential damages resulting from Seller's delayed performance in shipment and delivery.

#### 5. RETURN OF DEFECTIVE PRODUCTS

Defective or failed material shall be held at the Purchaser's premises until authorization has been granted by Seller to return or dispose of Products. Products that are to be returned for final inspection must be returned Freight Prepaid in the most economical way. Credit will be issued for material found to be defective upon Seller's inspection based on prices at time of purchase.

#### 6. PRODUCTS ORDERED IN ERROR

Products may be returned, provided that claim is made and Seller is notified within 7 days of receipt of Products, and the Products are in original buyer's possession not more than 30 days prior to return, subject to Seller's approval. If Products are accepted for return, they must be Freight Prepaid and buyer will be charged a minimum of 15% restocking charge, plus a charge back for outbound freight charges if the original order was shipped prepaid. Returns are not accepted for any Products that are specifically manufactured to meet the buyer's requirement of either specifications or quantity.

#### **AGREEMENTS**

These Terms and Conditions constitute the entire agreement between Seller and Purchaser as it relates to terms and conditions of sale, and supersedes any and all prior oral or written agreements, correspondence, quotations or understandings heretofore in force between the parties relating to the subject matter hereof. There are no agreements between Seller and Purchaser with respect to the Product herein except those specifically set forth in and made part of these terms and conditions. Any additional terms, conditions and/or prices are rejected by Seller.

These terms and conditions may be modified, cancelled or rescinded only by a written agreement of both parties executed by their duly authorized agents.

USE ONLY GENUINE EDCO PARTS & ACCESSORIES For your own safety, the safety of others and the life of your machine.

Equipment Development Company, Inc.

Printed in USA ©2012 JWA Page 28 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



