REVISED STARTING SERIAL # 120510074

PARTS LIST MANUAL

VARIABLE SPEED ELECTRIC POWER TROWELS

(SPECIFICALLY FOR EPOXY MORTARS)



SKU#	MODEL#	SIZE	RPM	MOTOR OPTION
C84400	T244VS-2L	24"		
C84100	T304VS-2L	30"	0 - 88	LEESON 2 HP
C84200	T364VS-2L	36"		





READ AND UNDERSTAND THE OPERATORS INSTRUCTION MANUAL *THOROUGHLY*BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.

Death or serious injury could occur if this machine is used improperly.



SAFETY MESSAGES

 Safety Instructions are proceeded by a graphic alert symbol of DANGER, WARNING, or CAUTION.



Indicates an imminent hazard which, if not avoided, will result in death or serious injury.



Indicates an imminent hazard which, if not avoided, can result in death or serious injury.



Indicates hazards which, if not avoided, could result in serious injury and or damage to the equipment.

GASOLINE/PROPANE POWERED EQUIPMENT



 Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



- Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas, and with a cool engine.
- Small gasoline engines produce high concentrations of carbon monoxide (CO) example: a 5 HP 4 cycle engine operation in an enclosed 100,000 cu. ft. area with only one change of air per hour is capable of providing deadly concentrations of CO in less than fifteen minutes. Five changes of air in the same area will produce noxious fumes in less than 30 minutes. Gasoline or propane powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, headache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur get into fresh air and seek medical attention immediately.

ELECTRICAL POWERED EQUIPMENT



Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

- Check all electrical cables be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of this equipment.
- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to <u>all</u> local codes and ordinances.
- NOTE: In the event of a malfunction or breakdown, grounding
 provides a path of least resistance for the electric current to
 dissipate. The motor is equipped with a grounded plug and
 must be connected to an outlet that is properly installed and
 properly grounded. DO NOT modify the plug provided on the
 motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.
- Switch motor OFF <u>before</u> disconnecting power.

- Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.
- Unplug power cord at the machine when not in use and before servicing.

GENERAL INSTRUCTIONS

- Equipment should only be operated by trained personnel in good physical condition and mental health (not fatigued). The operator and maintenance personnel must be physically able to handle the bulk weight and power of this equipment.
- This is a one person tool. Maintain a safe operating distance
 to other personnel. It is the <u>operators' responsibility</u> to keep
 other people (workers, pedestrians, bystanders, etc.) away
 during operation. Block off the work area in all directions with
 roping, safety netting, etc. for a safe distance. Failure to do so
 may result in others being injured by flying debris or exposing
 them to harmful dust and noise.
- This equipment is intended for commercial use only.
- For the operator's safety and the safety of others, always keep all guards in place during operation.
- · Never let equipment run unattended.













 Personal Protection Equipment and proper safety attire must be worn when operating this machinery. The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require. Hearing protection MUST be used (operational noise levels of this equipment may exceed 85db). Eye protection MUST be worn at all times.



Keep body parts and loose clothing away from moving parts. Failure to do so could result in dismemberment or death.

· Do not modify the machine.

Stop motor/engine when adjusting or servicing this equipment.



Maintain a safe operating distance from flammable materials. Sparks from the cutting-action of this machine can ignite flammable materials or vapors.

DUST WARNING



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:

- · Lead from lead-based paints, and
- Crystalline silica from bricks and concrete and other masonry products.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326

Fax (301) 663-1607 • 1-800-447-3326



PARTS LIST MANUAL

VARIABLE SPEED ELECTRIC POWER TROWELS

(SPECIFICALLY FOR EPOXY MORTARS)

TABLE OF CONTENTS

<u>Section</u>	Page Number
Safety Messages and General Instructions	2
How To Order Replacement Parts	
Illustration 1: Handle Bar, Pitch Lever & Control Knob Gro	ouping 4, 5
Illustration 2: Handle Adjustable Belly Bar Grouping	6
Illustration 3: Lift Handle Grouping	7
Illustration 4: Frame , Transmission & Spider Grouping	8, 9
Illustration 5: Spider Assembly	
Illustration 6: Bolt-On Blades & Adapter for 24" Trowel	
Illustration 7: Bolt-On Blades & Adapter for 30" Trowel	
Illustration 8: Bolt-On Blades & Adapter for 36" Trowel	13
Illustration 9: Optional Quick Change Blades & Adapters .	
Illustration 10: Optional "Tote-A-Trowel"	
Illustration 11: Belt Drive Grouping	
Illustration 12: Motor Grouping	
Illustration 13: Wiring Diagram	20
Illustration 14: Motor Control Trimpot Calibration	21
Blank Page	
Notes	23
Limited Equipment Warranty of Sale - Terms & Conditions	S 24 (Back Page)

HOW TO ORDER REPLACEMENT PARTS

- ☐ To insure product safety and reliability, always use genuine EDCO replacement parts when making repairs to the equipment.
- □ When calling for parts, specify the MODEL and SERIAL number of the machine, which can be found on the NAME PLATE. Keep that information in the space provided. In addition to this information, give part number, description, and quantity as listed on the parts list to your parts representative.
- Please note: Due to improvements and changes in the equipment, the illustrations shown may be different than the actual machine.

FILL IN INFORMATION BELOW


Model #	 		
Serial # _			

Date of Purchase

SKU# ____



ILLUSTRATION 1: HANDLE BAR, PITCH LEVER & CONTROL KNOB GROUPING

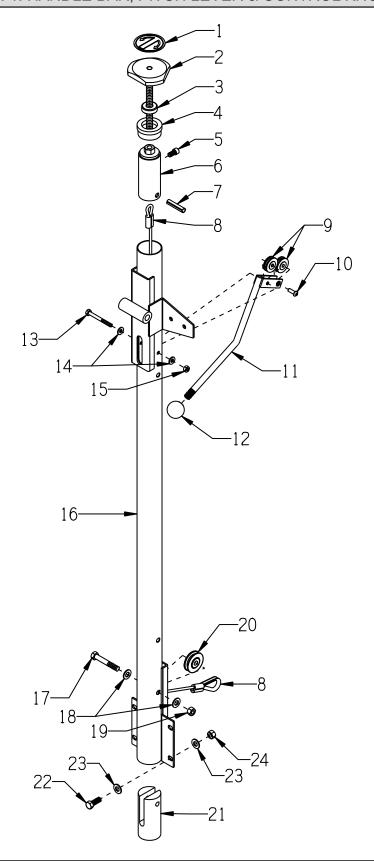

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326


Fax (301) 663-1607 • 1-800-447-3326



	HANDL	PARTS LISTING - ILLUSTRATION 1: LE BAR, PITCH LEVER & CONTROL KNOB GROUPING	
ITEM#	PART#	DESCRIPTION	QTY.
1	3661	DECAL, BLADE ANGLE - FLAT/TILT	1
2	49014	KNOB, CONTROL W/ 1/2-13 X 6-3/4"ROD	1
3	3642	BEARING, THRUST BALL 1/2	1
4	36078	HANDLE TOP INSERT	1
5	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	1
6	36080	LINKAGE	1
7	11728	PIN, ROLL 3/8 X 1-3/4	1
8	36082	CABLE, CONTROL 3/16 X 51"L	1
	4610	CABLE, THIMBLE 3/16"	1
	3618	SLEEVE, 3/16" CABLE OVAL NICOPRESS	2
9	14082	PULLEY BEARING 1-1/4DIA. X 1/4BORE	2
10	10884	SCREW, SKT. BUTTON HD. 1/4-20 X 3/4	1
11	36081	LEVER, PITCH	1
12	14023	KNOB, BALL 1-3/8 W/ 1/2-13THD, BLK.	1
13	10001	SCREW, CAP 1/4-20 X 2-1/2	1
14	10602	WASHER, FLAT 1/4 SAE ZINC	2
15	10150	NUT, HEX NYLON LOCK 1/4-20	1
16	36070	HANDLE BAR	1
17	10393	SCREW, CAP 3/8-24 X 2-1/2	1
18	10025	WASHER, FLAT 3/8 SAE ZINC	2
19	10058	NUT, LOCK 3/8-24 W/ NYLON PATCH	1
20	3621	PULLEY BEARING 1-3/4DIA. X 3/8BORE	1
21	36077	ROLLER GUIDE	1
22	10021	SCREW, CAP 3/8-24 X 1	4
23	10025	WASHER, FLAT 3/8 SAE ZINC	4
24	10004	NUT, HEX LOCK 3/8-24 ZINC	4



ILLUSTRATION 2: ADJUSTABLE HANDLE BELLY BAR GROUPING

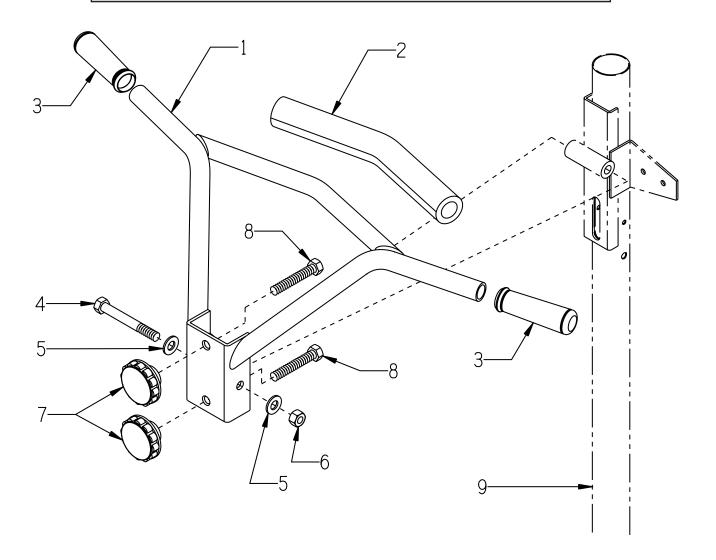

ITEM#	PART#	DESCRIPTION	QTY.
1	36071	HANDLE BELLY BAR, ADJUSTABLE	1
2	36083	PADDING, BELLY BAR	1
3	10608	GRIP, HAND 1" MODEL AT	2
4	81001	SCREW, CAP 1/2-13 X 4	1
5	10312	WASHER, FLAT 1/2 SAE ZINC	2
6	10155	NUT, HEX NYLON LOCK 1/2-13	1
7	36063	KNOB, FLUTED 1/2-13 X 2-1/2"DIA.	2
8	10340	BOLT, TAP 1/2-13 X 3 (FULL THREAD)	2
9	36070	HANDLE BAR (REF. TO ILLUS. 1, ITEM 16)	1


Printed in USA

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 \bullet 1-800-638-3326

Fax (301) 663-1607 • 1-800-447-3326 Website: www.edcoinc.com Email: sales@edcoinc.com




ILLUSTRATION 3: LIFT HANDLE GROUPING

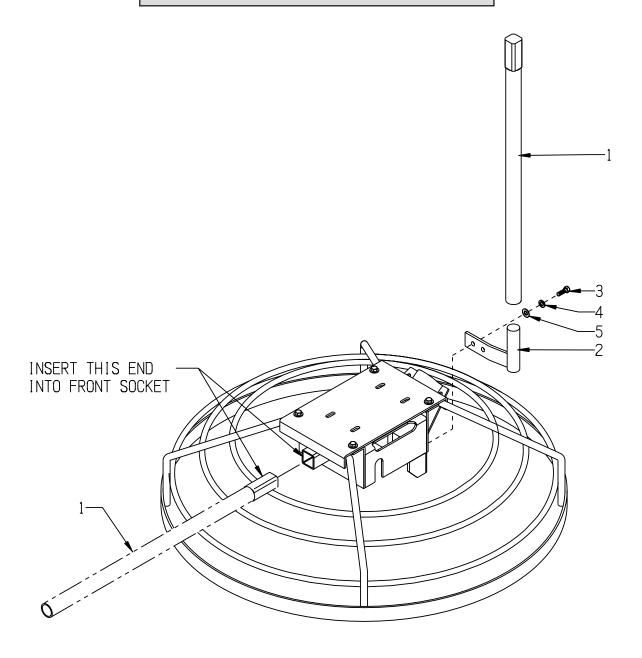

ITEM#	PART#	DESCRIPTION	QTY.
1	36091	HANDLE, LIFT	1
2	36092	HOLDER, LIFT HANDLE	1
3	10021	SCREW, CAP 3/8-24 X 1	2
4	10811	WASHER, LOCK 3/8 ZINC	2
5	10025	WASHER, FLAT 3/8 SAE ZINC	2



ILLUSTRATION 4: FRAME, TRANSMISSION & SPIDER GROUPING

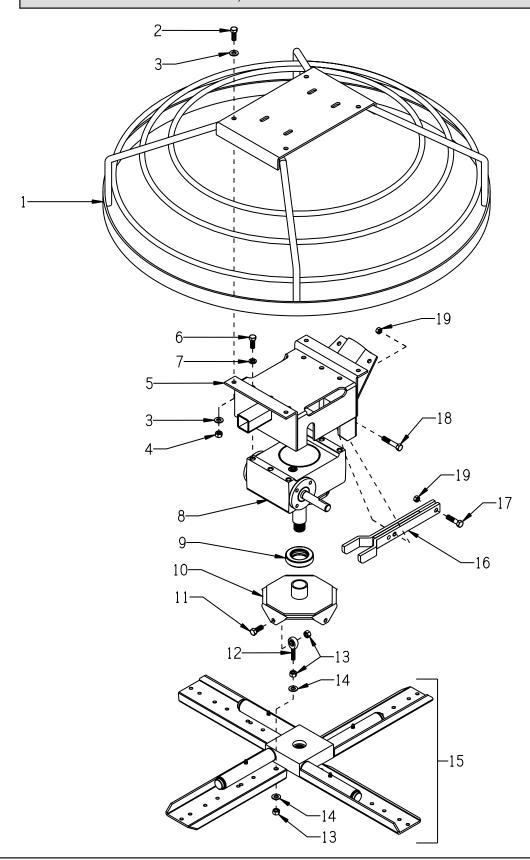

Printed in USA ©2012 JWA

Page 8


100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



		PARTS LISTING - ILLUSTRATION 4:	
ITEM#	PART#	FRAME, TRANSMISSION & SPIDER GROUPING DESCRIPTION	QTY.
1		FRAME & GUARD RING	1
	36065	24" TROWEL	
	36066	30" TROWEL	
	36067	36" TROWEL	
2	11729	BOLT, TAP 3/8-24 X 1-3/4 FULL THD.	4
3	10025	WASHER, FLAT 3/8 SAE ZINC	8
4	10004	NUT, HEX LOCK 3/8-24 ZINC	4
5	36069	MOUNT, TRANSMISSION	1
6	10055	SCREW, CAP 3/8-16 X 1	6
7	10025	WASHER, FLAT 3/8 SAE ZINC	6
8	3664	TRANSMISSION 20:1 RATIO	1
9	3609	BEARING, THRUST BALL 1-1/2"ID X 2-19/32"OD X 5/8"THK	1
10	3626	PLATE, PITCH ADJUSTMENT 24, 30, & 36" TROWELS	1
11	10021	SCREW, CAP 3/8-24 X 1	4
12	3605	ROD END, MALE 3/8-24	4
13	10004	NUT, HEX LOCK 3/8-24 ZINC	12
14	10025	WASHER, FLAT 3/8 SAE ZINC	8
15		SPIDER ASSEMBLY (REFER TO ILLUS. 5)	1
	36084	24" TROWEL (8-1/2" ARMS)	
	36085	30" TROWEL (12" ARMS)	
	36086	36" TROWEL (13" ARMS)	
16	3625	FORK	1
17	10816	SCREW, CAP 3/8-24 X 1-1/2	1
18	10030	SCREW, CAP 3/8-24 X 2	1
19	10004	NUT, HEX LOCK 3/8-24 ZINC	2



ILLUSTRATION 5: SPIDER ASSEMBLY

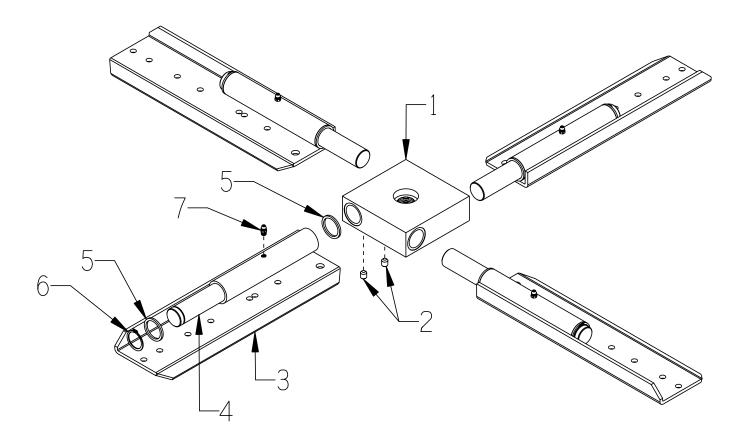


ITEM#	PART#	DESCRIPTION	QTY.
1	3637	HUB, 4 BLADE TROWEL	1
2	10052	SCREW, SET 5/16-18 X 3/8	8
3		ARM, BLADE	4
	2402	8-1/2" ARM, 24" TROWEL ,BOLT-ON BLADES	
	3666	12" ARM, 30" TROWEL, BOLT-ON OR QUICK-CHANGE	
	36007	13" ARM, 36" TROWEL, BOLT-ON OR QUICK-CHANGE	
4	3635	SHAFT, BLADE ARM 9-11/16"L	4
5	3629	SPACER, ALUM. 1.25 X 1.017 X .090	4
6	10906	RETAINING RING, EXT. 1"	4
7	10808	FITTING, GREASE 1/4-28 STRAIGHT	4

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326

Fax (301) 663-1607 • 1-800-447-3326




ILLUSTRATION 6: BOLT-ON BLADES & ADAPTER FOR 24" TROWEL

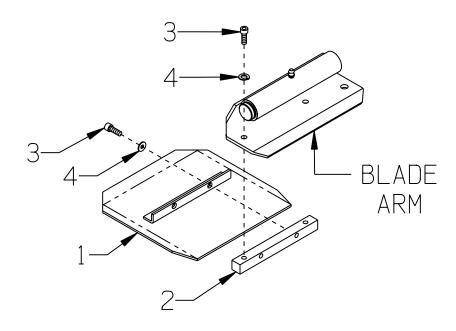

ITEM#	PART#	DESCRIPTION	QTY.
1		BLADE	4
	40470	C-4 COMBINATION TROWEL BLADE 8 X 8 (SHOWN)	
	40480	F-4 FINISH TROWEL BLADE 6 X 8	
	40490	M-4 FLOAT TROWEL BLADE 9 X 8	
2	2406	BAR, BLADE MOUNTING 5/8"SQ. X 6"	4
3	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	16
4	10801	WASHER, LOCK 5/16 ZINC	16

ILLUSTRATION 7: BOLT-ON BLADES & ADAPTER FOR 30" TROWEL

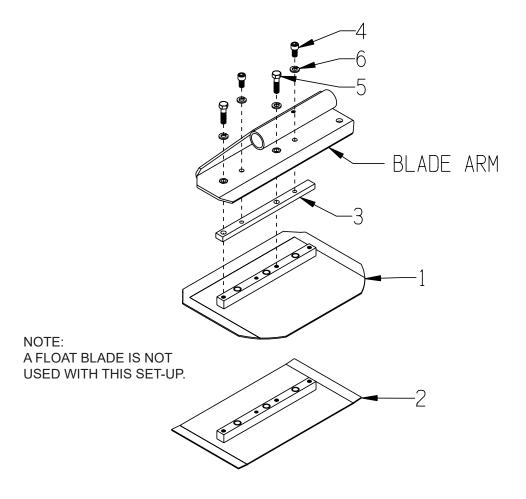


ITEM#	PART#	DESCRIPTION	QTY.
1	40270-C	C-2C COMBINATION TROWEL BLADE 8 X 10-1/2	4
2	40280-C	F-2C FINISH TROWEL BLADE 6 X 10-1/2	4
3	3639	ADAPTER BAR 3/8" X 5/8" X 8-1/4"	4
4	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	8
5	10606	SCREW, HEX HD. CAP 5/16-18 X 1-1/4	8
6	10801	WASHER, LOCK 5/16 ZINC	20

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326

Fax (301) 663-1607 • 1-800-447-3326




ILLUSTRATION 8: BOLT-ON BLADES & ADAPTER FOR 36" TROWEL

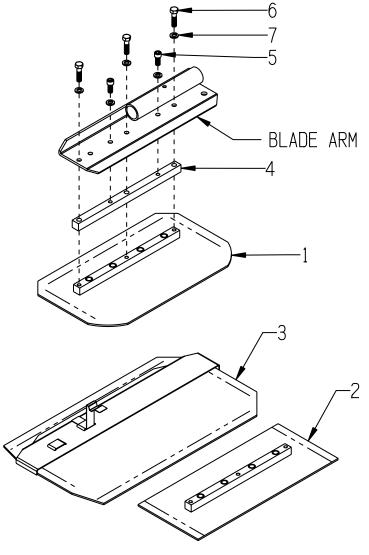

ITEM#	PART#	DESCRIPTION	QTY.
1	40040-C	C-1C COMBINATION TROWEL BLADE 8 X 14	4
2	40050-C	F-1C FINISH TROWEL BLADE 6 X 14	4
3	40060-CE	M-1CE FLOAT TROWEL BLADE 10 X 14 (SLIPS OVER FINISH BLADE)	4
4	36016	ADAPTER BAR 5/8"SQ. X 10-1/4"	4
5	11639	SCREW, SKT. HD. CAP 5/16-18 X 5/8	8
6	10606	SCREW, HEX HD. CAP 5/16-18 X 1-1/4	12
7	10801	WASHER, LOCK 5/16 ZINC	20

ILLUSTRATION 9: OPTIONAL QUICK CHANGE BLADES & ADAPTERS FOR 30" & 36" TROWELS

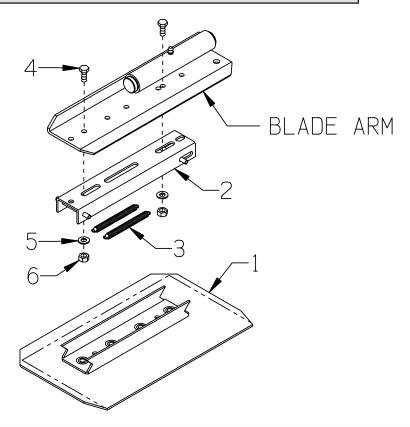


ITEM#	PART#	DESCRIPTION	QTY.
1		COMBINATION BLADE (SHOWN)	4
	40270	C-2, 8" x 11"	
	40040	C-1, 8" x 14"	
1		FLOAT BLADE	4
	40290	M-2, 9" x 11"	
	40060	M-1, 9" x 14"	
1		FINISH BLADE	4
	40280	F-2, 6" x 11"	
	40050	F-1, 6" x 14"	
2	40197	ADAPTER COMPLETE "A" 10-1/16"L	4
		(INCLUDES SPRINGS, ITEM 3)	
3	3636	SPRING, EXTENSION 6"L ("A" ADAPTER)	8
4	10053	SCREW, CAP 5/16-18 X 3/4	8
5	10213	WASHER, FLAT 5/16 SAE ZINC	8
6	10807	NUT, HEX LOCK 5/16-18 ZINC	8

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA

Printed in USA ©2012 JWA Page 14 Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326 Website: www.edcoinc.com Email: sales@edcoinc.com




ILLUSTRATION 10: OPTIONAL "TOTE-A-TROWEL"

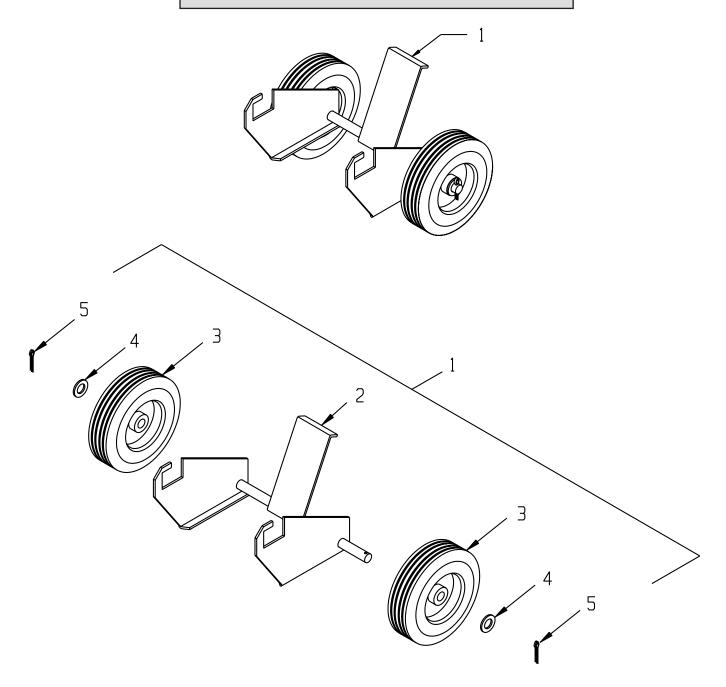

ITEM#	PART#	DESCRIPTION	QTY.
1	81400	TAT-II "TOTE-A-TROWEL" TRANSPORTER (INCLUDES ITEMS 2 THRU 5)	1
2	81401	FRAME	1
3	79013	WHEEL, 8 X 2-1/2 X 3/4"BRG.POLY HUB	2
4	10009	WASHER, FLAT 3/4 SAE ZINC	2
5	10306	PIN, COTTER 3/16 X 1-1/2	2



ILLUSTRATION 11: BELT DRIVE GROUPING

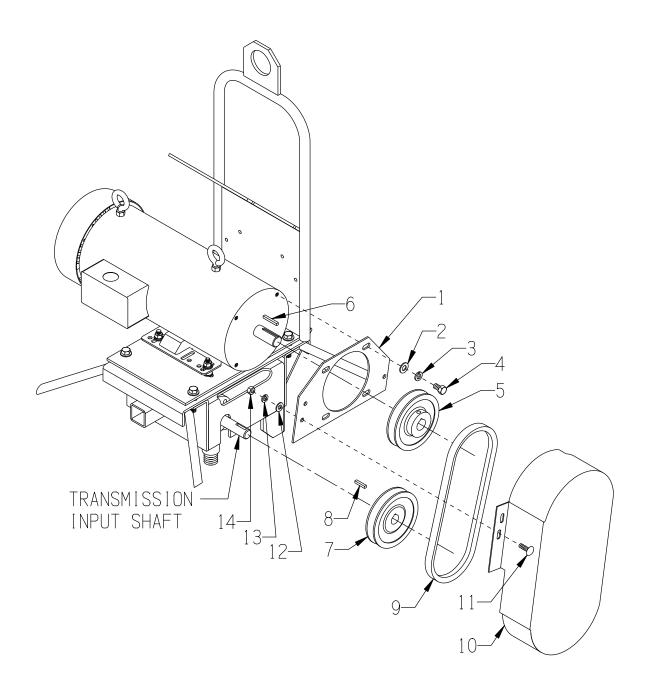


Printed in USA ©2012 JWA Page 16 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



PARTS LISTING - ILLUSTRATION 11: BELT DRIVE GROUPING					
ITEM#	PART#	DESCRIPTION	QTY.		
1	36089	MOUNT, BELT COVER, V.S. TROWEL	1		
2	10025	WASHER, FLAT 3/8 ZINC	4		
3	10811	WASHER, LOCK 3/8 ZINC	4		
4	10907	SCREW, CAP 3/8-16 X 3/4	4		
5	10550	SHEAVE 4.5"OD X 1GR.B X 7/8"BORE	1		
6		KEY (INCLUDED W/ MOTOR)	1		
7	10551	SHEAVE 4.5"OD X 1GR.B X 3/4"BORE	1		
8	36108	TRANS. INPUT KEY 3/16SQ X 1	1		
		(INCLUDED W/ TRANSMISSION)			
9	10023	BELT 5L-280	1		
10	36072	COVER, BELT, TROWEL (4-3/16" WIDTH)	1		
	36141	COVER, BELT, ELEC.TROWEL (3"WIDTH)	1		
11	10818	BOLT, CARRIAGE 5/16-18 X 3/4 F.T.	3		
12	10801	WASHER, LOCK 5/16 ZINC	3		
13	10213	WASHER, FLAT 5/16 SAE ZINC	3		
14	10054	NUT, HEX 5/16-18 ZINC	3		



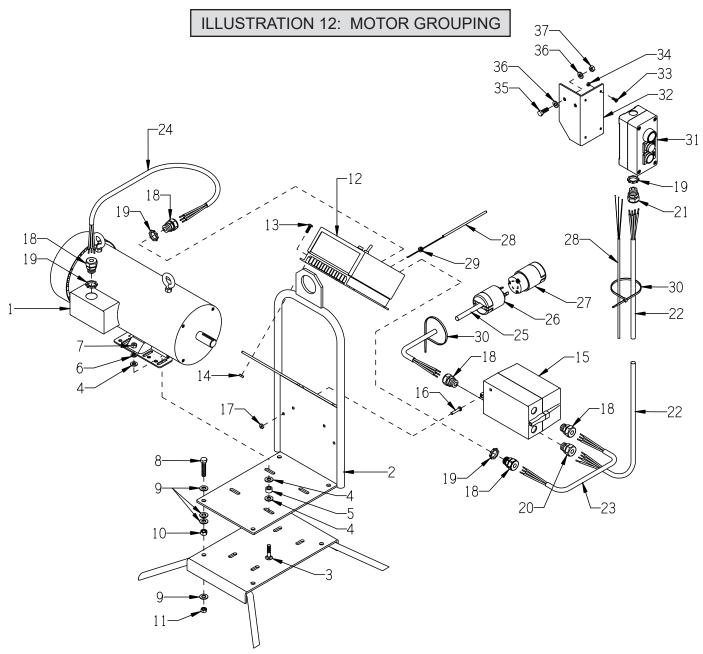

PARTS LISTING - ILLUSTRATION 12: MOTOR GROUPING						
ITEM#	PART #	DESCRIPTION	QTY.			
1	16052	MOTOR, LEESON 2HP-180VDC-1750RPM CAT. NO. 128010.00 NOTE: BASE IS FLIPPED AROUND 180°	1			
2	36142	LIFTING BAIL/MOTOR MOUNT, VS TROWEL	1			
3	10817	BOLT, CARRIAGE 5/16-18 X 1-1/2 F.T.	4			
4	10213	WASHER, FLAT 5/16 SAE ZINC	12			
5	10011	SPACER, STEEL 5/80D X 3/8ID X 3/8T	4			
6	10801	WASHER, LOCK 5/16 ZINC	4			
7	10054	NUT, HEX 5/16-18 ZINC	4			
8	11729	BOLT, TAP 3/8-24 X 1-3/4(FULL THD.)	4			

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA


Printed in USA ©2012 JWA Page 18 Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326



TEM # DESCRIPTION	QTY. 12 4 1 1 1 1 1 1 1 1 2
10	4 4 1 1 1 4 4 4 1 1
11 10004 NUT, HEX LOCK 3/8-24 ZINC 12 16111 CONTROL ASSEMBLY, ADJUSTIBLE SPEED INCLUDES:	4 1 1 1 4 4 4 1 1
12 16111 CONTROL ASSEMBLY, ADJUSTIBLE SPEED INCLUDES: 16111-S1 CONTROL CHASSIS, SPEEDMASTER 16111-S2 CONTROL HEAT SINK, SPEEDMASTER 13 10830 SCREW, MACHINE SHWH 10-32 X 1/2 NUT, HEX 5/16-18 ZINC 14 10832 NUT, KEPS LOCK 10-32 ZINC 10850 WASHER, FLAT #10 SAE ZINC (NOT SHOWN) 15 16604 STARTER ACI #128844 RESET ONLY (COMPLETE BOX) REPLACEMENT PARTS: 16617 STARTER CONTACTOR W/ COIL ACI SK18.310-230 STARTER AC COIL 200/240V-60HZ	1 1 1 4 4 4 1 1 1
INCLUDES: CONTROL CHASSIS, SPEEDMASTER CONTROL HEAT SINK, SPEEDMASTER CONTROL HEAT SINK, SPEEDMASTER 13	1 1 4 4 4 4 1 1 1 1
16111-S1	4 4 4 1 1 1 1
16111-S2 CONTROL HEAT SINK, SPEEDMASTER 13 10830 SCREW, MACHINE SHWH 10-32 X 1/2 NUT, HEX 5/16-18 ZINC 14 10832 NUT, KEPS LOCK 10-32 ZINC 10850 WASHER, FLAT #10 SAE ZINC (NOT SHOWN) 15 16604 STARTER ACI #128844 RESET ONLY (COMPLETE BOX) REPLACEMENT PARTS: STARTER CONTACTOR W/ COIL ACI SK18.310-230 16622 STARTER AC COIL 200/240V-60HZ	4 4 4 1 1 1 1
14 10832 NUT, KEPS LOCK 10-32 ZINC 10850 WASHER, FLAT #10 SAE ZINC (NOT SHOWN) 15 16604 STARTER ACI #128844 RESET ONLY (COMPLETE BOX) REPLACEMENT PARTS: 16617 STARTER CONTACTOR W/ COIL ACI SK18.310-230 16622 STARTER AC COIL 200/240V-60HZ	4 4 1 1 1 1
10850 WASHER, FLAT #10 SAE ZINC (NOT SHOWN) 15 16604 STARTER ACI #128844 RESET ONLY (COMPLETE BOX) REPLACEMENT PARTS: 16617 STARTER CONTACTOR W/ COIL ACI SK18.310-230 16622 STARTER AC COIL 200/240V-60HZ	1 1 1 1
15 16604 STARTER ACI #128844 RESET ONLY (COMPLETE BOX) REPLACEMENT PARTS: 16617 STARTER CONTACTOR W/ COIL ACI SK18.310-230 16622 STARTER AC COIL 200/240V-60HZ	1 1 1 1
REPLACEMENT PARTS: 16617 STARTER CONTACTOR W/ COIL ACI SK18.310-230 16622 STARTER AC COIL 200/240V-60HZ	1 1 1
16617 STARTER CONTACTOR W/ COIL ACI SK18.310-230 16622 STARTER AC COIL 200/240V-60HZ	1 1
16622 STARTER AC COIL 200/240V-60HZ	1 1
16635 STARTER OVERLOAD RELAY 11 3-16 AMP	
	2
16 11732 SCREW, MACHINE 10-32 X 1-3/4 RHP	
10384 SCREW, MACHINE 10-32 X 1 RHP	1
17 10832 NUT, KEPS LOCK 10-32 ZINC	3
18 41130 STRAIN RELIEF 1/2NPT X .550650"	5
19 10790 CONDUIT LOCK NUT 1/2 NP	4
20 40066 STRAIN RELIEF 1/2NPT X .350450"	1
21 28032 STRAIN RELIEF 1/2NPT X .450560" 22 36151 CORD WIRE 16/4 X 58"L	1
23 36152 CORD WIRE 10/4 X 56 L 23 36152 CORD WIRE 12/3 X 24"L	1
24 36153 CORD WIRE 12/3 X 34"L	1
25 36154 CORD WIRE 12/3 X 65"L	1
26 40037 PLUG, LOCKING 20A/250V L6-20P	1
27 40000 CONNECTOR, LOCKING 20A/250V L6-20C	1
28 36155 WIRE, CONTROL 22/3 X 65"L	1
29 11535 GROMMET 5/32ID X 7/64GRV. X 1/4GD	1
30 10982 TIE, CABLE, BLACK NYLON 11-1/4"	10
31 16602 SWITCH BOX, 3-BUTTON ACI 128896 (INCLUDES 2 BUTTONS ONLY)	1
NOTE: VARIABLE SPEED KNOB IS RELOCATED FROM THE CONTROL BOX. REPLACEMENTS:	1
16456-6 PUSH-BUTTON, GREEN W/ CONTACTOR	1
16456-7 PUSH-BUTTON, RED W/ CONTACTOR	
32 36156 BRACKET, V.S. REMOTE SWITCH BOX	1
33 11663 SCREW, MACHINE 8-32 X 1/2 RHCD ZINC	4
34 10462 NUT, KEPS LOCK 8-32 ZINC	4
35 10018 SCREW, CAP 1/4-20 X 3/4	2
36 10602 WASHER, FLAT 1/4 SAE ZINC	4
37 10861 NUT, KEPS LOCK 1/4-20 ZINC	2



ILLUSTRATION 13: WIRING DIAGRAM

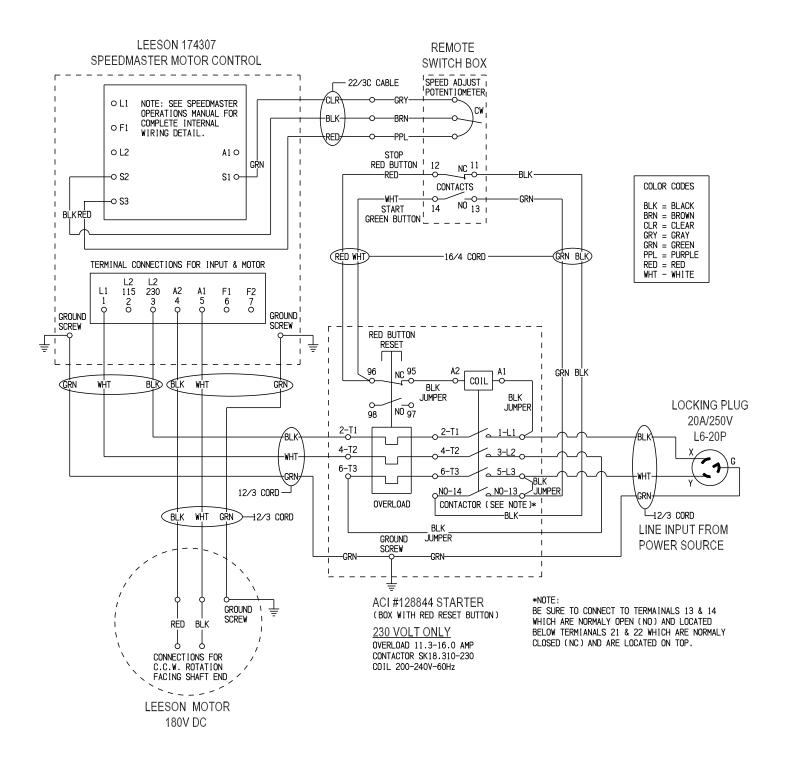


Printed in USA ©2012 JWA Page 20 100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326

Email: sales@edcoinc.com



ILLUSTRATION 14: MOTOR CONTROL TRIMPOT CALIBRATION

CIRCUIT BOARD - LOCATED INSIDE SPEEDMASTER MOTOR CONTROL BOX

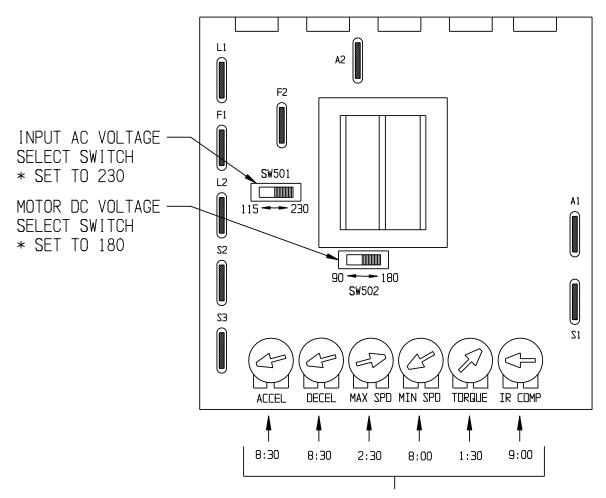

FACTORY SETTINGS ARE SET TO THESE "CLOCK" POSITIONS

NOTE:

FOR HEAVY LOADS - INCREASE "TORQUE" SETTING CLOCKWISE (4:00 MAXIMUM).



THIS PAGE IS LEFT BLANK INTENTIONALLY

Page 22



NOTES

Record here any repairs or changes made to the Equipment					



LIMITED EQUIPMENT WARRANTY OF SALE - TERMS & CONDITIONS

Equipment Development Company, Inc. herein referred to as EDCO (Seller) warrants that each new unit manufactured by EDCO to be free from defects in material and workmanship in normal use and service for a period of (1) one year (except for the cutter drum assembly on all model concrete/asphalt planes, in which case the warranty period shall be 90 days) from date of shipment to the original retail or equipment rental center owner.

Accessories or equipment furnished and installed on the product by EDCO but manufactured by others, including, but not limited to engines, motors, electrical components, transmissions etc., shall carry the accessory manufacturers own warranty.

EDCO will, at its option, repair or replace, at the EDCO factory or at a point designated by EDCO, any part which shall appear to the satisfaction of EDCO inspection to have been defective in material or workmanship.

EDCO reserves the right to modify, alter and improve any part or parts without incurring any obligation to replace any part or parts previously sold without such modified, altered or improved part or parts.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory, or otherwise created under applicable law including, but not limited to the warranty of merchantability and the warranty of fitness for a particular purpose in no event shall seller or the manufacturer of the product be liable for special, incidental, or consequential damages, including loss of profits, whether or not caused by or resulting from the negligence of seller and/or the manufacturer of the product unless specifically provided herein. In addition, this warranty shall not apply to any products or portions there of which have been subjected to abuse, misuse, improper installation, maintenance, or operation, electrical failure or abnormal conditions and to products which have been tampered with, altered, modified, repaired, reworked by anyone not approved by seller or used in any manner inconsistent with the provisions of the above or any instructions or specifications provided with or for the product.

FORCE MAJEURE

Seller's obligation hereunder are subject to, and Seller shall not be held responsible for, any delay or failure to make delivery of all or any part of the Product due to labor difficulties, fires, casualties, accidents, acts of the elements, acts of God, transportation difficulties, delays by a common carrier, inability to obtain Product, materials or components or qualified labor sufficient to timely perform part of or all of the obligations contained in these terms and conditions, governmental regulations or actions, strikes, damage to or destruction in whole or part of manufacturing plant, riots, terrorist attacks or incidents, civil commotions, warlike conditions, flood, tidal waves, typhoon, hurricane, earthquake, lightning, explosion or any other causes, contingencies or circumstances within or without the United States not subject to the Seller's control which prevent or hinder the manufacture or delivery of the Products or make the fulfillment of these terms and conditions impracticable. In the event of the occurrence of any of the foregoing, at the option of Seller, Seller shall be excused from the performance under these Terms and Conditions, or the performance of the Seller shall be correspondingly extended.

This document sets forth the terms and conditions pursuant to which the purchaser ("Purchaser") will purchase and Equipment Development Co.Inc. ("Seller") will sell the products, accessories, attachments (collectively the Products ") ordered by the Purchaser. These terms and conditions shall govern and apply to the sale of Seller's Products to Purchaser, regardless of any terms and conditions appearing on any purchase order or other forms submitted by Purchaser to Seller, or the inconsistency of any terms therein and herein.

1. PRICE

All prices set forth on any purchase order or other document are F.O.B. Sellers facility or distribution point, as may be determined by Seller (F.O.B.Point). All prices are exclusive of any and all taxes, including, but not limited to, excise, sales, use, property or transportation taxes related to the sale or use of the Products, now or hereafter imposed, together with all penalties and expenses. Purchaser shall be responsible for collecting and/or paying any and all such taxes, whether or not they are stated in any invoice for the Products. Unless otherwise specified herein, all prices are exclusive of inland transportation, freight, insurance and other costs and expenses relating to the shipment of the Products from the F.O.B. point to Purchaser's facility. Any prepayment by Seller of freight insurance and other costs shall be for the account of Purchaser and shall be repaid to Seller.

2. PAYMENT TERMS

Payment terms are as follows. 2% 10 days (to approved and qualified accounts). Net 30 days. This is a cash discount for invoices paid within 10 days after the invoice date, regardless of date of receipt of shipment. This is not a trade discount and will not be granted to accounts that do not adhere to stated terms.

*All past due accounts are subject to a late payment fee of 1.5% per month or a maximum allowed by law if different, along with the expenses incidental to collection including reasonable attorney's fees and costs.

*Seller reserves the right to hold shipments against past due accounts.

*Seller reserves the right to alter payment terms.

3. FREIGHT TERMS

All shipments will be made F.O.B. shipping point as designated in these Terms and Conditions, and title shall pass at the F.O.B. point. Delivery to the initial common carrier shall constitute delivery to the Purchaser. Any claims for loss or damage during shipment are to be filed with carrier by the Purchaser. Seller will not assume responsibility for the performance of the carrier.

Back orders will be shipped in the most practical fashion with charges consistent with our freight policy established with the original order. UPS, FED EX, MAIL or shipments by other couriers are subject to the same terms and conditions as outlined in paragraph #3"Freight Terms".

4. DELIVERY, DAMAGES, SHORTAGES

Seller shall use reasonable efforts to attempt to cause the Products to be delivered as provided for in these Terms & Conditions. Delivery to the initial common carrier shall constitute the delivery to the Purchaser. Sellers responsibility, in so far as transportation risks are concerned ceases upon the delivery of the Products in good condition to such carrier at the F.O.B. point and all the Products shall be shipped at the Purchaser's risk. Seller shall not be responsible or liable for any loss of income and/or profits, or incidental, special, consequential damages resulting from Seller's delayed performance in shipment and delivery.

5. RETURN OF DEFECTIVE PRODUCTS

Defective or failed material shall be held at the Purchaser's premises until authorization has been granted by Seller to return or dispose of Products. Products that are to be returned for final inspection must be returned Freight Prepaid in the most economical way. Credit will be issued for material found to be defective upon Seller's inspection based on prices at time of purchase.

6. PRODUCTS ORDERED IN ERROR

Products may be returned, provided that claim is made and Seller is notified within 7 days of receipt of Products, and the Products are in original buyer's possession not more than 30 days prior to return, subject to Seller's approval. If Products are accepted for return, they must be Freight Prepaid and buyer will be charged a minimum of 15% restocking charge, plus a charge back for outbound freight charges if the original order was shipped prepaid. Returns are not accepted for any Products that are specifically manufactured to meet the buyer's requirement of either specifications or quantity.

AGREEMENTS

These Terms and Conditions constitute the entire agreement between Seller and Purchaser as it relates to terms and conditions of sale, and supersedes any and all prior oral or written agreements, correspondence, quotations or understandings heretofore in force between the parties relating to the subject matter hereof. There are no agreements between Seller and Purchaser with respect to the Product herein except those specifically set forth in and made part of these terms and conditions. Any additional terms, conditions and/or prices are rejected by Seller.

These terms and conditions may be modified, cancelled or rescinded only by a written agreement of both parties executed by their duly authorized agents.

USE ONLY GENUINE EDCO PARTS & ACCESSORIES
For your own safety, the safety of others and the life of your machine.

Equipment Development Company Inc.

Equipment Development Company, Inc.

Printed in USA ©2012 JWA

Page 24

100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone (301) 663-1600 • 1-800-638-3326 Fax (301) 663-1607 • 1-800-447-3326

