REVISED STARTING SERIAL # 161110444



# PARTS LIST MANUAL MODEL BB14G



**SHOWN WITH OPTIONAL PROCART** 

	14" GASOLINE POWERED MASONRY SAWS					
SKU#	MODEL#	POWER OPTION				
26300	BB14G-5.5H	HONDA GX160 W/ CYCLONE AIR CLEANER				
26400	BB14G-6.5H	HONDA GX200 W/ CYCLONE AIR CLEANER				
26500	BB14G-9H	HONDA GX270 W/ CYCLONE AIR CLEANER				





#### READ AND UNDERSTAND THE OPERATORS INSTRUCTION MANUAL THOROUGHLY BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.

Death or serious injury could occur if this machine is used improperly.



#### **SAFETY MESSAGES**

· Safety Instructions are proceeded by a graphic alert symbol of DANGER, WARNING, or CAUTION.



Indicates an imminent hazard which, if not avoided, will result in death or serious injury.



Indicates an imminent hazard which, if not avoided, can result in death or serious injury.



Indicates hazards which, if not avoided, could result in serious injury and or damage to the equipment.

#### GASOLINE/PROPANE POWERED EQUIPMENT



· Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



- Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas. and with a cool engine.
- Small gasoline engines produce high concentrations of carbon monoxide (CO) example: a 5 HP 4 cycle engine operation in an enclosed 100,000 cu. ft. area with only one change of air per hour is capable of providing deadly concentrations of CO in less than fifteen minutes. Five changes of air in the same area will produce noxious fumes in less than 30 minutes. Gasoline or propane powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, headache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur - get into fresh air and seek medical attention immediately.

#### **ELECTRICAL POWERED EQUIPMENT**



Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

- · Check all electrical cables be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of this equipment.
- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to all local codes and ordinances.
- NOTE: In the event of a malfunction or breakdown, grounding provides a path of least resistance for the electric current to dissipate. The motor is equipped with a grounded plug and must be connected to an outlet that is properly installed and properly grounded. DO NOT modify the plug provided on the motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.
- Switch motor OFF before disconnecting power.

- · Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.
- · Unplug power cord at the machine when not in use and before servicing.

#### **GENERAL INSTRUCTIONS**

- · Equipment should only be operated by trained personnel in good physical condition and mental health (not fatigued). The operator and maintenance personnel must be physically able to handle the bulk weight and power of this equipment.
- · This is a one person tool. Maintain a safe operating distance to other personnel. It is the operators' responsibility to keep other people (workers, pedestrians, bystanders, etc.) away during operation. Block off the work area in all directions with roping, safety netting, etc. for a safe distance. Failure to do so may result in others being injured by flying debris or exposing them to harmful dust and noise.
- This equipment is intended for commercial use only.
- · For the operator's safety and the safety of others, always keep all guards in place during operation.
- · Never let equipment run unattended.















· Personal Protection Equipment and proper safety attire must be worn when operating this machinery. The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require. Hearing protection MUST be used (operational noise levels of this equipment may exceed 85db). Eye protection MUST be worn at all times.



Keep body parts and loose clothing away from moving parts. Failure to do so could result in dismemberment or death.

- · Do not modify the machine.
- Stop motor/engine when adjusting or servicing this equipment.



Maintain a safe operating distance from flammable materials. Sparks from the cutting-action of this machine can ignite flammable materials or vapors.


#### **DUST WARNING**



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer. birth defects, or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints, and
- Crystalline silica from bricks and concrete and other masonry products.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.





# PARTS LIST MANUAL MODEL BB14G

#### 14" GASOLINE POWERED MASONRY SAWS

#### **TABLE OF CONTENTS**

<u>Section</u>	Page Number
Safety Messages & General Instructions	2
How To Order Replacement Parts	3
Illustration 1: Pan Grouping	4
Illustration 2: Rolling Table Assembly	5
Illustration 3: Arbor, Deck & Jackshaft Grouping	
Illustration 4: Arbor Assembly	
Illustration 5: Arbor Height Locking Bar Grouping	
Illustration 6: Gas Spring Grouping	
Illustration 7: Belt Drive Grouping	10, 11
Illustration 8: Engine Grouping for Honda GX160 & GX200	
Illustration 9: Engine Grouping for Honda GX270	
Illustration 10: Blade Guard Grouping	16, 17
Illustration 11: Water Pump & Filter Grouping	
Illustration 12: Water Pump Assembly	
Illustration 13: Optional Stand & Foot Pedal Assembly	
Illustration 14: Optional "Tote-A-Saw" Transport Wheels	
Decal Sheet	
Limited Equipment Warranty of Sale - Terms & Conditions	24 - Back Page

#### HOW TO ORDER REPLACEMENT PARTS


- ☐ To insure product safety and reliability, always use genuine EDCO replacement parts when making repairs to the equipment.
- □ When calling for parts, specify the MODEL and SERIAL number of the machine, which can be found on the NAME PLATE. Keep that information in the space provided. In addition to this information, give part number, description, and quantity as listed on the parts list to your parts representative.
- Please note: Due to improvements and changes in the equipment, the illustrations shown may be different than the actual machine.

#### FILL IN INFORMATION BELOW

Date of Purchase
Model #
Serial #
SKU#




### **ILLUSTRATION 1: PAN GROUPING**

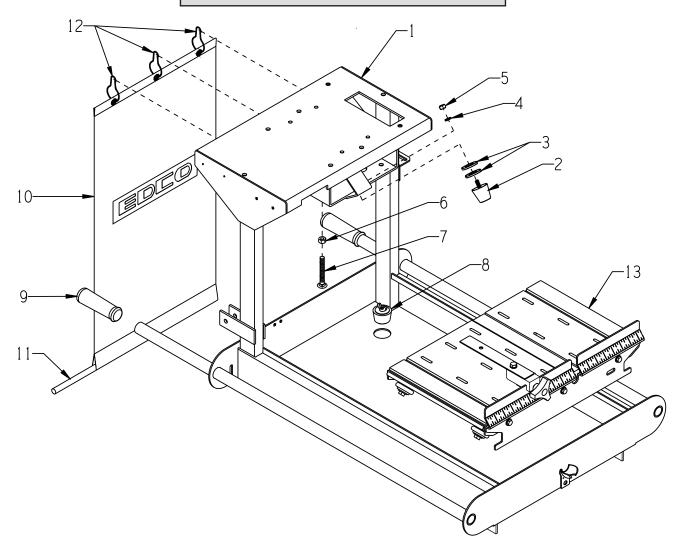

ITEM#	PART#	DESCRIPTION	QTY.
1	40680	PAN/ENGINE DECK WELDMENT, BB14G	1
2	10931	MOUNT, TAPERED RUBBER 5/16-18	1
3	10009	WASHER, FLAT 3/4 SAE ZINC	2
4	10801	WASHER, LOCK 5/16 ZINC	1
5	10054	NUT, HEX 5/16-18 ZINC	1
6	10404	NUT, HEX 3/8-16 ZINC	1
7	10909	BOLT, CARRIAGE 3/8-16 X 3 ZINC	1
8	40378	STOPPER ASSEMBLY 1-1/2"	1
9	10608	GRIP, HAND 1" MODEL AT	2
10	40375	CURTAIN 15" X 28" W/ LOGO	1
11	40377	CURTAIN ROD 1/2"DIA. X 13"L	1
12	40376	HOOK, CURTAIN	3
13	40675A	TABLE COMPLETE, ROLLING (SEE ILLUS. 2 FOR BREAKDOWN )	1



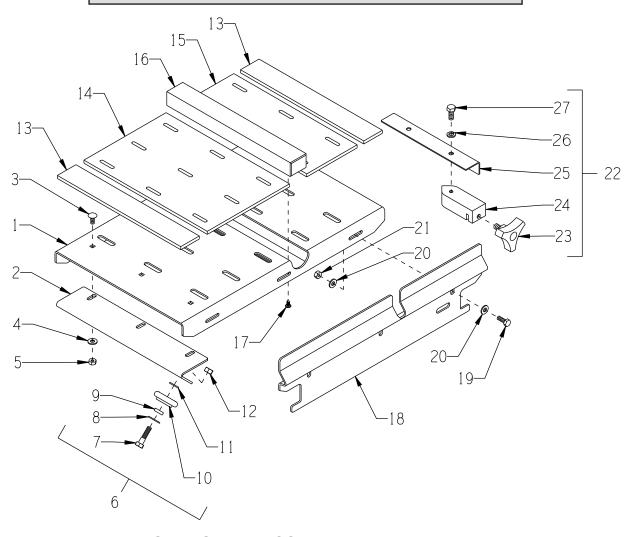


#### **ROLLING TABLE COMPLETE - PART # 40675A**

ITEM#	PART#	DESCRIPTION	QTY.	ITEM#	PART#	DESCRIPTION	QTY.
1	40675	TABLE, ROLLING	1	14	40676	RUBBER PAD 11-5/8 X 7-3/4	1
2	40674	BRACKET, R.T. TRACK WHEEL	1	15	40677	RUBBER PAD 11-5/8 X 4-3/4	1
3	11799	BOLT, CARR. 1/4-20 X 5/8 GRADE 5	3	16	40678	WOODEN CUT BLOCK	1
4	10602	WASHER, FLAT 1/4 SAE ZINC	3	17	10858	SCREW, SHEET METAL #10 X 1/2	2
5	10861	NUT, KEPS LOCK 1/4-20 ZINC	3	18	40603	TABLE FRONT PANEL, ROLL	1
6	40605K	WHEEL KIT, ONE (ITEMS 7 THRU 12)	4	19	10018	SCREW, CAP 1/4-20 X 3/4	3
	40605WK	WHEEL KIT, COMPLETE SET OF 4	1	20	10602	WASHER, FLAT 1/4 SAE ZINC	6
7	10606	SCREW, CAP 5/16-18 X 1-1/4	4	21	10861	NUT, KEPS LOCK 1/4-20 ZINC	3
8	40667	WASHER, FLAT 5/16" X .688"OD	4	22	40689A	GUIDE ASSY., CUT, UNIVERSAL	1
9	40668	SPACER, STEEL	4			(INCLUDES ITEMS 23 THRU 27)	
		5/8OD X .328ID X .180		23	40425	KNOB, 3-PRONG W/ 3/8-16 X 5/8 STUD	1
10	40605A	WHEEL W/ BRG., ROLL TABLE	4	24	42015	BLOCK, CUT GUIDE	1
11	36928	WASHER, FLAT 1/4 USS (3/4"OD)	4	25	40689	BRACKET, CUT GUIDE	1
12	10151	NUT, HEX NYLON LOCK 5/16-18	4	26	10801	WASHER, LOCK 5/16 ZINC	1
13	40679	RUBBER PAD 11-5/8 X 1-3/4	2	27	10053	SCREW, CAP 5/16-18 X 3/4	1




## ILLUSTRATION 3: ARBOR, DECK & JACKSHAFT GROUPING

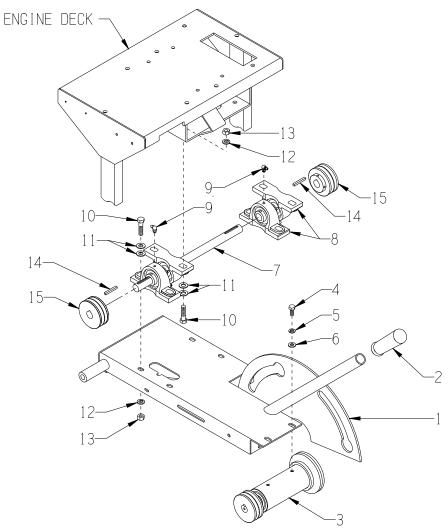

ITEM#	PART#	DESCRIPTION	QTY.
1	40606-1	DECK, ARBOR, BB-14G	1
2	10608	GRIP, HAND 1" MODEL AT	1
3	40670A	ARBOR ASSY. W/ 2.75" 2GR.3V SHEAVE (REFER TO ILLUS. 4 FOR BREAKDOWN)	1
4	10048	SCREW, CAP 5/16-24 X 3/4	4
5	10801	WASHER, LOCK 5/16 ZINC	4
6	10213	WASHER, FLAT 5/16 SAE ZINC	2
7	40618	SHAFT, JACK 3/4 X 13-1/2"L, BB14G	1
8	40629	BEARING, BALL 3/4"B, BB14G	4
9	10961	FITTING, GREASE 1/4-28 X 90°	4
10	10816	SCREW, CAP 3/8-24 X 1-1/2	8
11	10025	WASHER, FLAT 3/8 SAE ZINC	16
12	10811	WASHER, LOCK 3/8 ZINC	8
13	10014	NUT, HEX 3/8-24 ZINC	8
14	10060	KEY 3/16SQ X 1-1/4	2
15	40694	SHEAVE 2.75"OD X 2GR.3V X 3/4"BORE	2



### **ILLUSTRATION 4: ARBOR ASSEMBLY**

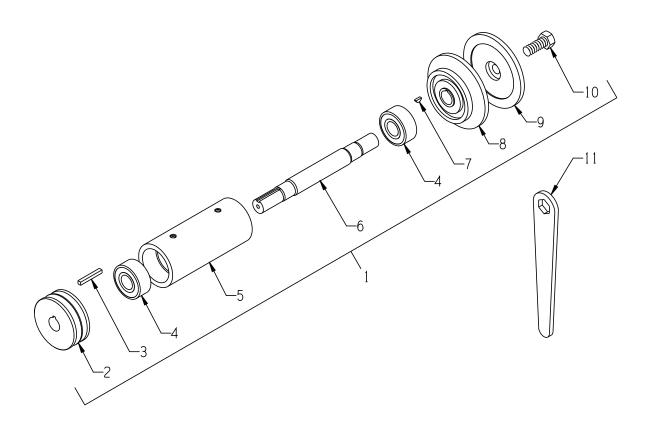

#### ARBOR ASSEMBLY WITH SHEAVE - PART # 40670A


ITEM#	PART#	DESCRIPTION	QTY.
1	40670A	ARBOR ASSY. W/ 2GR-3V SHEAVE (INCLUDES ITEMS 2 THRU 10)	1
2	40694	SHEAVE 2.75"OD X 2GR.3V X 3/4"BORE	1
3	10016	KEY 3/16 SQ X 1-1/2	1
4	40018	BEARING, RADIAL BALL 20X47X20.6MM	2
5	40607	ARBOR HOUSING	1
6	40608	ARBOR SHAFT	1
7	40036	KEY, WOODRUFF 1/8 X 3/8 (#403)	1
8	40022	ARBOR BACKING PLATE 4"	1
9	40023	ARBOR BLADE CAP 4"	1
10	10321	SCREW, CAP 1/2-20 X 1-1/4	1
11	53021	WRENCH, ARBOR, 3/4" BOX END	1



### **EQUIPMENT DEVELOPMENT COMPANY, INC.**

Printed in USA


### ILLUSTRATION 5: ARBOR HEIGHT LOCKING BAR GROUPING

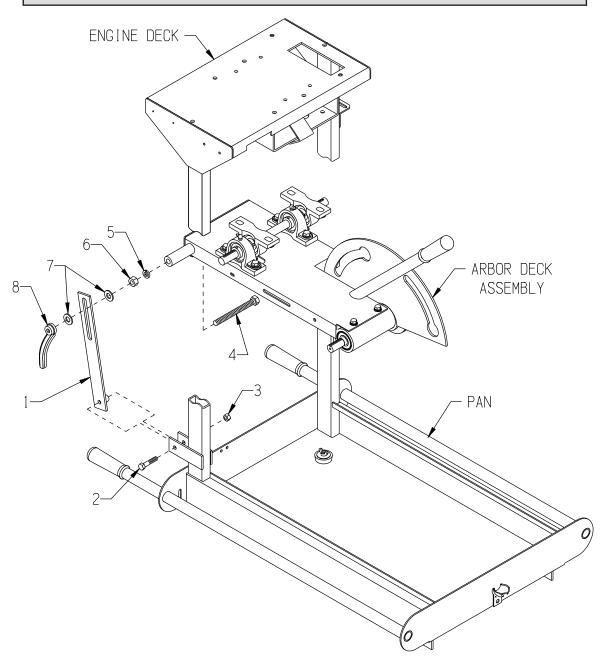

ITEM#	PART#	DESCRIPTION	QTY.
1	40609	LOCKING BAR, ARBOR HEIGHT	1
2	10029	SCREW, CAP 3/8-24 X 1-3/4	1
3	10004	NUT, HEX LOCK 3/8-24 ZINC	1
4	10373	BOLT, TAP 1/2-13 X 5 (FULL THREAD)	1
5	10045	WASHER, LOCK 1/2 ZINC	1
6	10417	NUT, HEX 1/2-13 ZINC	1
7	10312	WASHER, FLAT 1/2 SAE ZINC	2
8	40358	NUT, TAIL HANDLE 1/2-13	1




#### **ILLUSTRATION 6: GAS SPRING GROUPING**

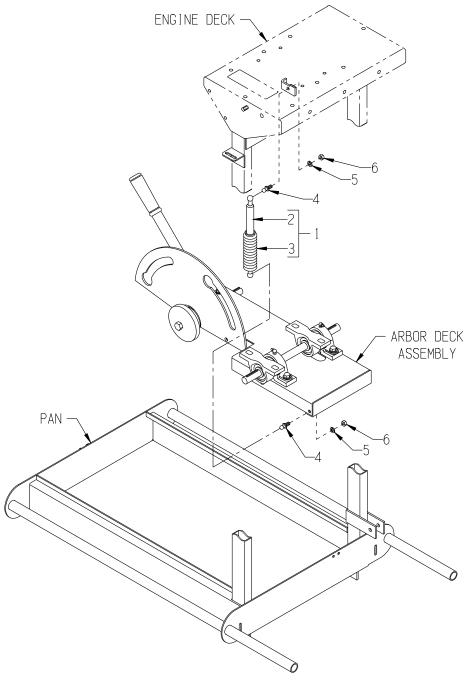

ITEM#	PART#	DESCRIPTION	QTY.
1	43010	SPRING ASSEMBLY, GAS (COMPLETE)	1
2	43007	SPRING, GAS	1
3	43008	BELLOWS, GAS SPRING (DUST BOOT)	1
	10982	TIE, CABLE, BLACK NYLON 11-1/4" (NOT SHOWN)	2
4	43011	STUD, 10MM BALL, 5/16-18 X .662	2
5	10801	WASHER, LOCK 5/16 ZINC	2
6	10054	NUT, HEX 5/16-18 ZINC	2




### **ILLUSTRATION 7: BELT DRIVE GROUPING**

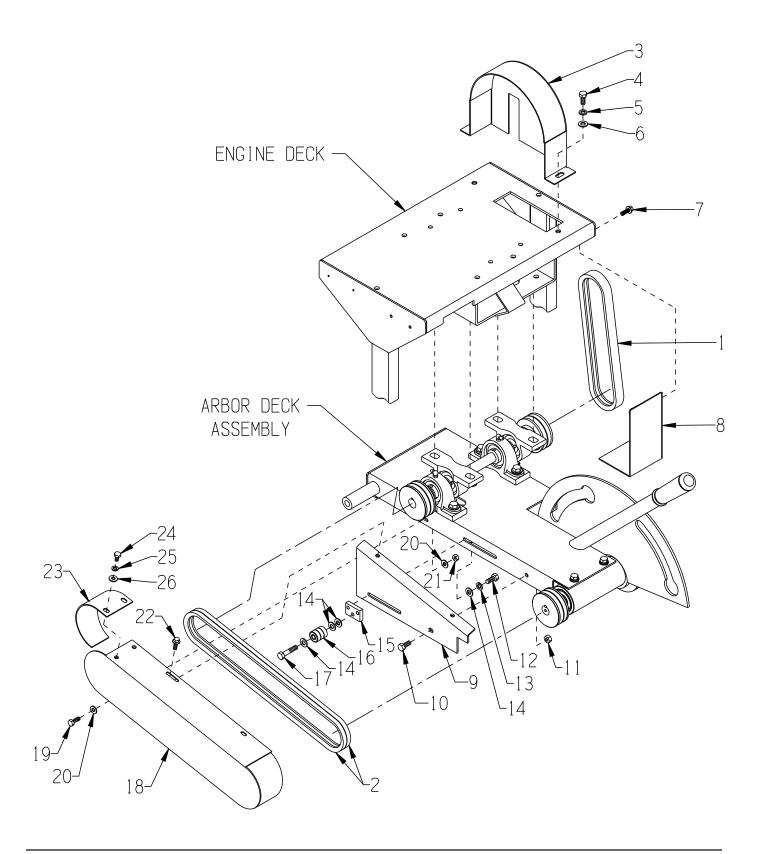

	PARTS	LISTING - ILLUSTRATION 7: BELT DRIVE GROUPING	
ITEM#	PART#	DESCRIPTION	QTY.
1		BANDED BELT:	
	40697-2	2/3VX265 (HONDA GX160 & GX200)	1 1
	53022-2	2/3VX280 (HONDA GX270)	1
2	10258	BELT 3VX-375	2
3	40681	COVER, ENGINE BELT, BB14 GAS	1
4	10053	SCREW, CAP 5/16-18 X 3/4	2
5	10801	WASHER, LOCK 5/16 ZINC	2
6	10213	WASHER, FLAT 5/16 SAE ZINC	2
7	11811	BOLT, FLANGE 1/4-20 X 3/4 ZINC	2
8	40682	COVER, JACKSHAFT SHEAVE, BB14 GAS	1
9	40613	MOUNTING BRKT., BELT COVER, BB14G	1
10	10053	SCREW, CAP 5/16-18 X 3/4	2
11	10807	NUT, HEX LOCK 5/16-18 ZINC	2
12	10053	SCREW, CAP 5/16-18 X 3/4	2
13	10801	WASHER, LOCK 5/16 ZINC	2
14	10213	WASHER, FLAT 5/16 SAE ZINC	4
15	40661	TENSIONER BAR, ARBOR BELT, BB14G	1
16	40391	BEARING, RADIAL BALL 5/16X7/8X11/32	3
17	10342	SCREW, CAP 5/16-18 X 1-1/2	1
18	40611	COVER, ARBOR BELT, BB14G	1
19	10018	SCREW, CAP 1/4-20 X 3/4	1
20	10602	WASHER, FLAT 1/4 SAE ZINC	2
21	10861	NUT, KEPS LOCK 1/4-20 ZINC	1
22	11811	BOLT, FLANGE 1/4-20 X 3/4 ZINC	2
23	40612	COVER END CAP, ARBOR BELT, BB14G	1
24	10834	SCREW, CAP 1/4-20 X 1/2 ZINC	2
25	10038	WASHER, LOCK 1/4 ZINC	2
26	10602	WASHER, FLAT 1/4 SAE ZINC	2




#### ILLUSTRATION 8: ENGINE GROUPING FOR HONDA GX160 & GX200

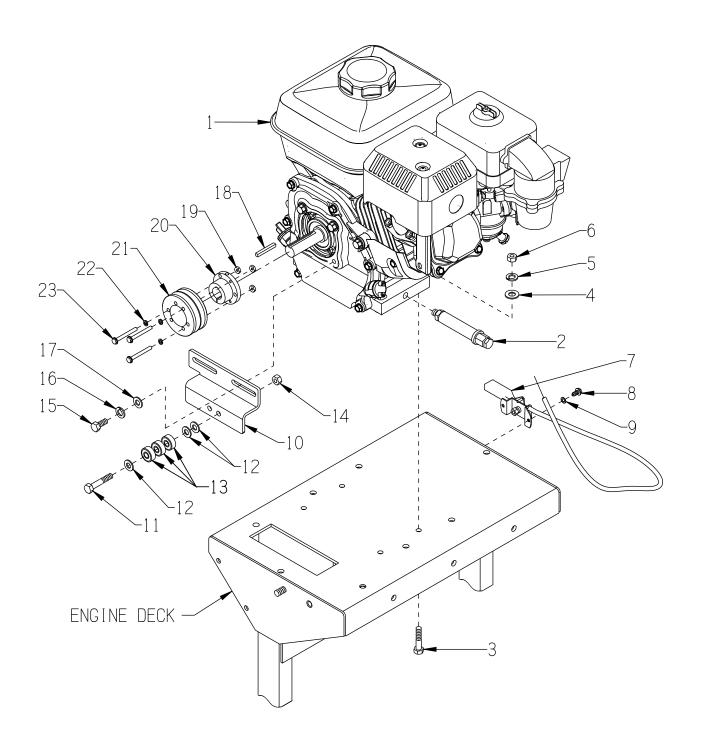

PARTS LISTING - ILLUSTRATION 8: ENGINE GROUPING FOR HONDA GX160 & GX200				
ITEM#	PART#	DESCRIPTION	QTY.	
1		ENGINE WITH CYCLONE AIR CLEANER	1	
	40387	HONDA GX160U1-QXC9		
	15048	HONDA GX200U-QXC9		
2	40327	OIL DRAIN KIT, 4 THRU 6.5 HP HONDA	1	
	40770	KIT INCLUDES:		
	10776 11544	PIPE PLUG 1/4 NPT (BRASS) BARB, PUSH-ON 3/8 HOSE X 1/4FPT	1 1	
	11541	BARB, PUSH-ON 3/8HOSEXM10-1.25MALE (ENGINE)		
	56116	HOSE, PUSH-ON 3/8"ID X 3"L	1	
3	10342	SCREW, CAP 5/16-18 X 1-1/2	4	
4	10213	WASHER, FLAT 5/16 SAE ZINC	4	
5	10801	WASHER, LOCK 5/16 ZINC	4	
6	10054	NUT, HEX 5/16-18 ZINC	4	
7	40388	CABLE, THROTTLE, LEVER-TYPE 24"	1	
8	10877	SCREW, CAP STSHW 10-24 X 1/2	2	
9	10831	WASHER, LOCK, INT. TOOTH #10	2	
10	40658	TENSIONER BRKT., BELT, BB14G	1	
11	10204	SCREW, CAP 5/16-18 X 1-3/4	1	
12	10213	WASHER, FLAT 5/16 SAE ZINC	3	
13	40391	BEARING, RADIAL BALL 5/16X7/8X11/32	3	
14	10807	NUT, HEX LOCK 5/16-18 ZINC	1	
15	10048	SCREW, CAP 5/16-24 X 3/4	2	
16	10801	WASHER, LOCK 5/16 ZINC	2	
17	10213	WASHER, FLAT 5/16 SAE ZINC	2	
18	10016	KEY 3/16SQ X 1-1/2 (INCLUDED W/ ENGINE)	1	
19	11740	NUT, KEPS LOCK 10-24 ZINC	3	
20	40644	BUSHING, SHEAVE JA X 3/4"BORE	1	
21	40695	SHEAVE 2.65"OD X 2GR.3V X JA	1	
22		WASHER, LOCK #10 (INCLUDED W/ ITEM 20)	3	
23	40696	SCREW, MACHINE 10-24 X 1.75 HWHSLMS	3	




#### ILLUSTRATION 9: ENGINE GROUPING FOR HONDA GX270

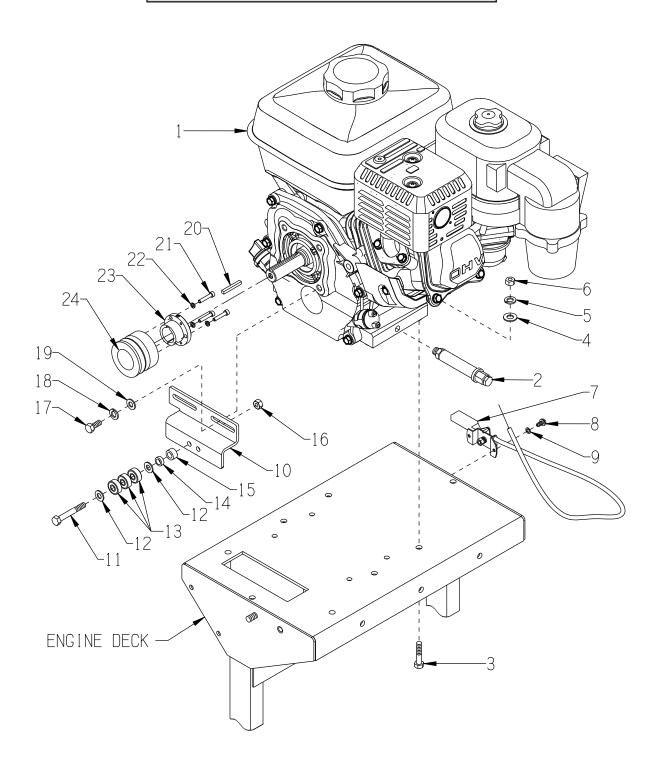

		PARTS LISTING - ILLUSTRATION 9: ENGINE GROUPING FOR HONDA GX270	
ITEM#	PART#	DESCRIPTION	QTY.
1	15027	ENGINE, HONDA GX270UT2-QXC9	1
2	40328	OIL DRAIN KIT, 9/11/13 HP HONDA KIT INCLUDES:	1
	10776	PIPE PLUG 1/4 NPT (BRASS)	1
	11544	BARB, PUSH-ON 3/8 HOSE X 1/4FPT	1
	11542	BARB, PUSH-ON 3/8HOSE X M12-1.5MALE (ENGINE)	1
	56116	HOSE, PUSH-ON 3/8"ID X 3"L	1
3	10204	SCREW, CAP 5/16-18 X 1-3/4	4
4	10213	WASHER, FLAT 5/16 SAE ZINC	4
5	10801	WASHER, LOCK 5/16 ZINC	4
6	10054	NUT, HEX 5/16-18 ZINC	4
7	40388	CABLE, THROTTLE, LEVER-TYPE 24"	1
8	10877	SCREW, CAP STSHW 10-24 X 1/2	2
9	10831	WASHER, LOCK, INT. TOOTH #10	2
10	40658	TENSIONER BRKT., BELT, BB14G	1
11	10341	SCREW, CAP 5/16-18 X 2-1/4	1
12	10213	WASHER, FLAT 5/16 SAE ZINC	2
13	40391	BEARING, RADIAL BALL 5/16X7/8X11/32	3
14	10113	SPACER, STEEL 9/16OD X 3/8ID X 7/32	1
15	10011	SPACER, STEEL 5/8OD X 3/8ID X 3/8T	1
16	10807	NUT, HEX LOCK 5/16-18 ZINC	1
17	10048	SCREW, CAP 5/16-24 X 3/4	2
18	10801	WASHER, LOCK 5/16 ZINC	2
19	10213	WASHER, FLAT 5/16 SAE ZINC	2
20	10101	KEY 1/4SQ X 1-3/4 (INCLUDED W/ ENGINE)	1
21		SCREW, SKT. HD. CAP 10-24 X 1 (INCLUDED W/ BUSHING, ITEM 23)	3
22		WASHER, LOCK #10 (INCLUDED W/ BUSHING, ITEM 23)	3
23	10557	BUSHING, SHEAVE JA X 1"BORE	1
24	40699	SHEAVE 2.35"OD X 2GR.3V X JA	1



### **ILLUSTRATION 10: BLADE GUARD GROUPING**

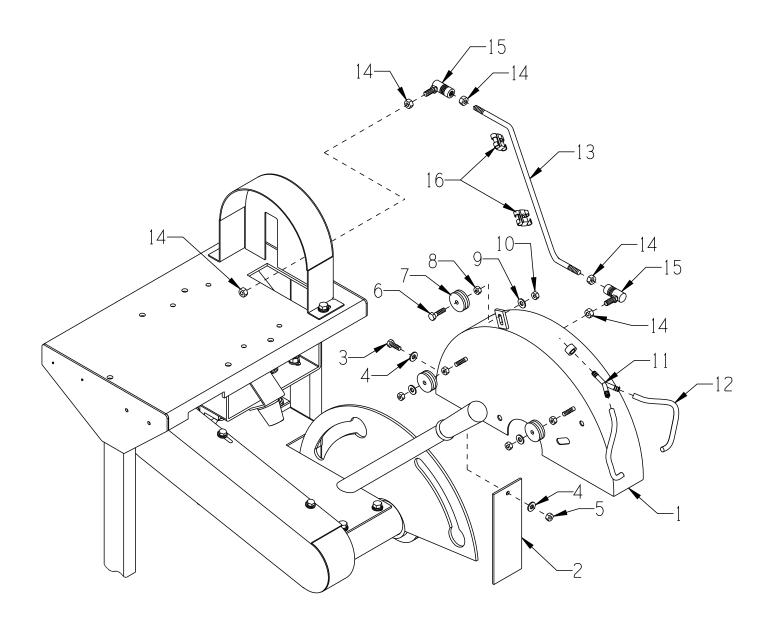




PARTS LISTING - ILLUSTRATION 10: BLADE GUARD GROUPING					
ITEM#	PART#	DESCRIPTION			
1	40615	GUARD, BLADE 14", BB14G	1		
2	40012	FLAP, SPLASH 2-1/2 X 7	1		
3	10018	SCREW, CAP 1/4-20 X 3/4	1		
4	10602	WASHER, FLAT 1/4 SAE ZINC	2		
5	10015	NUT, HEX LOCK 1/4-20 ZINC	1		
6	10031	SCREW, CAP 1/4-20 X 1	3		
7	40636	SLIDER GUIDE, BLADE GUARD, BB14G	3		
8	10015	NUT, HEX LOCK 1/4-20 ZINC	3		
9	10602	WASHER, FLAT 1/4 SAE ZINC	3		
10	10150	NUT, HEX NYLON LOCK 1/4-20 ZINC	3		
11	99323	BARBED FITTING, "Y" 1/4"HOSE	1		
12	40654	HOSE 1/4"ID X 6"L, BB14	2		
13	40616	ROD, BLADE GUARD LEVELER, BB14G	1		
14	10424	NUT, HEX 5/16-24 ZINC	5		
15	40617	B.J. LINKAGE, QUICK-DISC. 5/16-24	2		
16	40639	STRAP, TUBE/HOSE 5/16"-3/8"	2		



Printed in USA JWA ©2016

Page 17

## ILLUSTRATION 11: WATER PUMP & FILTER GROUPING

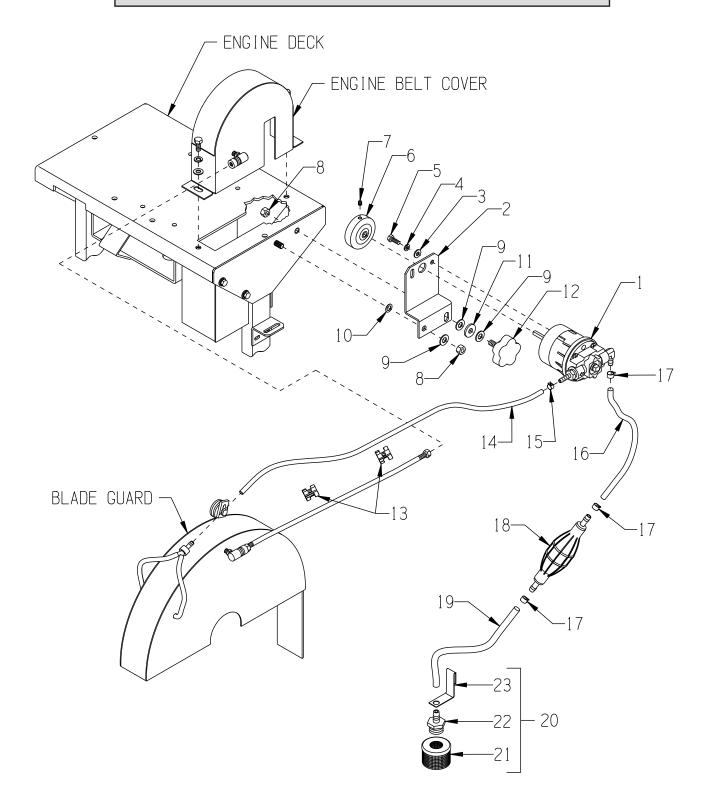




	PARTS LISTING - ILLUSTRATION 11: WATER PUMP & FILTER GROUPING					
ITEM#	PART#	DESCRIPTION	QTY.			
1	40685	PUMP ASSY., WATER, BB14G (REFER TO ILLUS. 12 FOR BREAKDOWN)				
2	40683	BRACKET, WATER PUMP, BB14G	1			
3	10602	WASHER, FLAT 1/4 SAE ZINC	2			
4	10038	WASHER, LOCK 1/4 ZINC	2			
5	10018	SCREW, CAP 1/4-20 X 3/4	2			
6	40684M	WHEEL, WATER PUMP DRIVE 3 X 5/16"B	1			
7	10161	SCREW, SET 1/4-28 X 5/16	1			
8	10810	NUT, HEX LOCK 3/8-16 ZINC	2			
9	10025	WASHER, FLAT 3/8 SAE ZINC	3			
10	64159	SHIM 3/8 X 5/8 X .031	1			
11	42224	BUSHING, RUBBER 1"OD X 3/8"ID X 1/8	1			
12	51230	KNOB, STAR CLAMPING 3/8-16 X 1"STUD	1			
13	40639	STRAP, TUBE/HOSE 5/16"-3/8"	2			
14	40686	HOSE 1/4"ID X 24"L, BB14G	1			
15	10762	CLAMP, HOSE, SPRING-BAND 3/8" GREEN	1			
16	40368	HOSE 5/16"ID X 7"L	1			
17	10763	CLAMP, HOSE, SPRING-BAND 7/16" RED	3			
18	40049	BULB, PRIMER 5/16"	1			
19	40687	HOSE 5/16"ID X 12"L, BB14G	1			
20	40690	FILTER ASSY., WATER	1			
21	40691	FILTER BASKET 3/4NPT, 16 MESH S.S.	1			
22	40692	BARB, 3/8HOSE X 3/4NPT (NYLON)	1			
23	40693	CLIP, FILTER HANGER (S.S.)	1			




#### **ILLUSTRATION 12: WATER PUMP ASSEMBLY**

#### **PART # 40685**

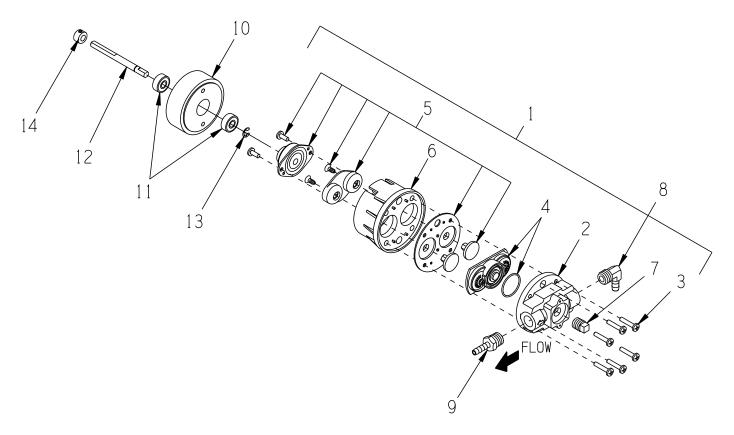

ITEM#	PART#	DESCRIPTION	QTY.
1	56101-S1	PUMP HEAD, DUPLEX 21050-653A (INCLUDES ITEMS 2 THRU 7)	1
2	56101-S2	PUMP HOUSING BODY 20500-507	1
3	56101-S3	PUMP SCREWS (SET OF 6) 20131-001	1-SET
4	56101-S4	PUMP CHECK VALVE KIT 20028-008	1
5	56101-S5	PUMP DIAPHRAGM KIT W/ BRG 21004-401	1
6	56101-S6	PUMP HOUSING BEARING COVER 20428-100	1
7	56101-S8	PLUG, RED PLASTIC 1/4MPT, FLOJET	1
8	36924	BARB ELBOW 90, 5/16HOSE X 3/8MPT (BRASS)	1
9	40337	BARB, 1/4HOSE X 3/8MPT (BRASS)	1
10	40393-S1	HUB, WATER PUMP	1
11	40391	BEARING, RADIAL BALL 5/16X7/8X11/32	2
12	40393-S2	SHAFT, WATER PUMP 5/16 X 3-3/4	1
13	10137	RETAINING RING, E-CLIP 5/16"	1
14	10415	COLLAR, LOCKING 5/16"ID	1

#### **ILLUSTRATION 13: OPTIONAL STAND & FOOT PEDAL ASSEMBLY**

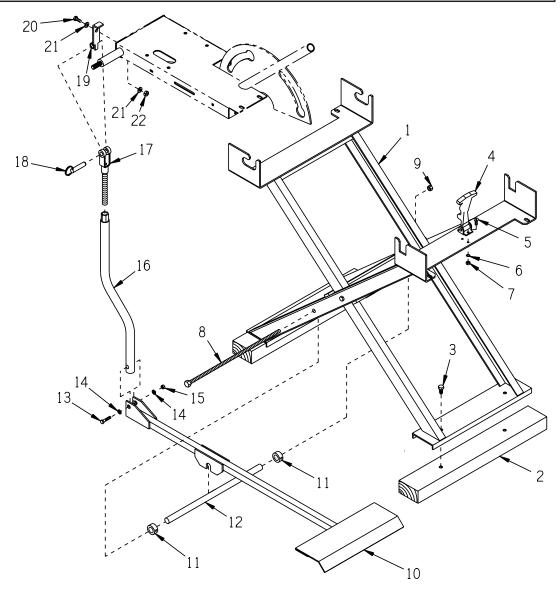


FOLDING STAND - PART #40631 (INCLUDES ITEMS 1-7) FOOT PEDAL KIT - PART #40632 (INCLUDES ITEMS 8-22)

ITEM#	PART#	DESCRIPTION	QTY.	ITEM#	PART#	DESCRIPTION	QTY.
1	40631W	STAND ONLY	1	12	40634	FOOT PEDAL PIVOT TUBE	1
2	21801	SKID BOARD 2 X 4 X 24"L	2	13	10029	SCREW, CAP 3/8-24 X 1-3/4	1
3	10367	BOLT, LAG 3/8 X 1	4	14	10025	WASHER, FLAT 3/8 SAE ZINC	2
4	52002	LATCH, FLEXIBLE DRAW T	1	15	10004	NUT, HEX LOCK 3/8-24 ZINC	1
5	10830	SCREW, MACHINE 10-32 X 1/2	2	16	40635	FOOT PEDAL LINKAGE	1
6		WASHER (DISCONTINUED)		17	41019	LINKAGE, CLEVIS	1
7	10832	NUT, KEPS LOCK 10-32 ZINC	2	18	10125	PIN, DETENT RING 1/2 X 1-1/2	1
8	40383	BOLT, ALLTHRD 1/2-13 X 17-1/2	1	19	40688	MOUNT, FOOT PEDAL LINKAGE	1
9	10407	NUT, HEX LOCK 1/2-13 ZINC	1	20	10806	SCREW, CAP 5/16-18 X 1	1
10	40633	FOOT PEDAL	1	21	10213	WASHER, FLAT 5/16 SAE ZINC	2
11	10428	COLLAR, LOCKING 3/4"ID	2	22	10807	NUT, HEX LOCK 5/16-18 ZINC	1



#### ILLUSTRATION 14: OPTIONAL "TOTE-A-SAW" TRANSPORT WHEELS

**PART # 40091** 

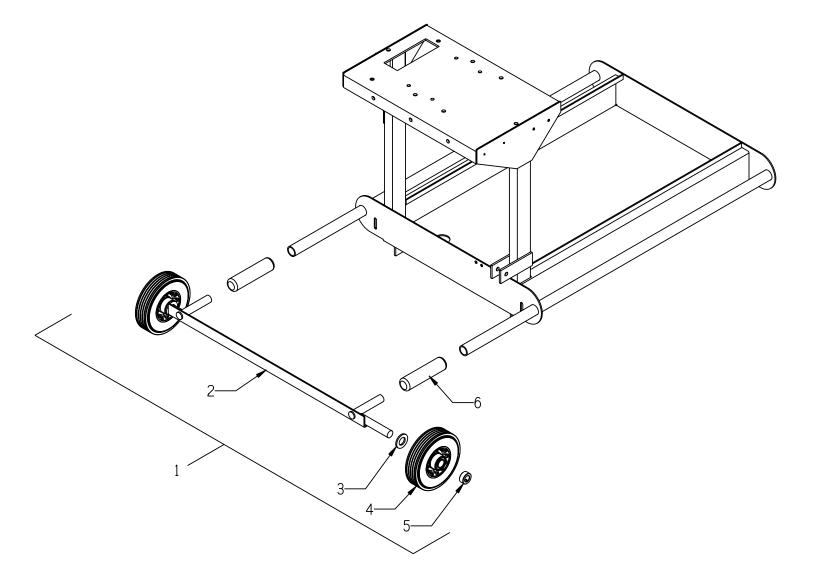

ITEM#	PART#	DESCRIPTION	QTY.
1	40091	TOTE-A-SAW, BB14 SERIES (INCLUDES ITEMS 2 THRU 6)	1
2	40092	FRAME, TOTE-A-SAW	1
3	10009	WASHER, FLAT 3/4 SAE	2
4	80028	WHEEL 6 X 2 X 3/4"BRG.	2
5	10428	COLLAR, LOCKING 3/4"ID	2
6	61067	GRIP, FOAM 7/8"ID X 5"L	2




#### **DECAL SHEET**

P/N 92203 Rev.B

BB-14G.2

14x17

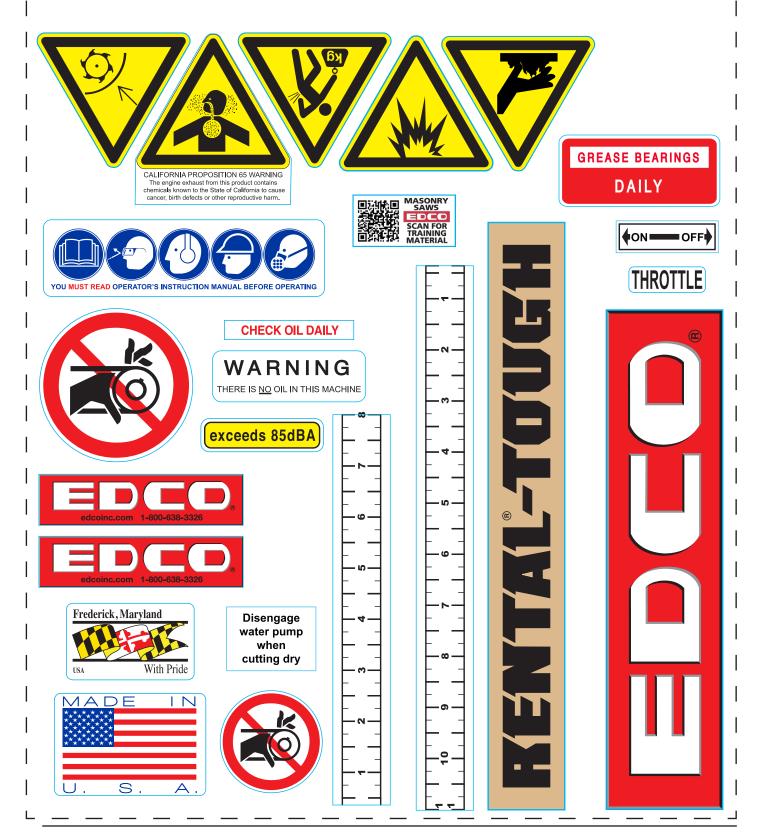



#### LIMITED EQUIPMENT WARRANTY OF SALE - TERMS & CONDITIONS

Equipment Development Company, Inc. herein referred to as EDCO (Seller) warrants that each new unit manufactured by EDCO to be free from defects in material and workmanship in normal use and service for a period of (1) one year (except for the cutter drum assembly on all model concrete/asphalt planes, in which case the warranty period shall be 90 days) from date of shipment to the original retail or equipment rental center owner.

Accessories or equipment furnished and installed on the product by EDCO but manufactured by others, including, but not limited to engines, motors, electrical components, transmissions etc., shall carry the accessory manufacturers own warranty.

EDCO will, at its option, repair or replace, at the EDCO factory or at a point designated by EDCO, any part which shall appear to the satisfaction of EDCO inspection to have been defective in material or workmanship.

EDCO reserves the right to modify, alter and improve any part or parts without incurring any obligation to replace any part or parts previously sold without such modified, altered or improved part or parts.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory, or otherwise created under applicable law including, but not limited to the warranty of merchantability and the warranty of fitness for a particular purpose in no event shall seller or the manufacturer of the product be liable for special incidental, or consequential damages, including loss of profits, whether or not caused by or resulting from the negligence of seller and/or the manufacturer of the product unless specifically provided herein. In addition, this warranty shall not apply to any products or portions there of which have been subjected to abuse, misuse, improper installation, maintenance, or operation, electrical failure or abnormal conditions and to products which have been tampered with, altered, modified, repaired, reworked by anyone not approved by seller or used in any manner inconsistent with the provisions of the above or any instructions or specifications provided with or for the product.

#### FORCE MAJEURE

Seller's obligation hereunder are subject to, and Seller shall not be held responsible for, any delay or failure to make delivery of all or any part of the Product due to labor difficulties, fires, casualties, accidents, acts of the elements, acts of God, transportation difficulties, delays by a common carrier, inability to obtain Product, materials or components or qualified labor sufficient to timely perform part of or all of the obligations contained in these terms and conditions, governmental regulations or actions, strikes, damage to or destruction in whole or part of manufacturing plant, riots, terrorist attacks or incidents, civil commotions, warlike conditions, flood, tidal waves, typhoon, hurricane, earthquake, lightning, explosion or any other causes, contingencies or circumstances within or without the United States not subject to the Seller's control which prevent or hinder the manufacture or delivery of the Products or make the fulfillment of these terms and conditions impracticable. In the event of the occurrence of any of the foregoing, at the option of Seller, Seller shall be excused from the performance under these Terms and Conditions, or the performance of the Seller shall be correspondingly extended.

This document sets forth the terms and conditions pursuant to which the purchaser ("Purchaser") will purchase and Equipment Development Co.Inc. ("Seller") will sell the products, accessories, attachments (collectively the Products ") ordered by the Purchaser. These terms and conditions shall govern and apply to the sale of Seller's Products to Purchaser. regardless of any terms and conditions appearing on any purchase order or other forms submitted by Purchaser to Seller, or the inconsistency of any terms therein and herein.

#### 1. PRICE

All prices set forth on any purchase order or other document are F.O.B. Sellers facility or distribution point, as may be determined by Seller (F.O.B.Point). All prices are exclusive of any and all taxes, including, but not limited to, excise, sales, use, property or transportation taxes related to the sale or use of the Products, now or hereafter imposed, together with all penalties and expenses. Purchaser shall be responsible for collecting and/or paying any and all such taxes, whether or not they are stated in any invoice for the Products. Unless otherwise specified herein, all prices are exclusive of inland transportation, freight, insurance and other costs and expenses relating to the shipment of the Products from the F.O.B. point to Purchaser's facility. Any prepayment by Seller of freight insurance and other costs shall be for the account of Purchaser and shall be repaid to Seller.

Payment terms are as follows. 2% 10 days (to approved and qualified accounts). Net 30 days. This is a cash discount for invoices paid within 10 days after the invoice date, regardless of date of receipt of shipment. This is not a trade discount and will not be granted to accounts that do not adhere to stated terms.

\*All past due accounts are subject to a late payment fee of 1.5% per month or a maximum allowed by law if different, along with the expenses incidental to collection including reasonable attorney's fees and costs.

\*Seller reserves the right to hold shipments against past due accounts.

\*Seller reserves the right to alter payment terms.

#### 3. FREIGHT TERMS

All shipments will be made F.O.B. shipping point as designated in these Terms and Conditions, and title shall pass at the F.O.B. point. Delivery to the initial common carrier shall constitute delivery to the Purchaser. Any claims for loss or damage during shipment are to be filed with carrier by the Purchaser. Seller will not assume responsibility for the performance of the carrier.

Back orders will be shipped in the most practical fashion with charges consistent with our freight policy established with the original order. UPS, FED EX, MAIL or shipments by other couriers are subject to the same terms and conditions as outlined in paragraph #3"Freight Terms".

#### 4. DELIVERY, DAMAGES, SHORTAGES

Seller shall use reasonable efforts to attempt to cause the Products to be delivered as provided for in these Terms & Conditions. Delivery to the initial common carrier shall constitute the delivery to the Purchaser. Sellers responsibility, in so far as transportation risks are concerned ceases upon the delivery of the Products in good condition to such carrier at the F.O.B. point and all the Products shall be shipped at the Purchaser's risk. Seller shall not be responsible or liable for any loss of income and/or profits, or incidental, special, consequential damages resulting from Seller's delayed performance in shipment and delivery.

#### 5. RETURN OF DEFECTIVE PRODUCTS

Defective or failed material shall be held at the Purchaser's premises until authorization has been granted by Seller to return or dispose of Products. Products that are to be returned for final inspection must be returned Freight Prepaid in the most economical way. Credit will be issued for material found to be defective upon Seller's inspection based on prices at time of purchase.

#### 6. PRODUCTS ORDERED IN ERROR

Products may be returned, provided that claim is made and Seller is notified within 7 days of receipt of Products, and the Products are in original buyer's possession not more than 30 days prior to return, subject to Seller's approval. If Products are accepted for return, they must be Freight Prepaid and buyer will be charged a minimum of 15% restocking charge, plus a charge back for outbound freight charges if the original order was shipped prepaid. Returns are not accepted for any Products that are specifically manufactured to meet the buyer's requirement of either specifications or quantity.

These Terms and Conditions constitute the entire agreement between Seller and Purchaser as it relates to terms and conditions of sale, and supersedes any and all prior oral or written agreements, correspondence, quotations or understandings heretofore in force between the parties relating to the subject matter hereof. There are no agreements between Seller and Purchaser with respect to the Product herein except those specifically set forth in and made part of these terms and conditions. Any additional terms, conditions and/or prices are rejected by Seller.

These terms and conditions may be modified, cancelled or rescinded only by a written agreement of both parties executed by their duly authorized agents.

USE ONLY GENUINE EDCO PARTS & ACCESSORIES For your own safety, the safety of others and the life of your machine. Equipment Development Company, Inc.



100 Thomas Johnson Drive, Frederick, MD 21702-4600 USA Phone: 800-638-3326 or 301-663-1600 • Fax: 800-447-3326 or 301-663-1607 Website: www.edcoinc.com • E-mail: sales@edcoinc.com

